

playmobil®

4152

WARNING:
CHOKING HAZARD - SMALL PARTS
Not for children under 3 years.

"Ne concerne que les USA"

Wichtige Unterlagen, bitte sorgfältig aufbewahren!
Important documents keep carefully!
Documents importants conservez avec soin!

 




30 20 7490



30 23 7050

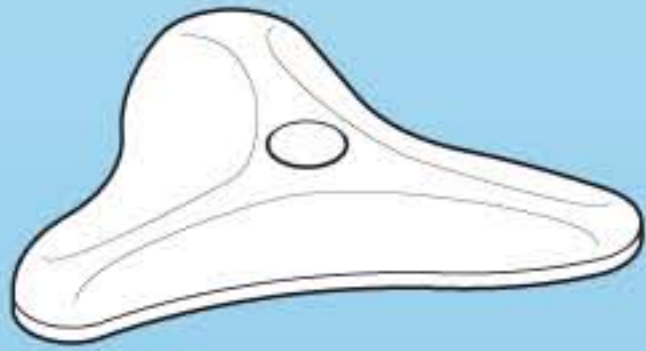

30 26 1680



 
30 66 4680




30 66 5950



30 14 2850

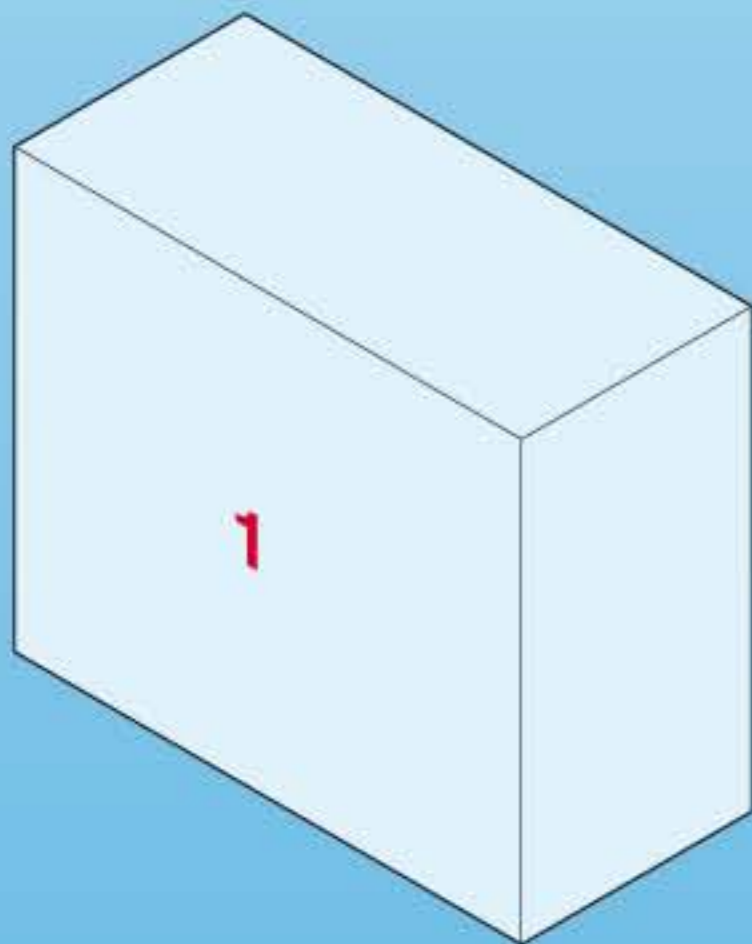


30 88 2672

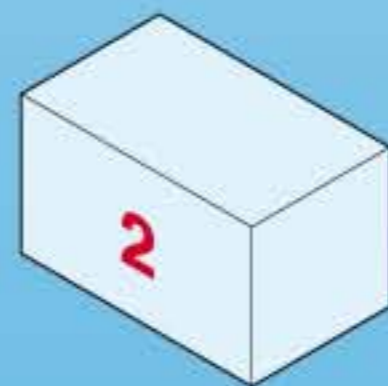 

30 88 2682



 30 88 2692

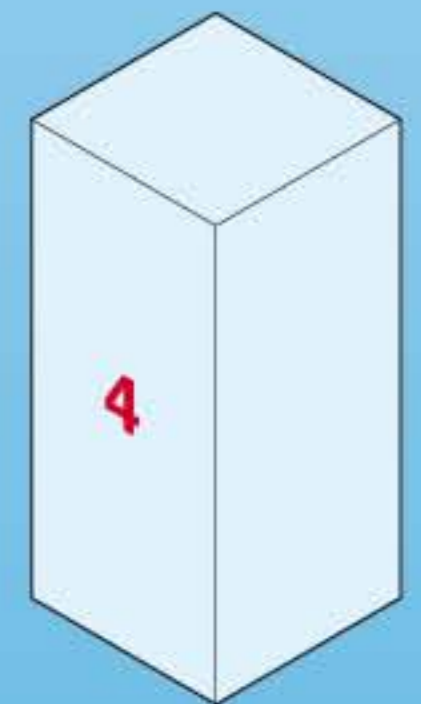

30 88 2702

 


30 26 1860




30 03 4640

1

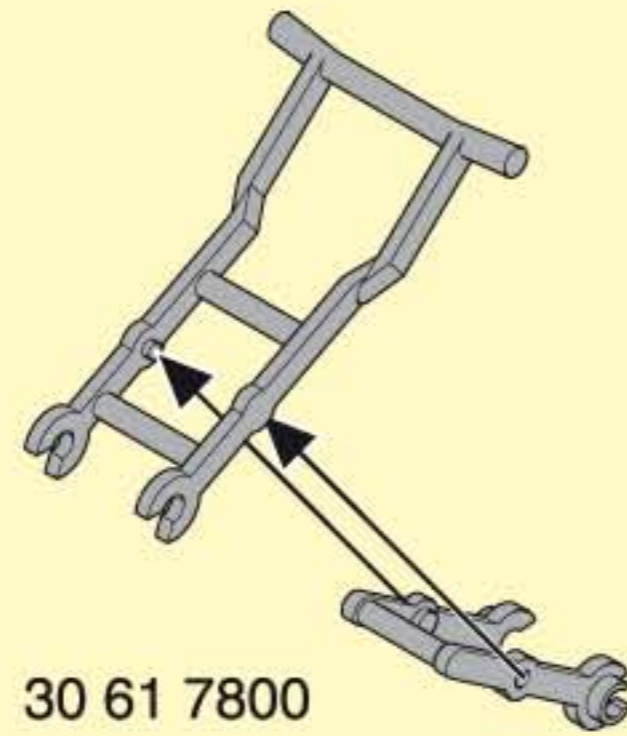

30 61 7800

 2

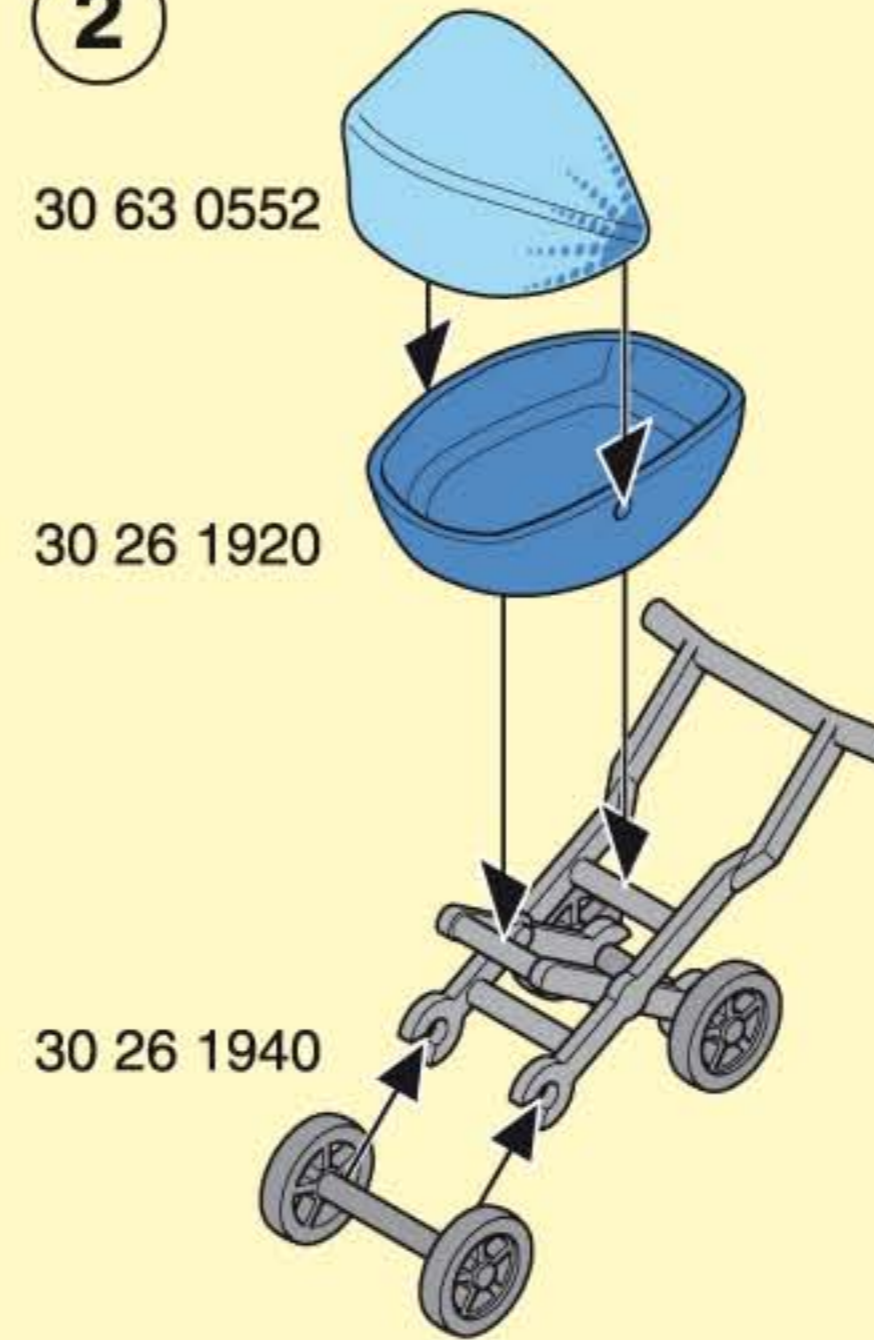

30 63 0552

30 26 1920

 
30 26 1940




30 12 0280



30 88 2712

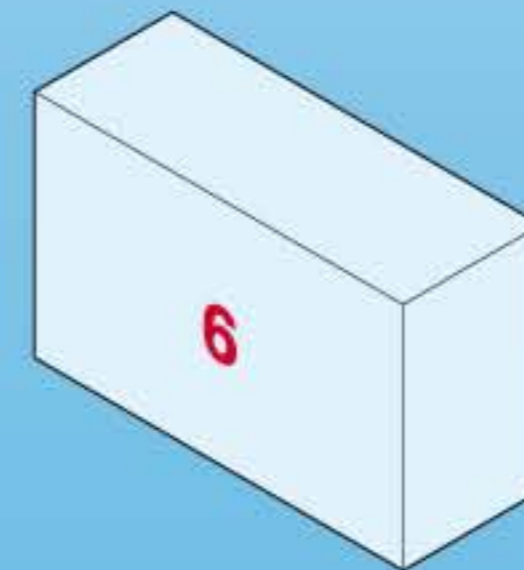

30 88 2722

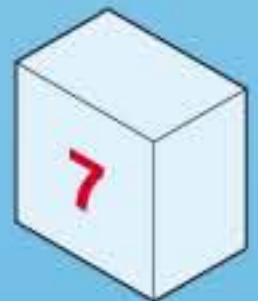 

30 88 2732



30 26 1930

 


30 26 9530

30 06 7290



30 66 0770

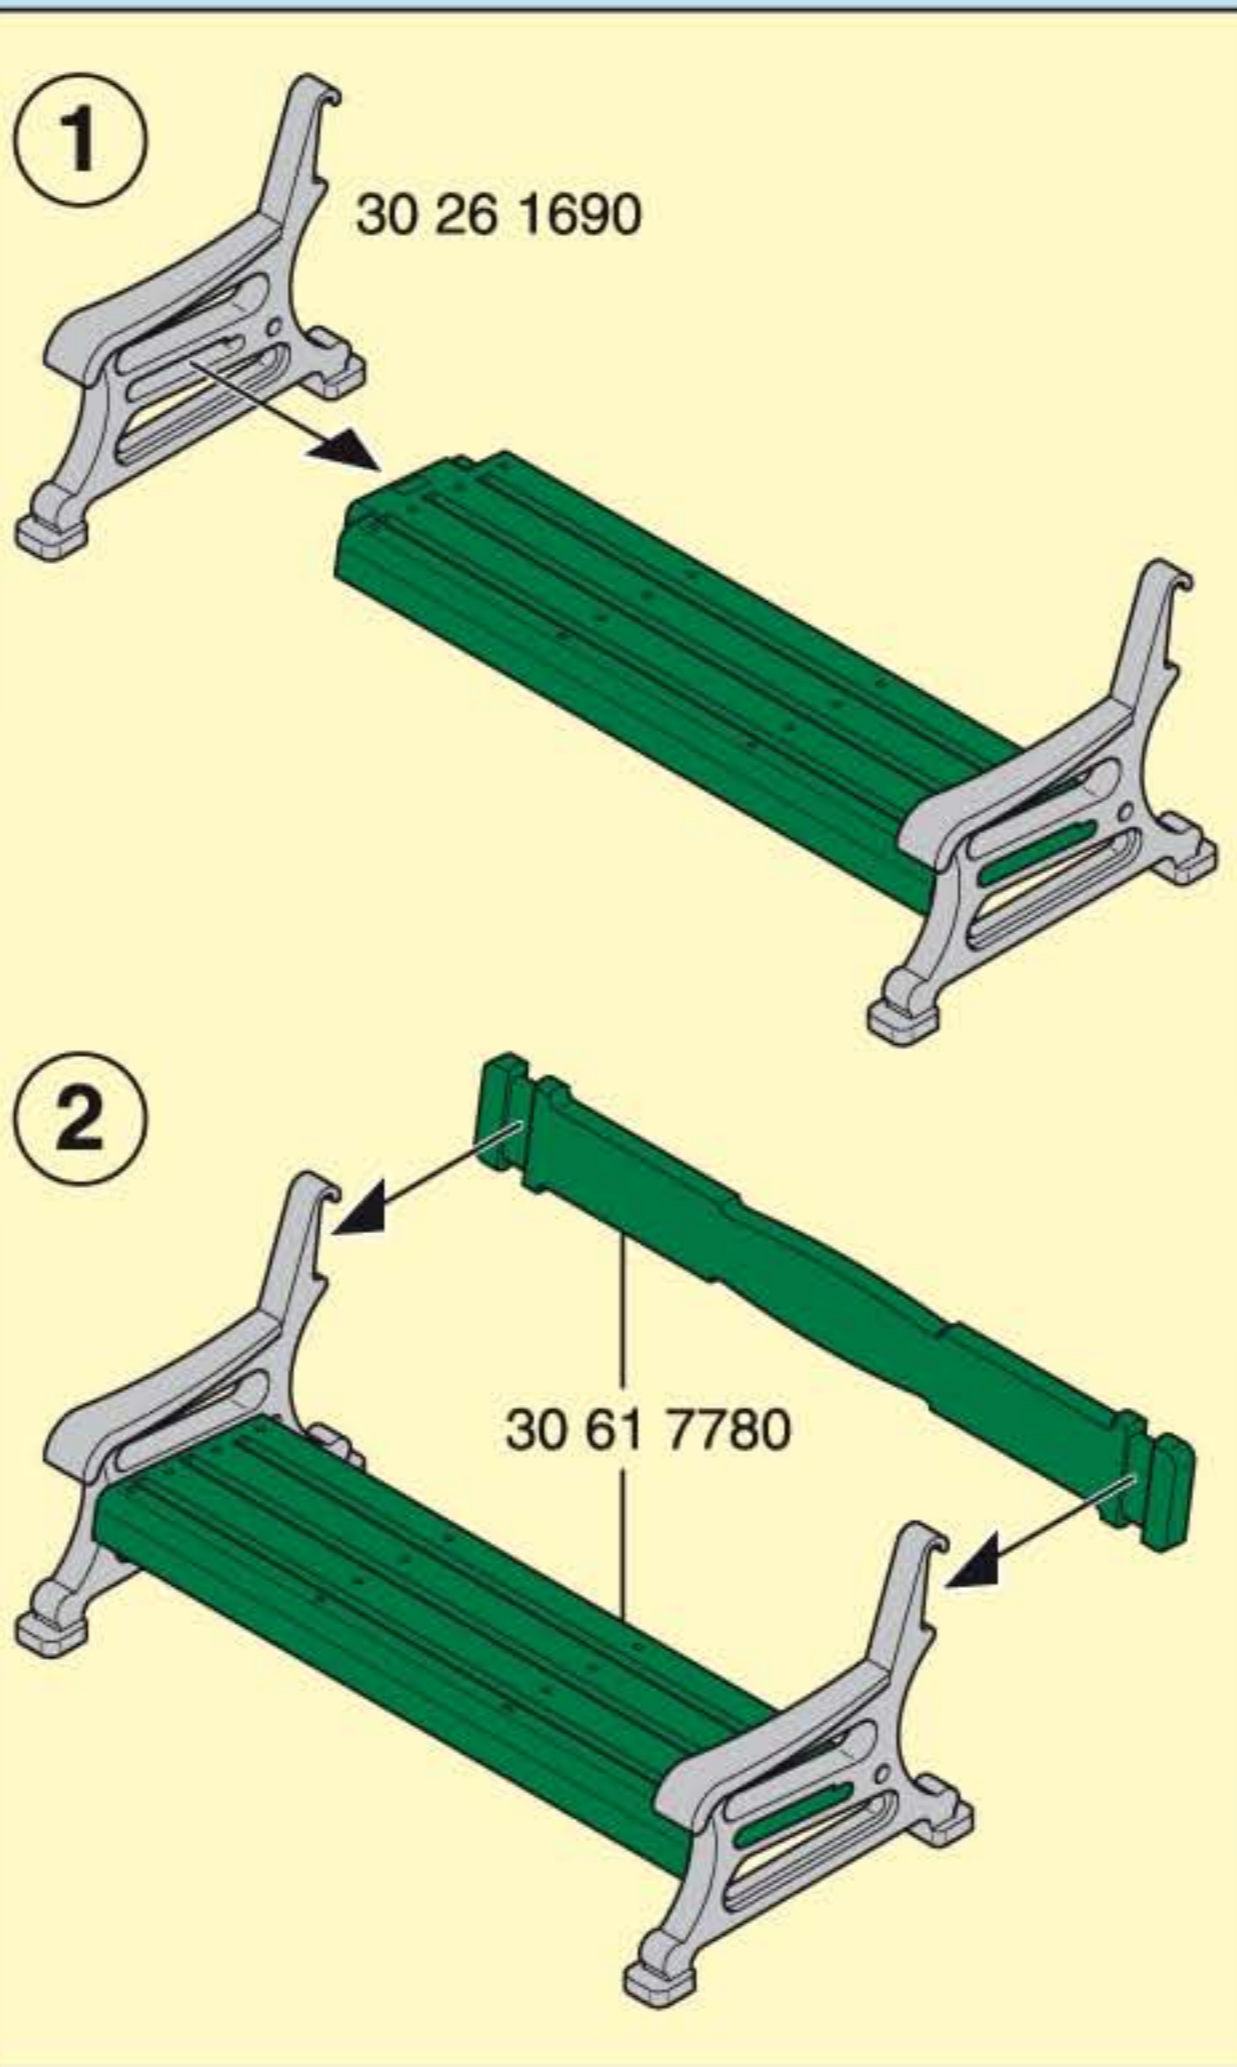

30 26 1700



30 26 1710



30 26 1720



30 26 0380



 
30 23 5810



30 88 2742



30 88 2752

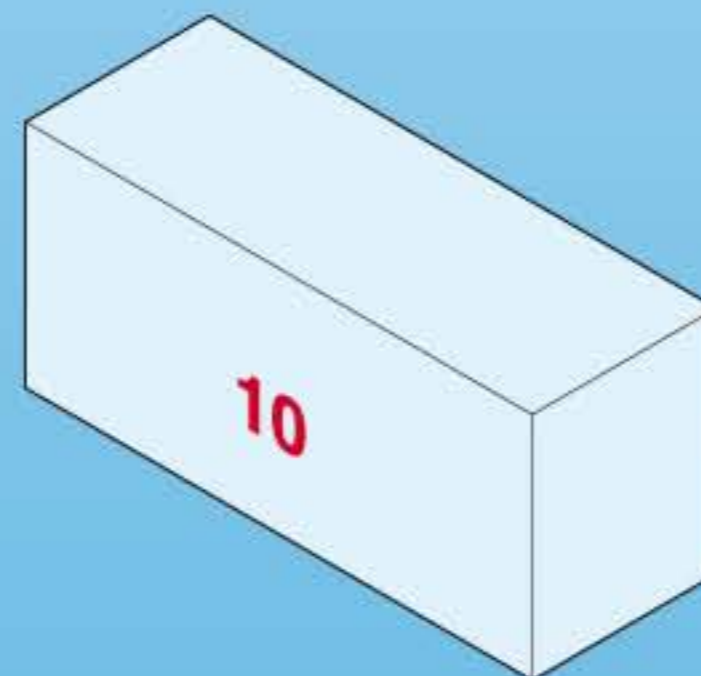


30 88 2762




30 88 2772



 30 20 5260

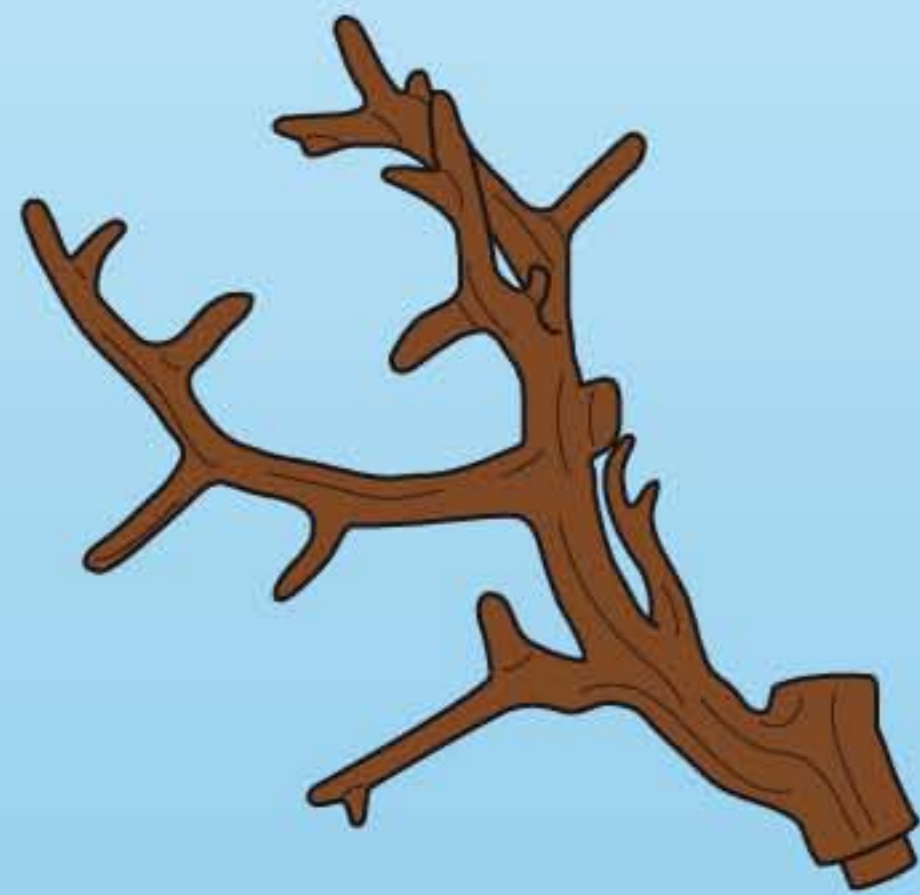

30 20 7490

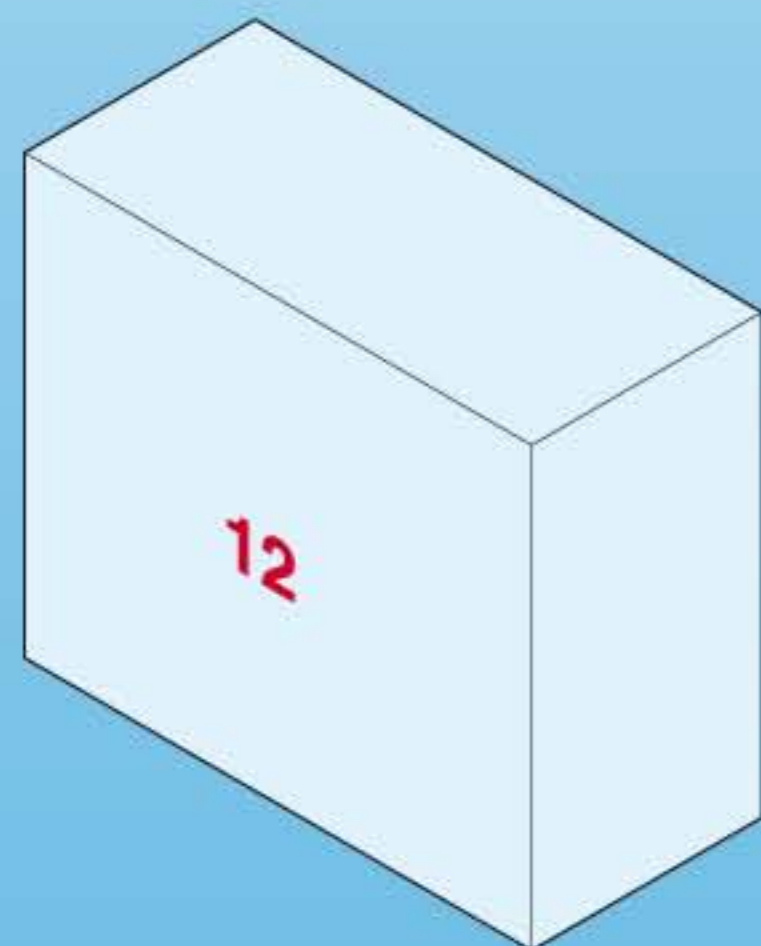 

30 88 2782



 
30 83 0450



30 26 1720



30 88 2792

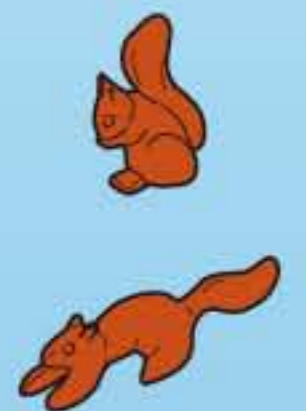

30 51 3880



30 26 1720



30 88 2802

30 08 0750



30 06 2370



30 23 5800



30 26 1730



30 26 1840



 
30 10 1560



30 25 1460



30 26 0570

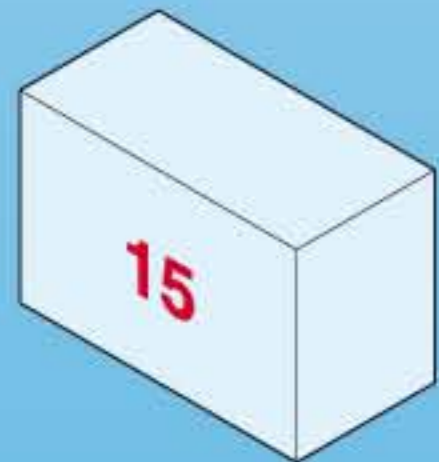




30 88 2812



30 88 2822



   30 88 2832

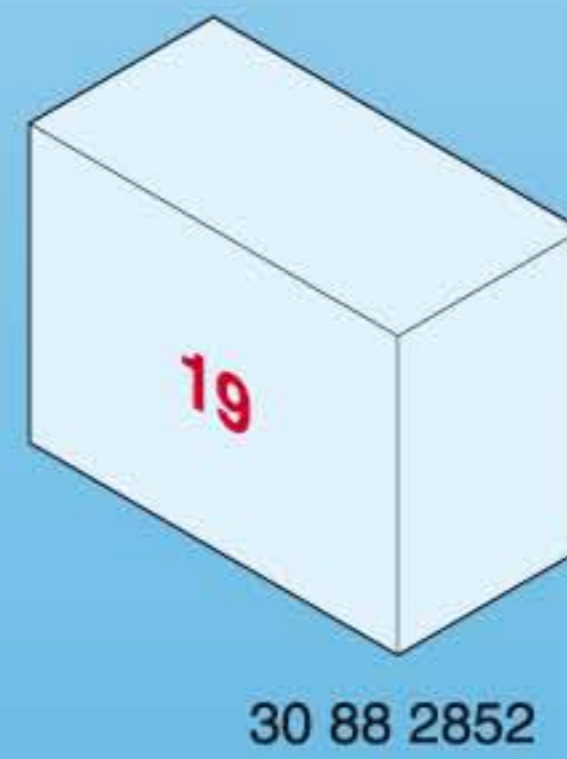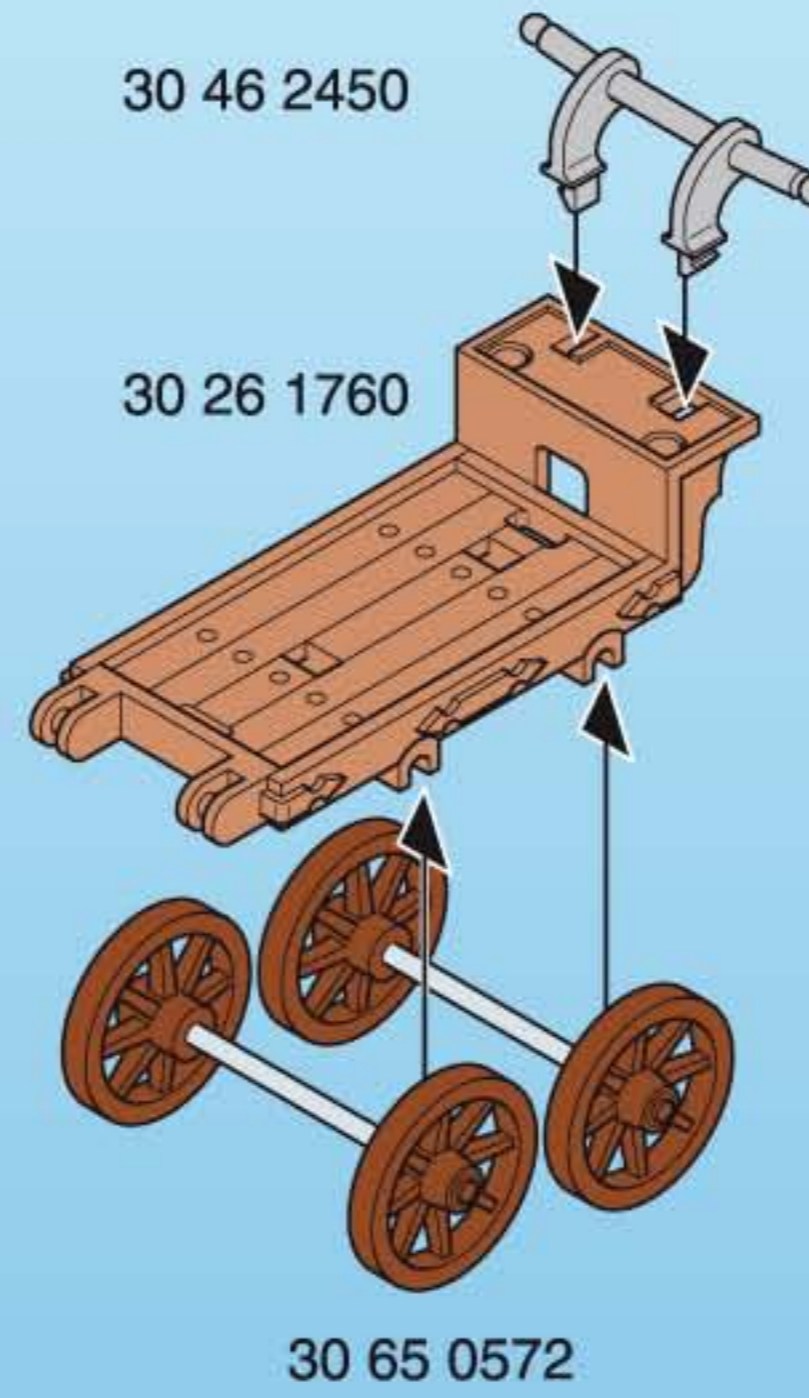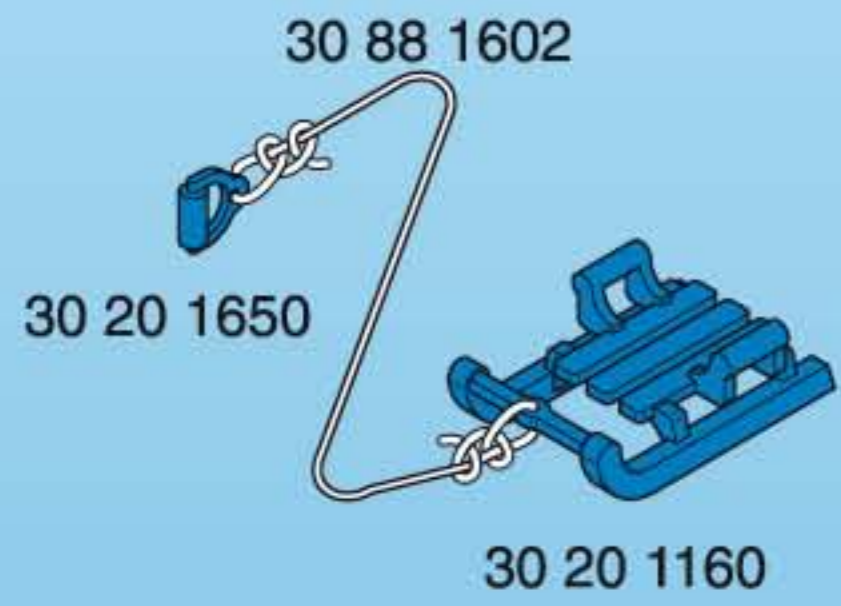



30 26 1850



30 26 1870



30 06 5030

30 22 8600



30 22 8610

30 22 8600



30 22 8640

30 22 7770



2x 30 22 7700



 
30 13 0650




30 88 2872




30 88 2882

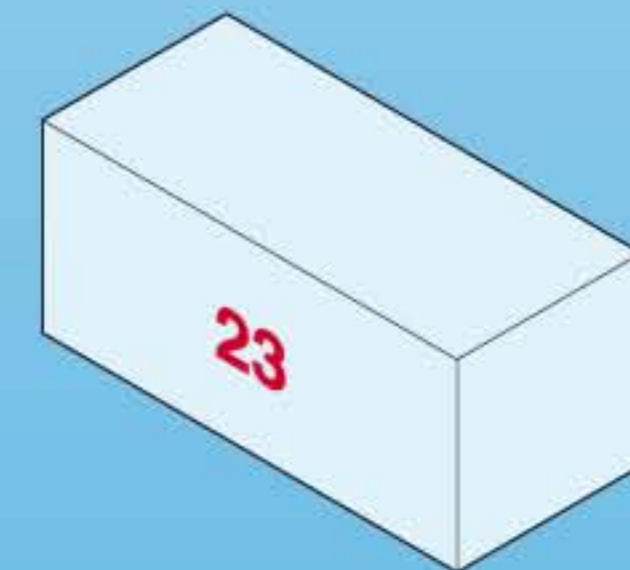

30 88 2892

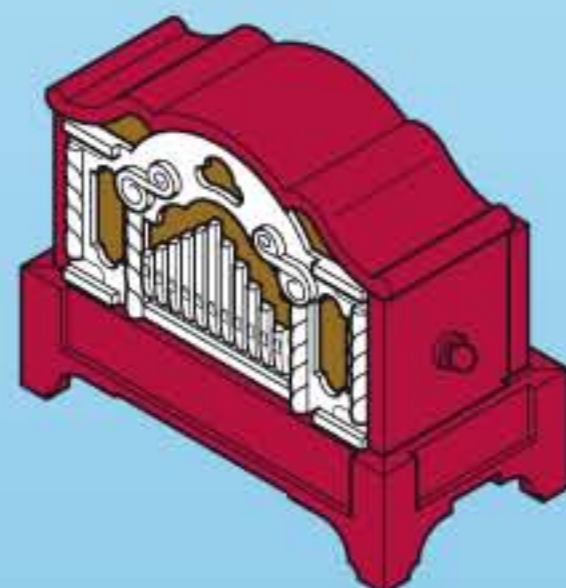 

30 65 5352

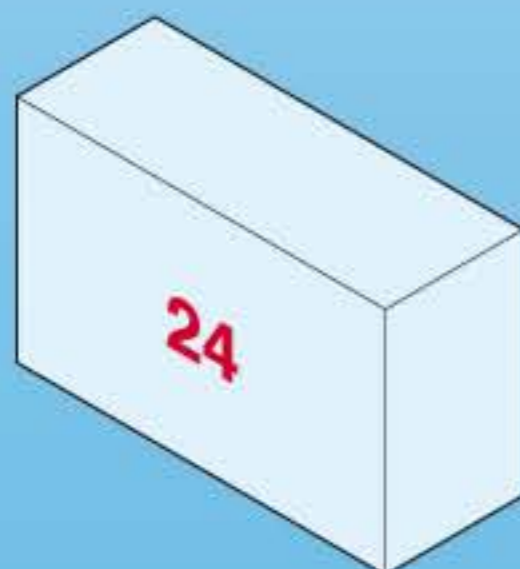 

30 88 2902


(D)	(A)	(CH)	(L)	(B)	Batteriebetriebenes Spielzeug mit nicht austauschbaren Batterien.
(USA)	(GB)	(CDN)	(M)	(IRL)	Battery operated toy with non-replaceable batteries.
(F)	(CDN)	(B)	(L)	(CH)	Jouet à piles avec piles non remplaçables
(E)	(MEX)				El juguete funciona con baterías no intercambiables.
(NL)	(B)				Werkt op batterijen, batterijen zijn niet vervangbaar.
(I)	(CH)				Giocattolo funzionante a batteria con pile non sostituibili
(P)					O brinquedo funciona com baterias não intercambiáveis.
(DK)					Batteridrevet legetøj med ikke-genopladelige batterier.
(N)					Batteridrevet med ikke utskiftbare batterier.
(S)	(FIN)				Batteridreven leksak försedd med icke utbytbara batterier.
(FIN)					Toimii paristoilla. Paristot ei-vaihdettavia.
(H)					Elemmel működő játék, melyben az elemek nem cserélhetők!
(CZ)					Hračka na baterie s nevyměnitelnou baterií.
(EST)					Mittevahetatavate patareidega patareide abil töötav mänguasi.
(LV)					Ar baterijām darbināma rotaļlieta ar nemaināmām baterijām.
(LT)					Baterijų varomas žaislas su nekeičiamomis baterijomis.
(SLO)					Igrača na nezamenljive baterije
(SK)					Hračka na batérie s nevymeniteľnými batériami.
(PL)					Zabawka z niewymienialnymi bateriami.
(TR)	(CY)				Pilleri değiştirilemeyen pilli oyuncak.
(GR)	(CY)				Παιχνίδι μπαταρίας με μπαταρίες που δεν αντικαθίστανται.
(CN)					装有不可替换电池的电池驱动玩具

30 88 1622




1

 
30 88 1612

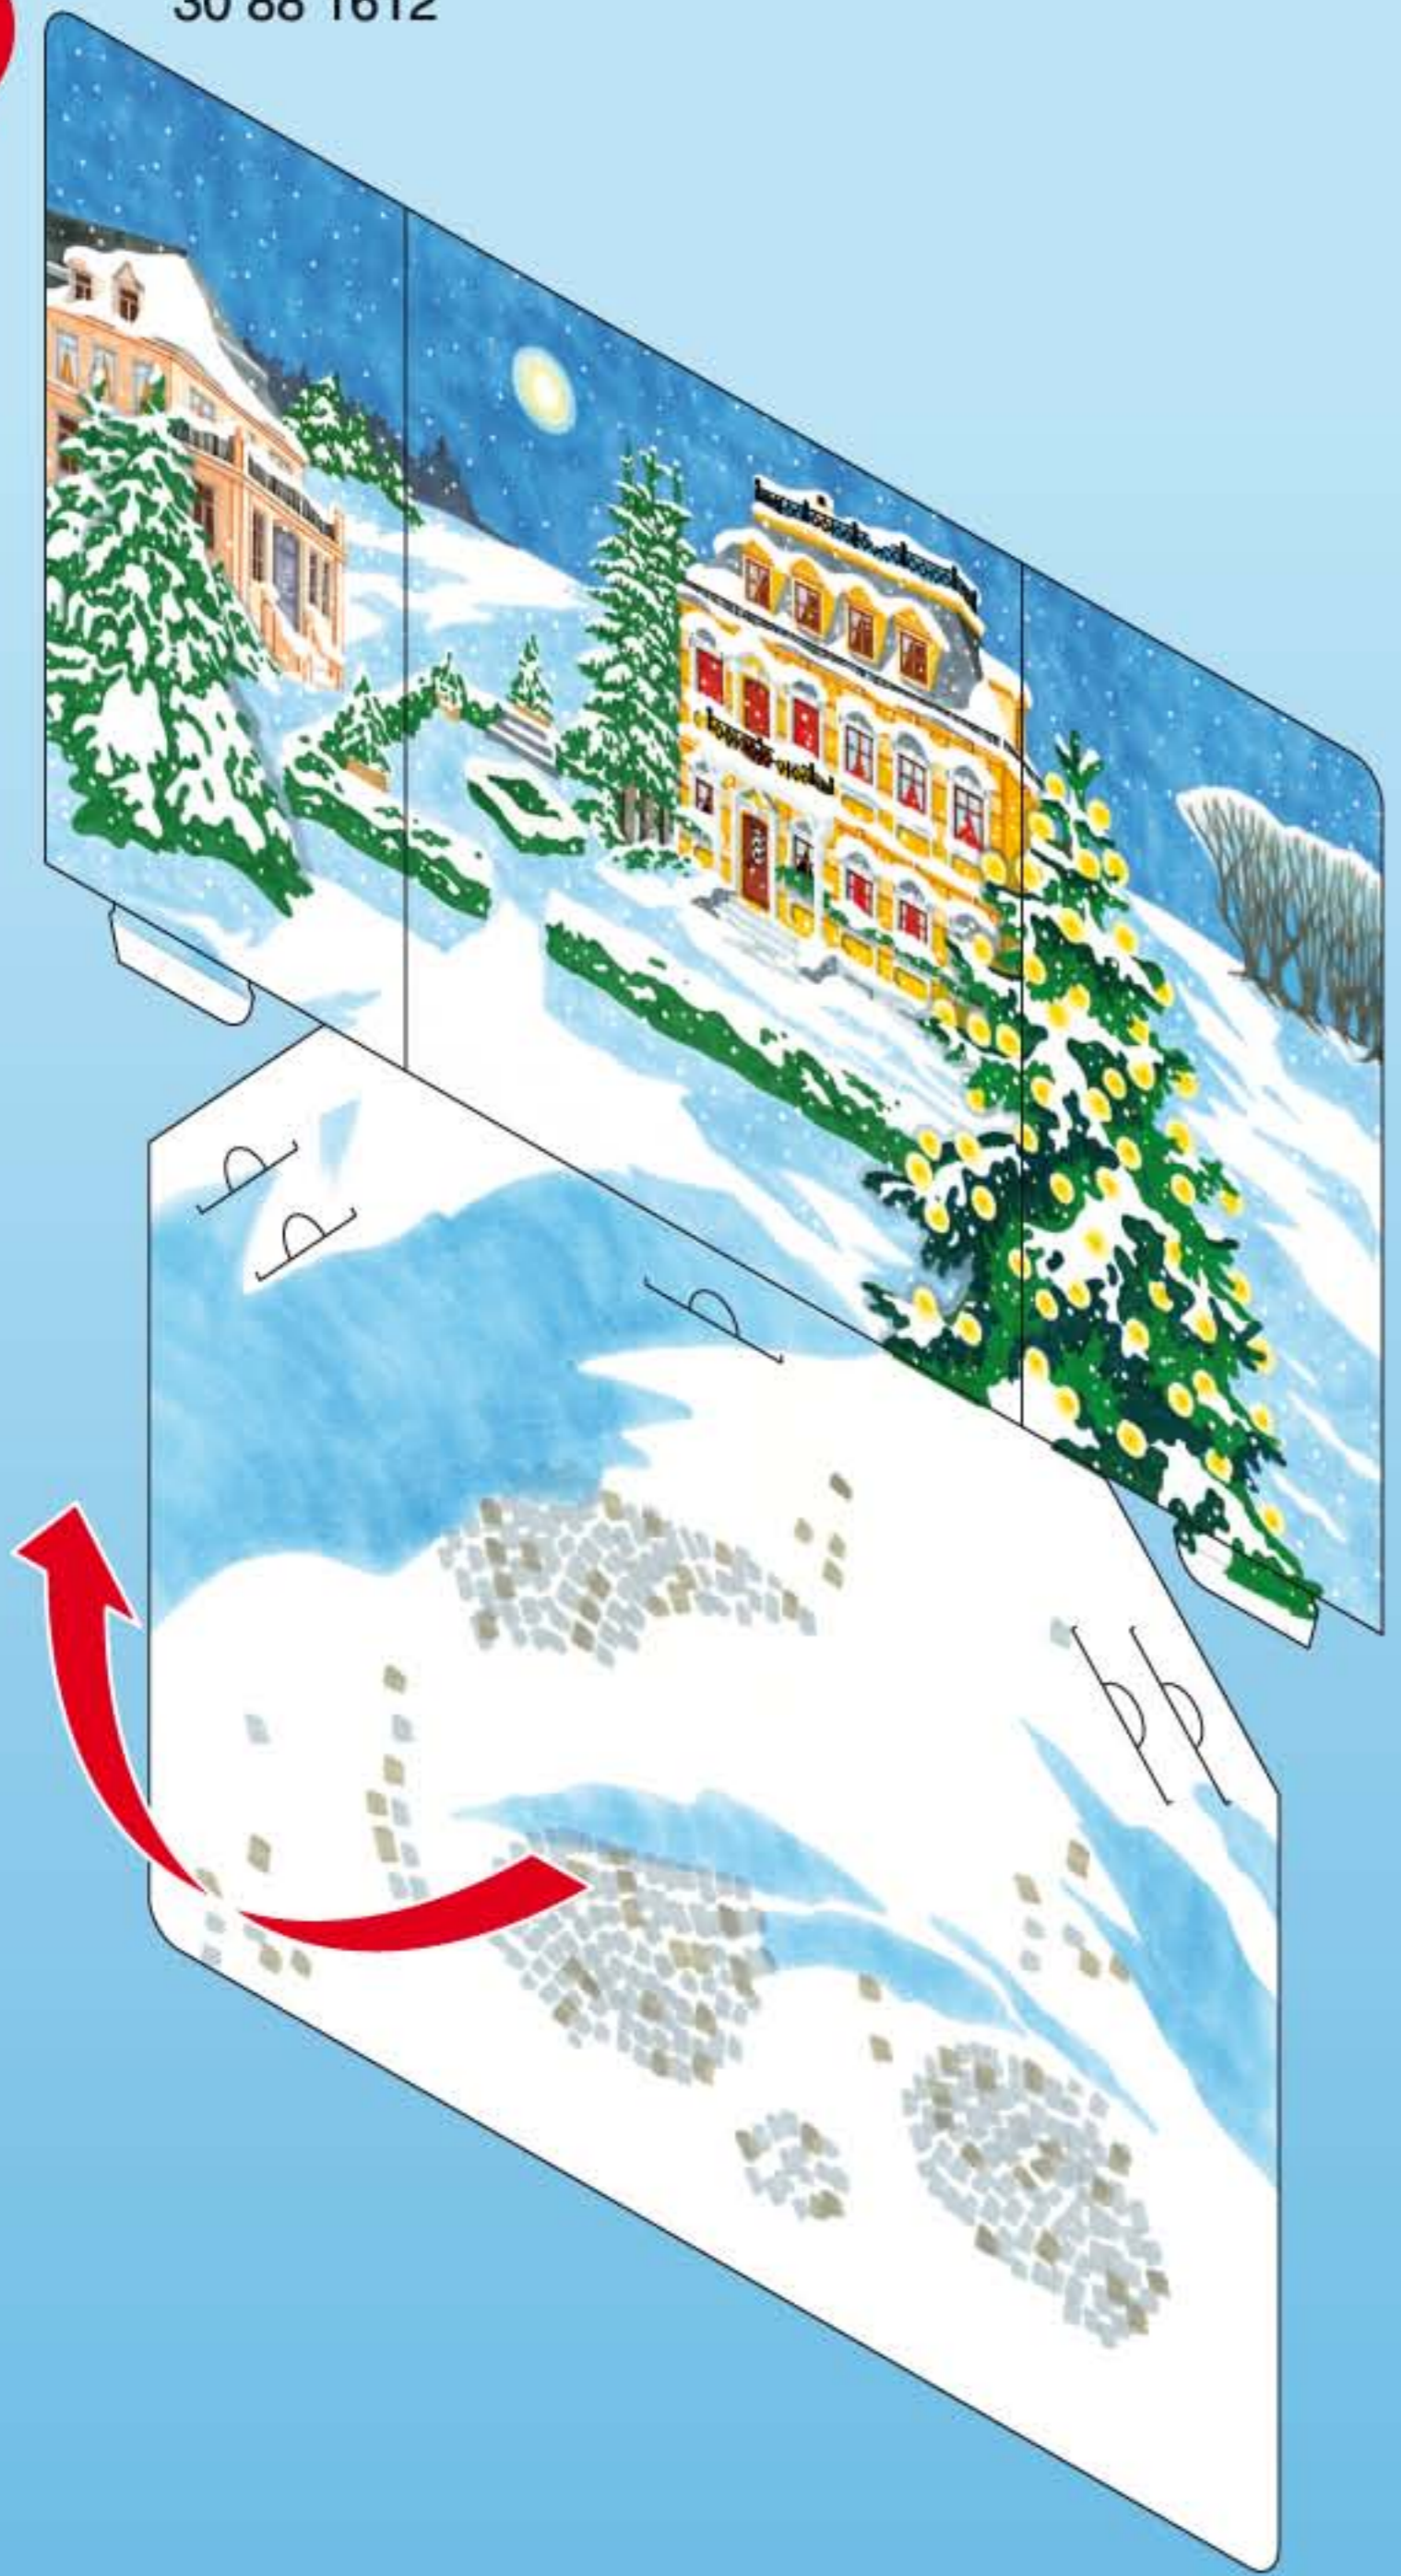

2

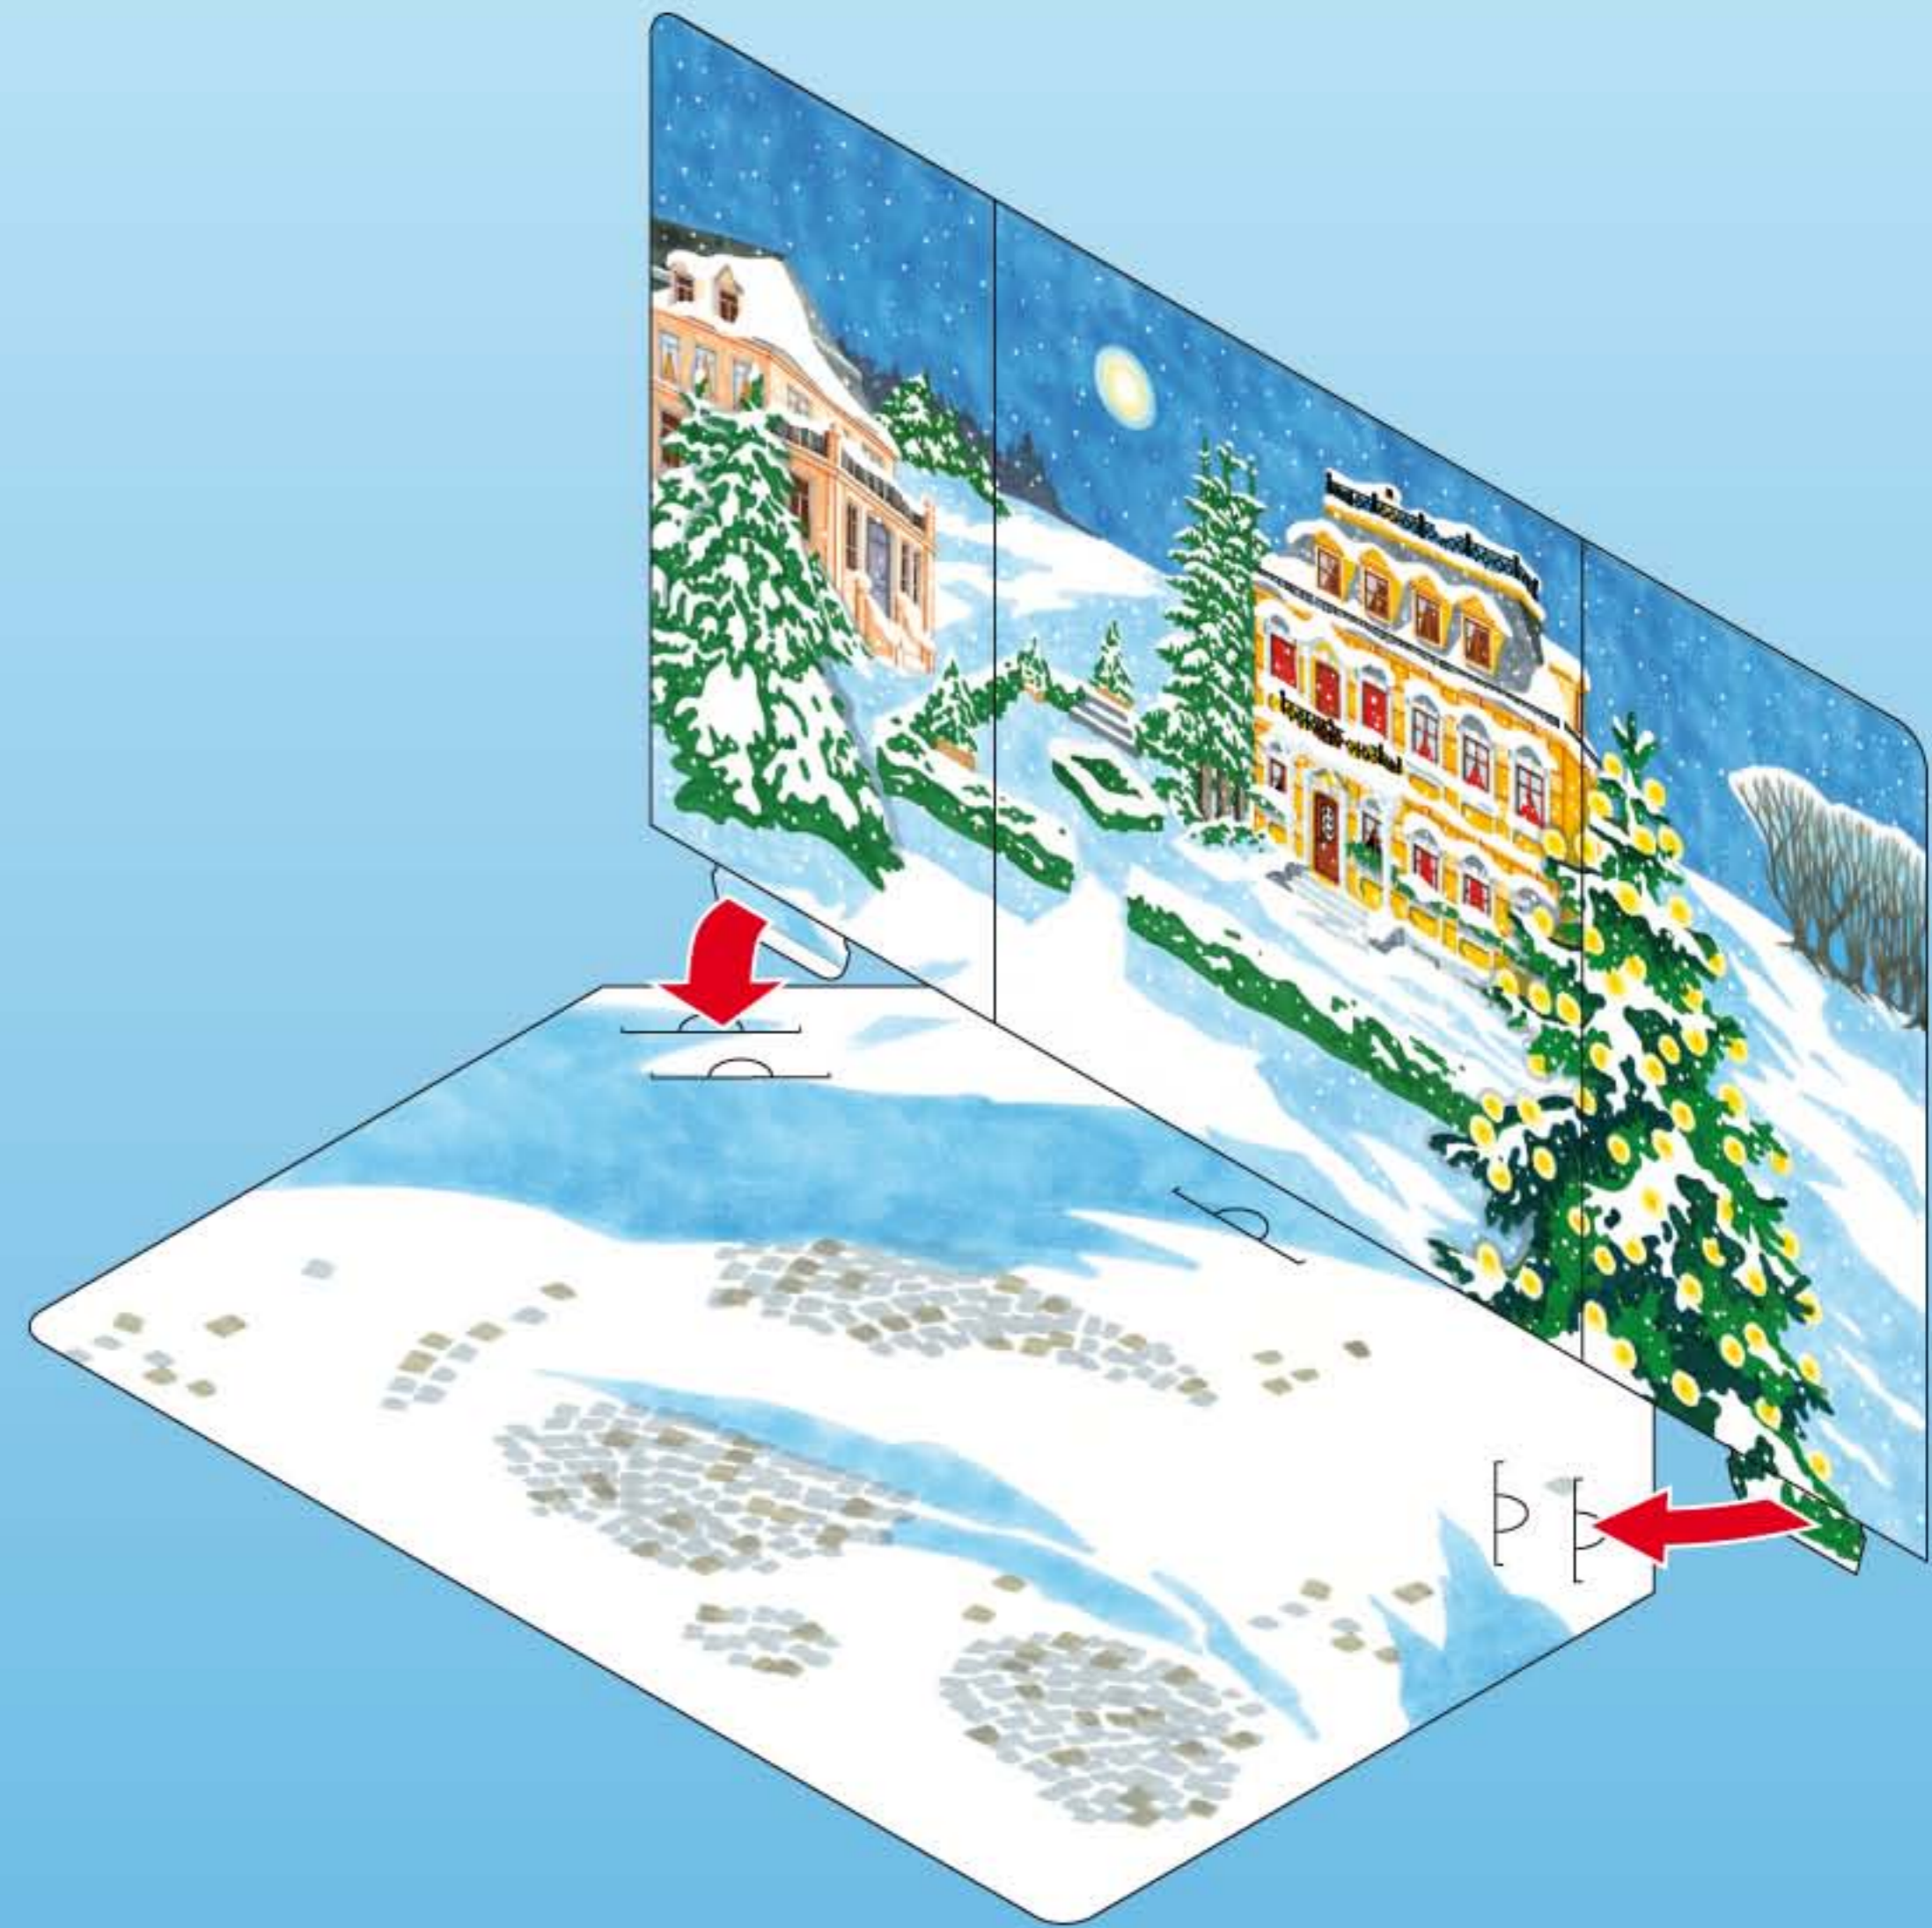 

3

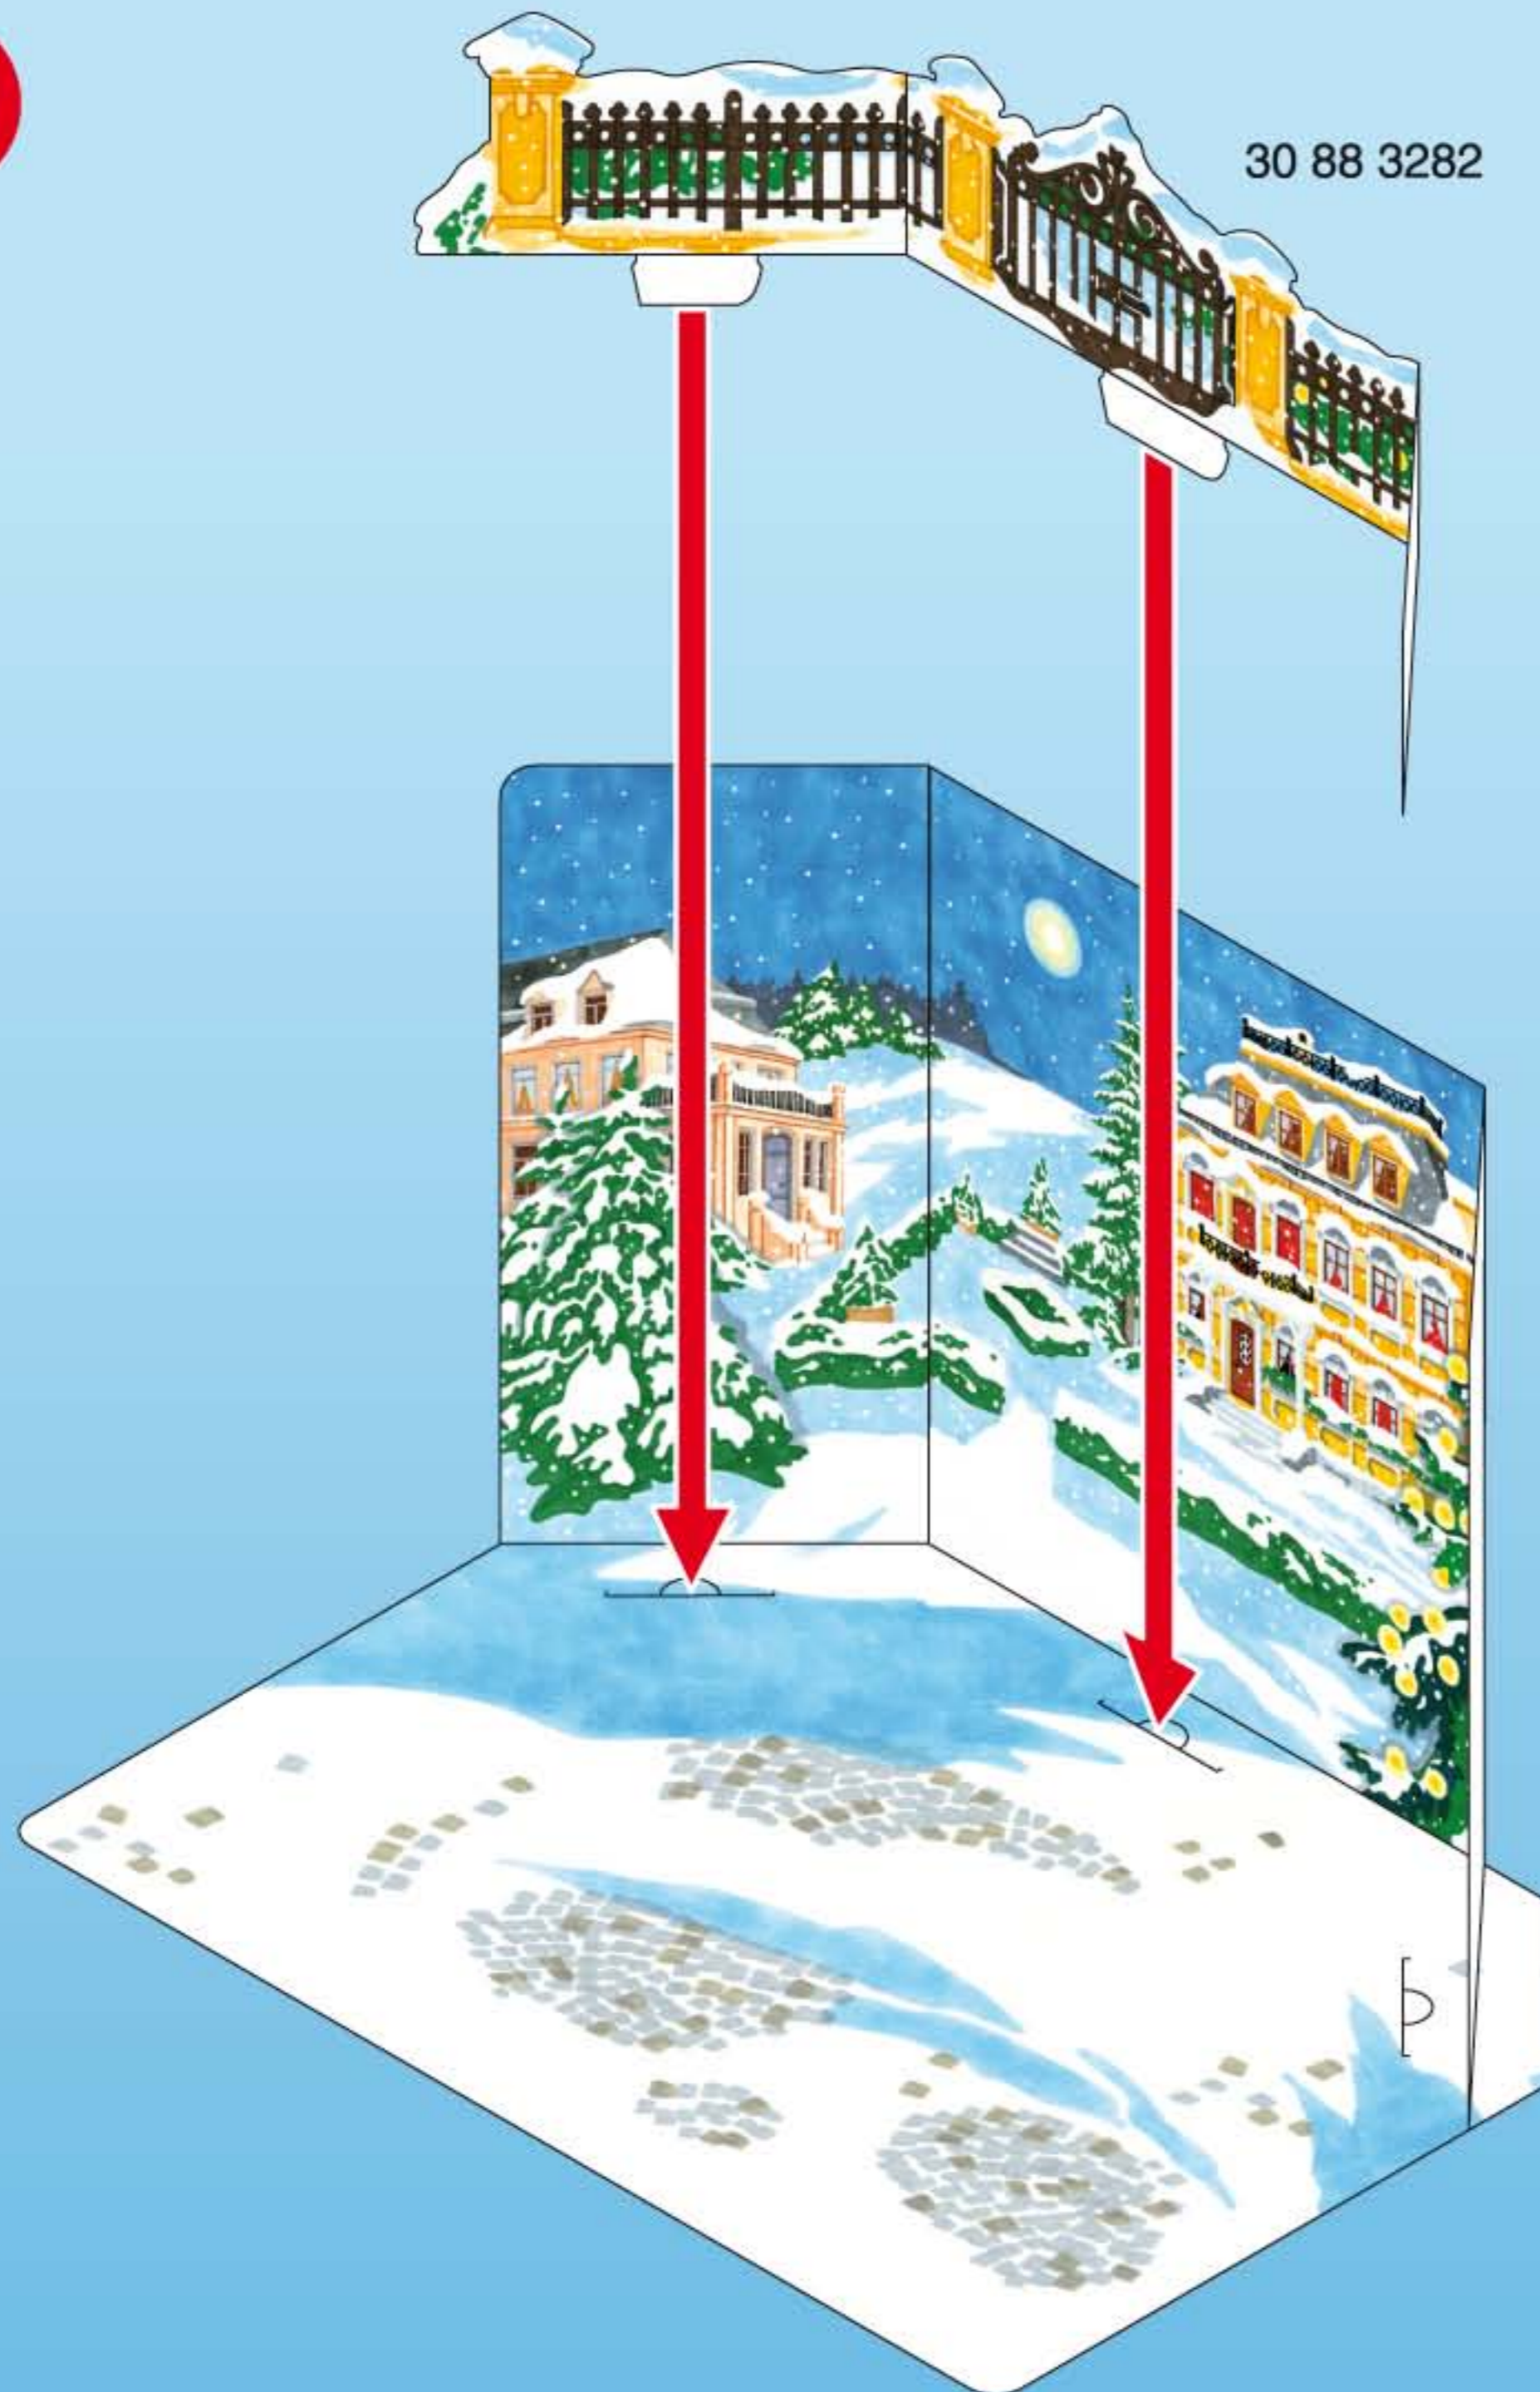 

Serviceadressen finden Sie in allen Playmobil-Prospekten

Addresses of Customer Service Departments are shown in all Playmobil catalogues

L'adresse du service consommateurs est indiquée dans tous les catalogues Playmobil

Troverete gli indirizzi dei centri di assistenza in tutti i cataloghi Playmobil

In alle PLAYMOBIL catalogi vindt u het adres van onze klantendienst.

Las Direcciones de los Departamentos de Servicio al Consumidor se encuentran en todos los catálogos Playmobil

Η διεύθυνση του Γραφείου Εξυπηρέτησεως Πελατών είναι καταχωρημένη σε όλους τους καταλόγους Playmobil

pronounce: plāy-mō-bēēl