

playmobil®
4482

 
⚠ WARNING:
CHOKING HAZARD - SMALL PARTS
Not for children under 3 years.

"Ne concerne que les USA"



Wichtige Unterlagen, bitte sorgfältig aufbewahren !
Important documents keep carefully !
Documents importants conservez avec soin !





1

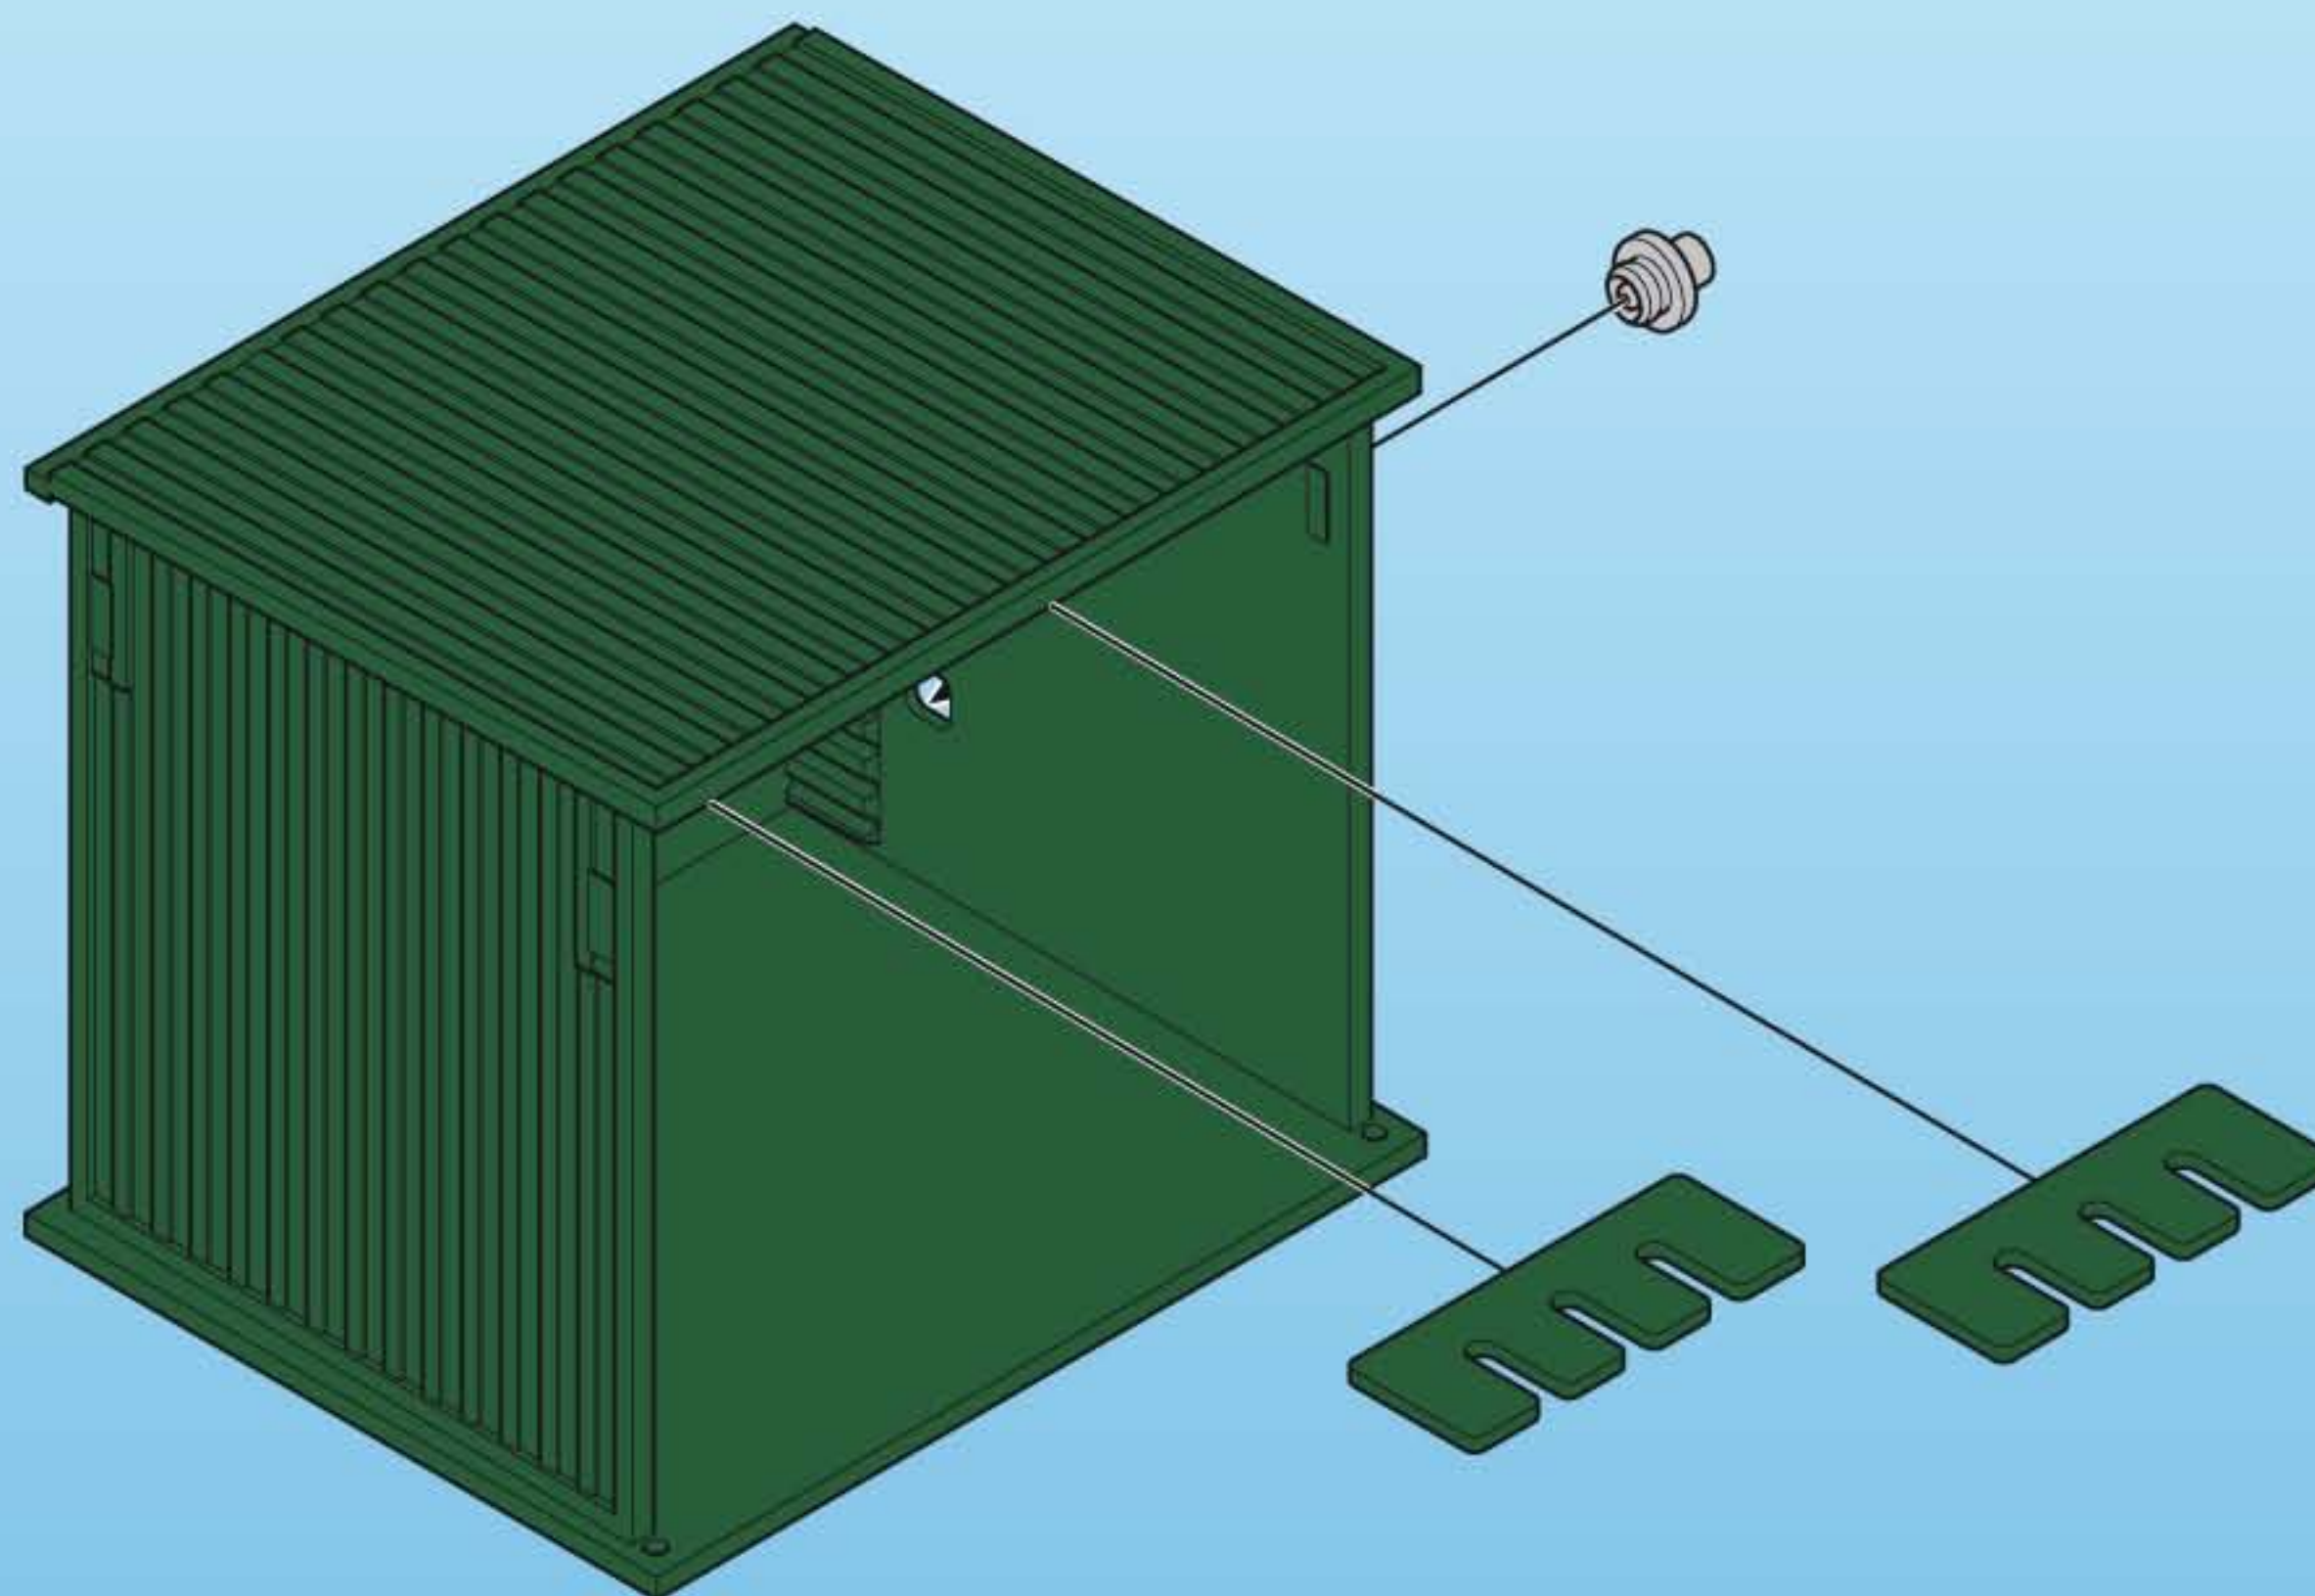


2

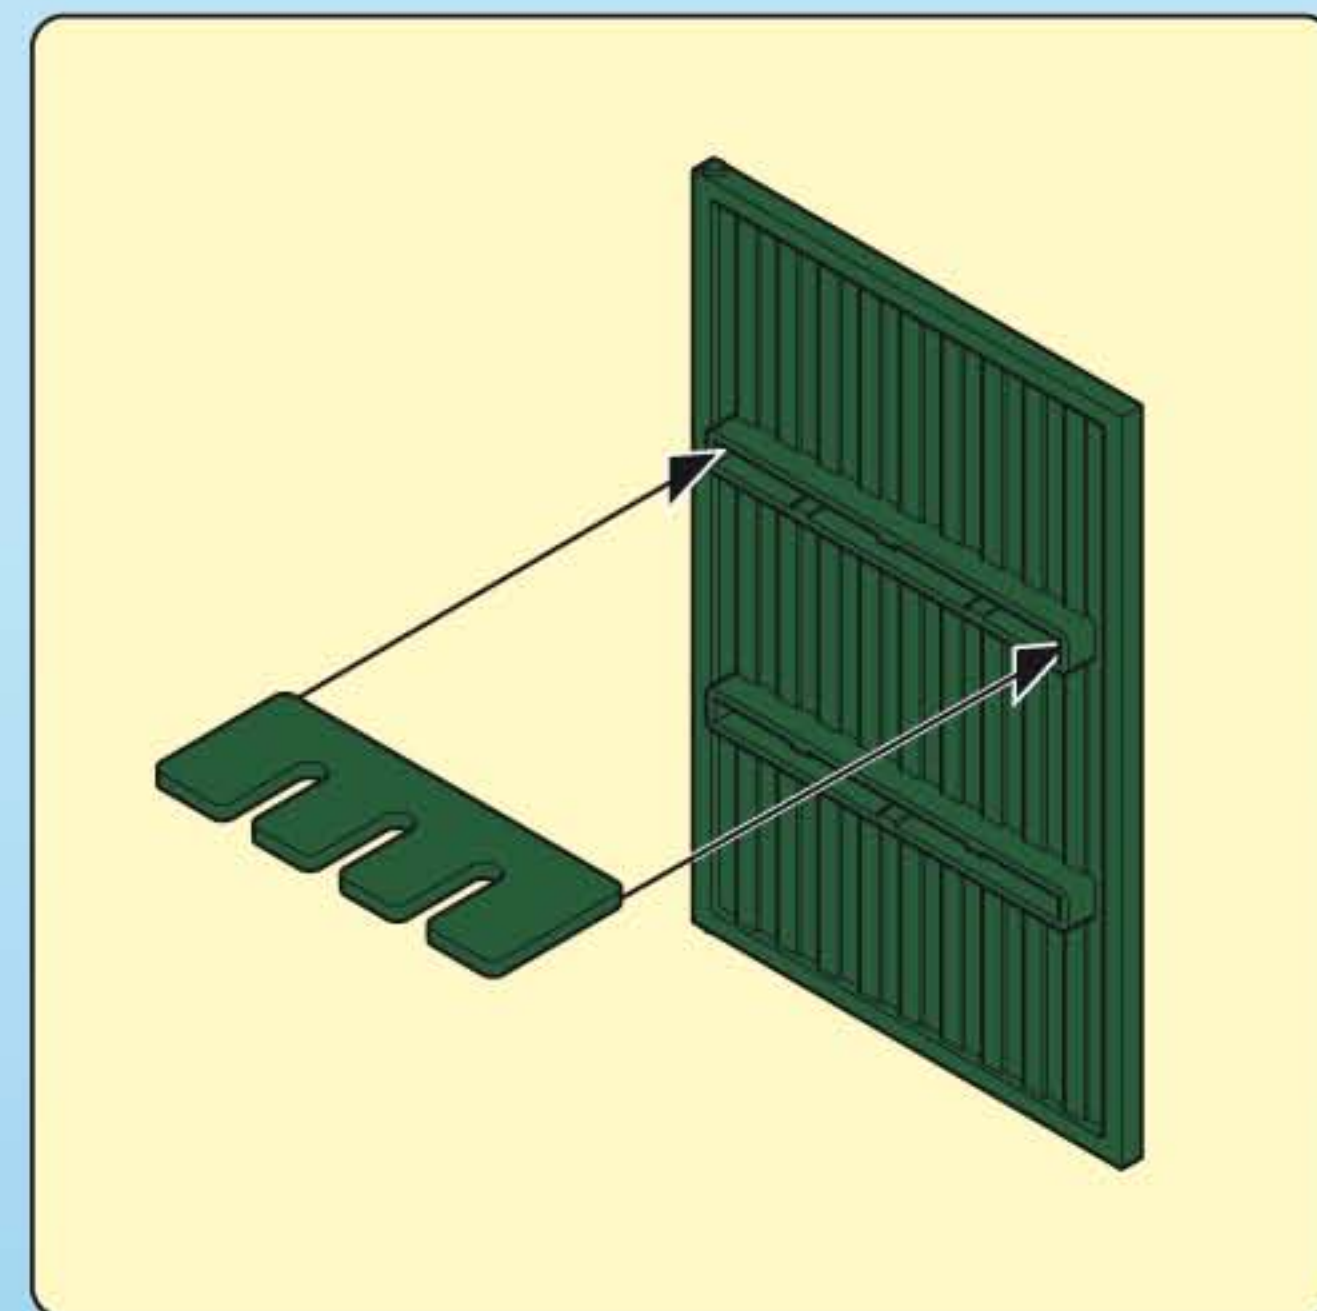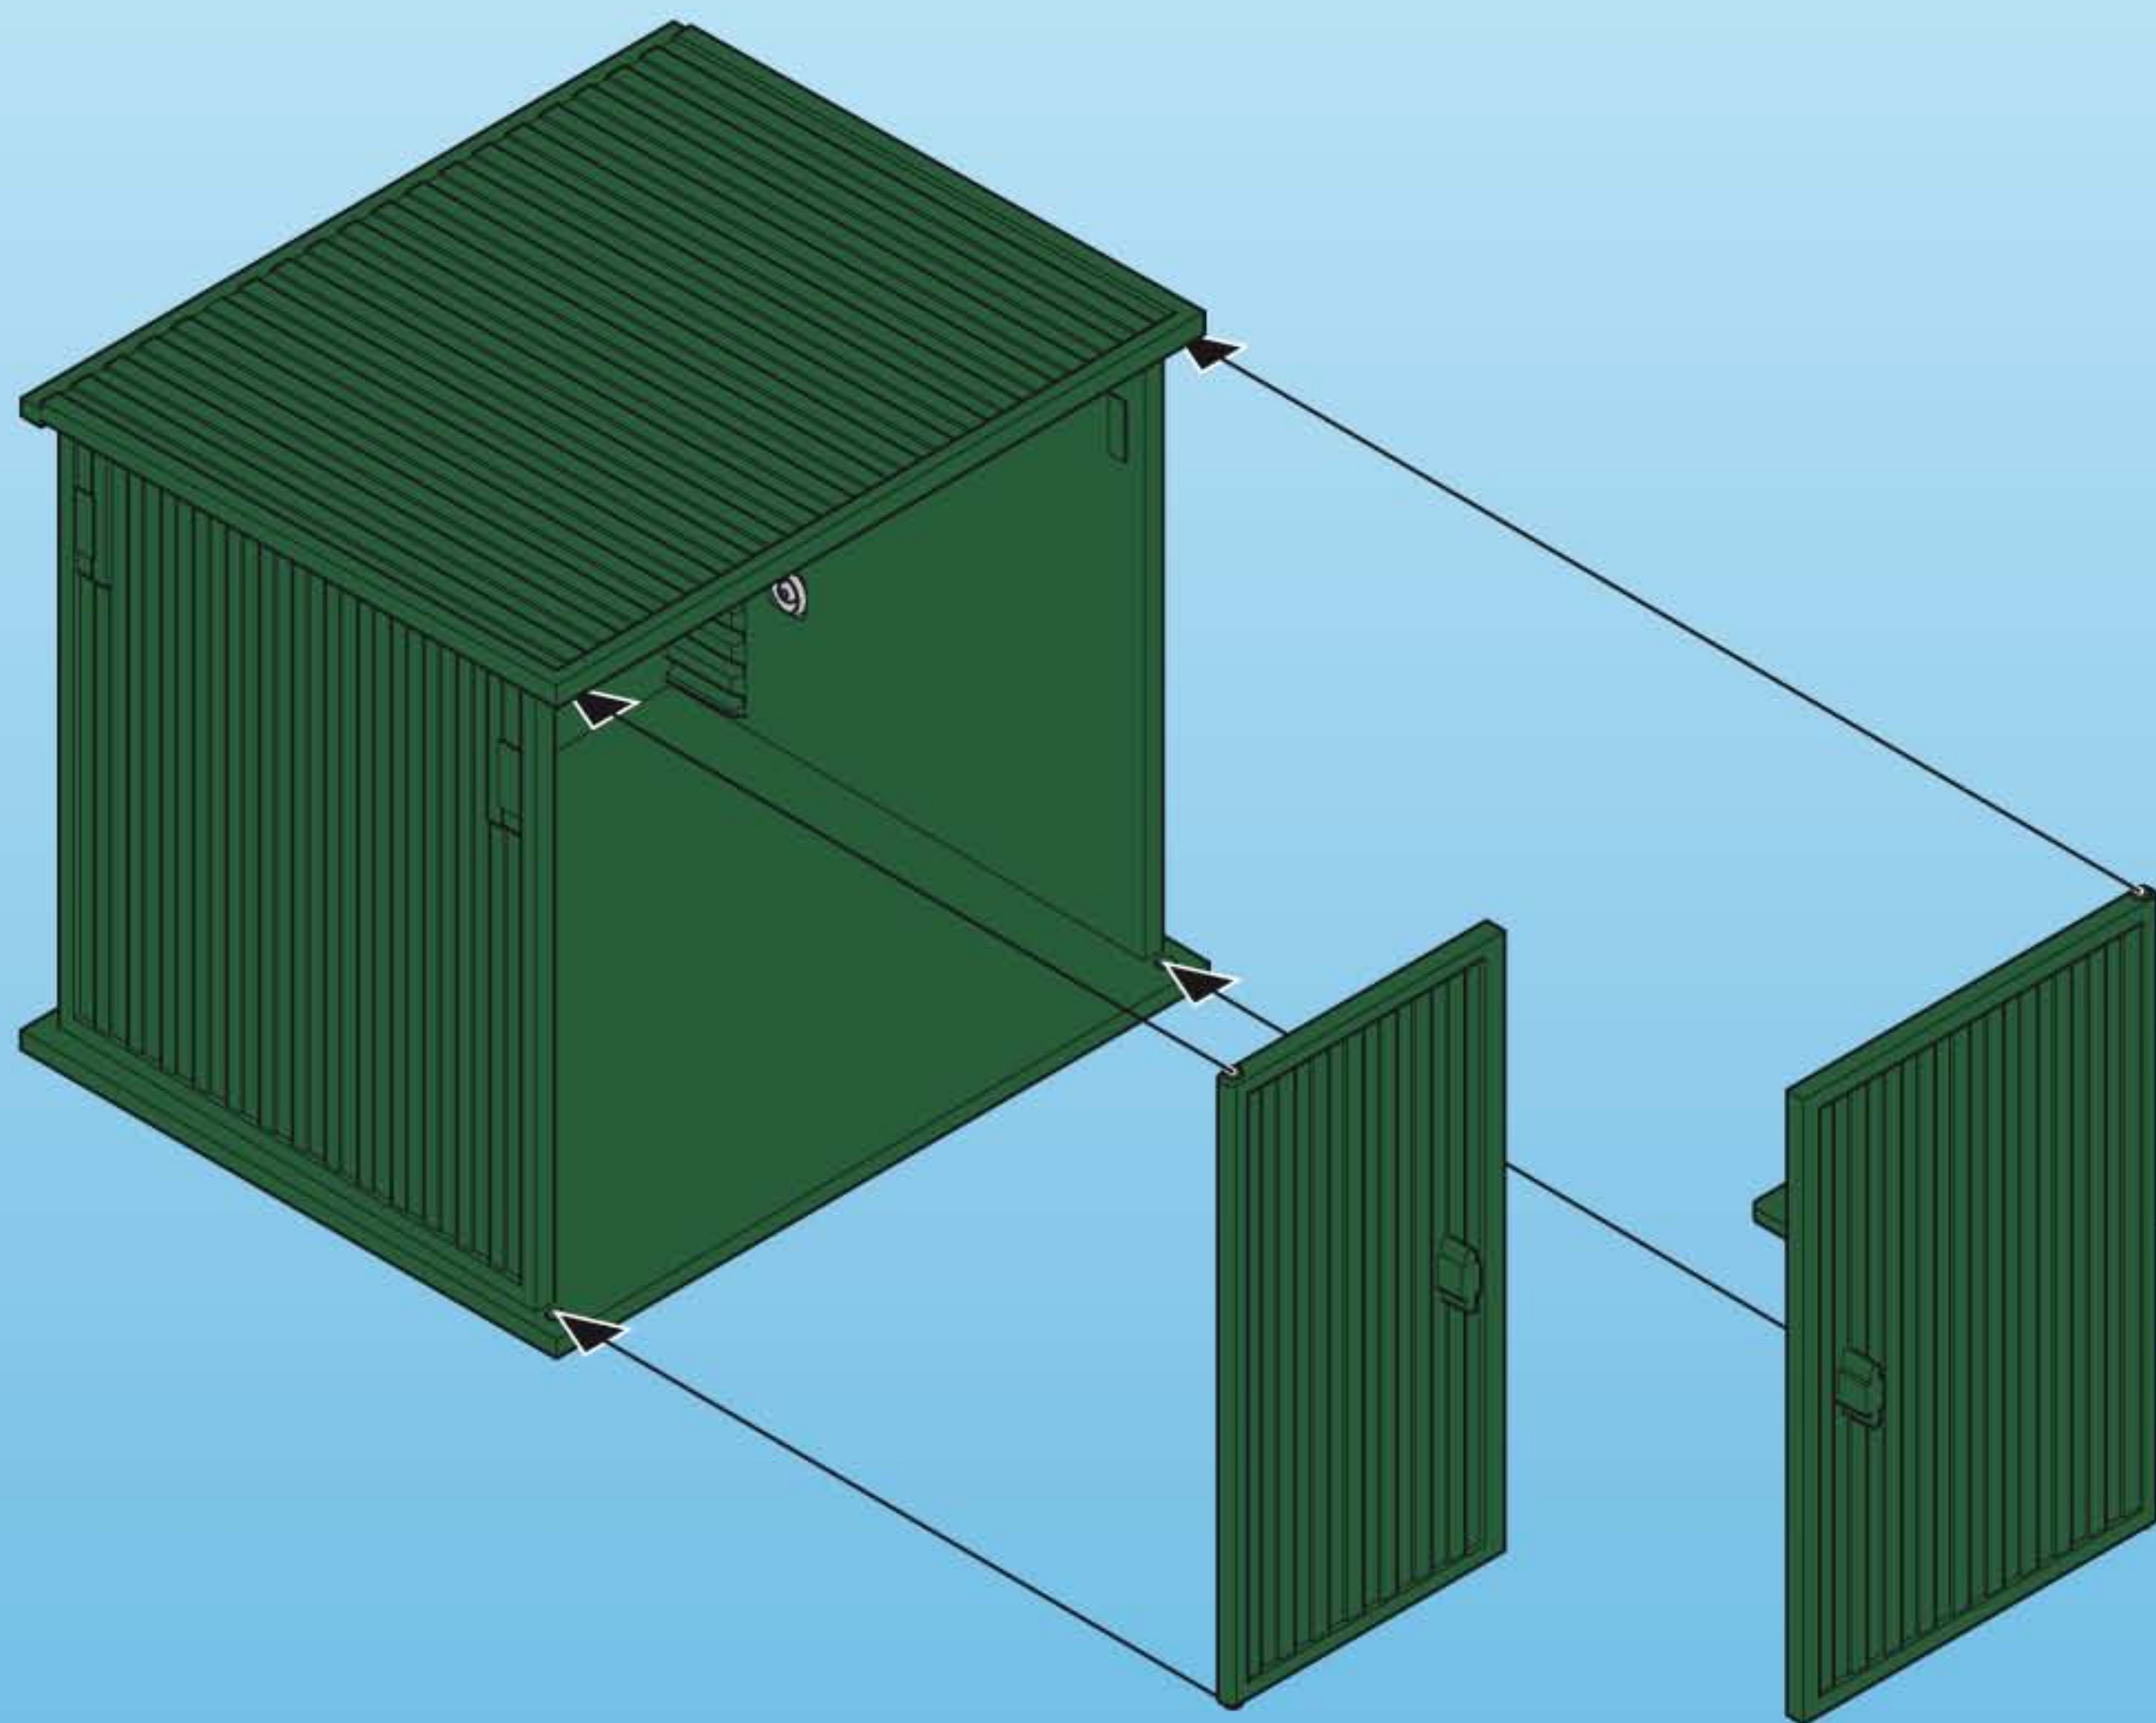  



3

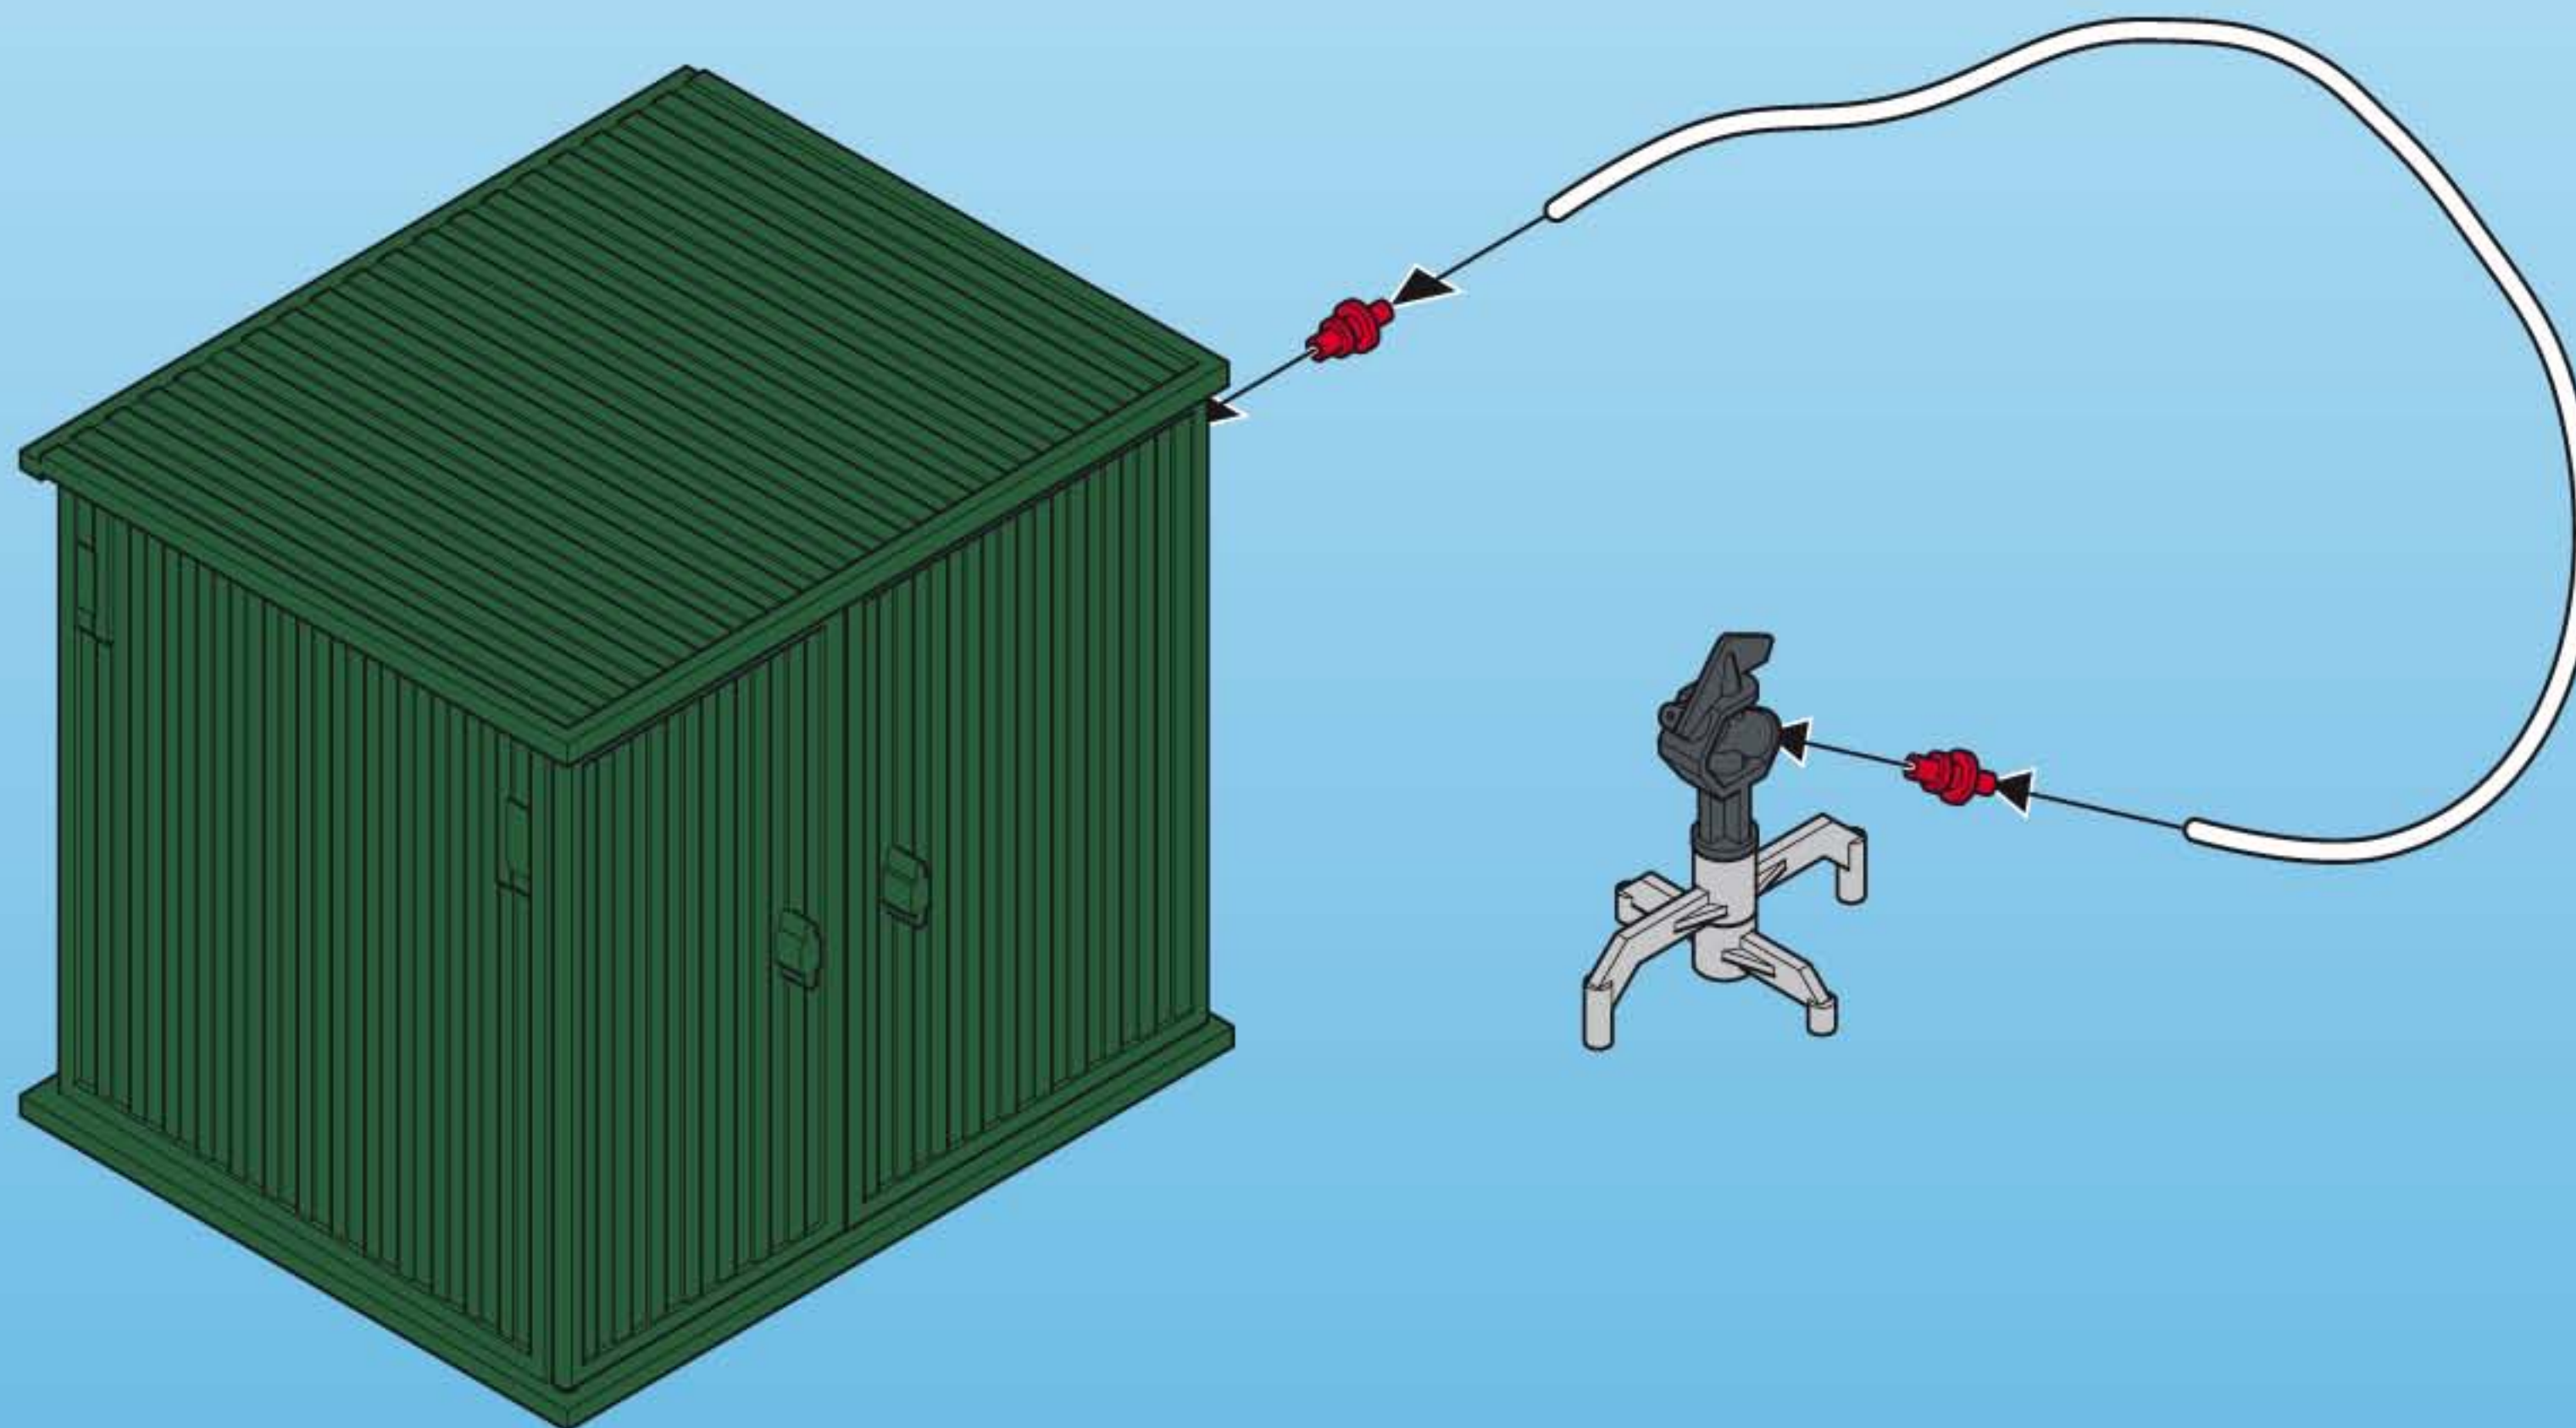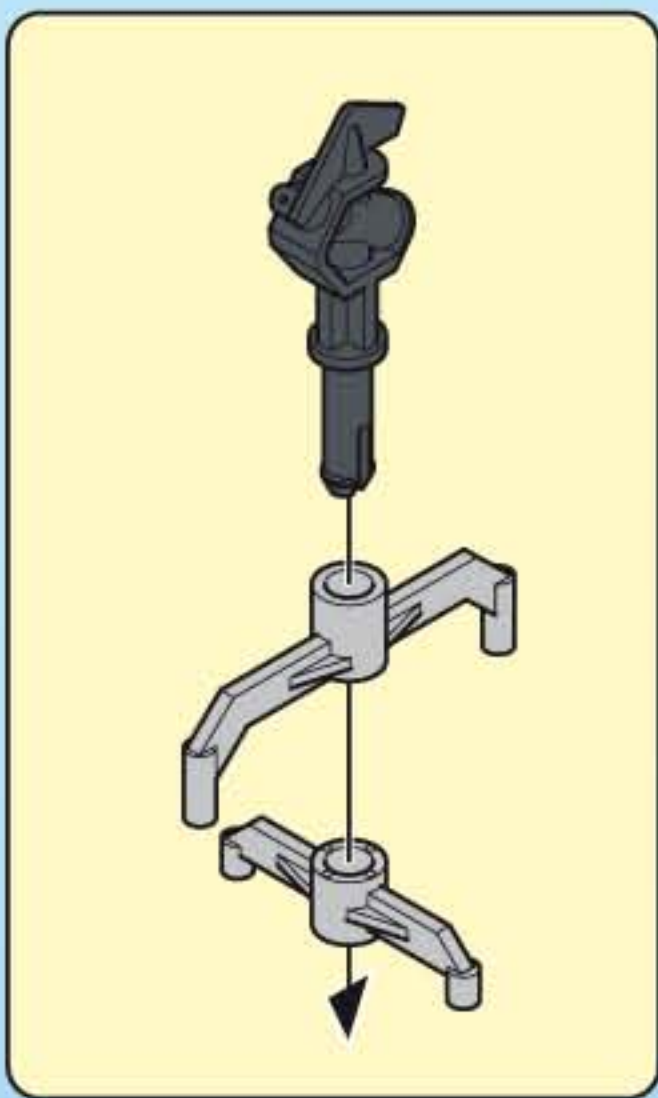  


1

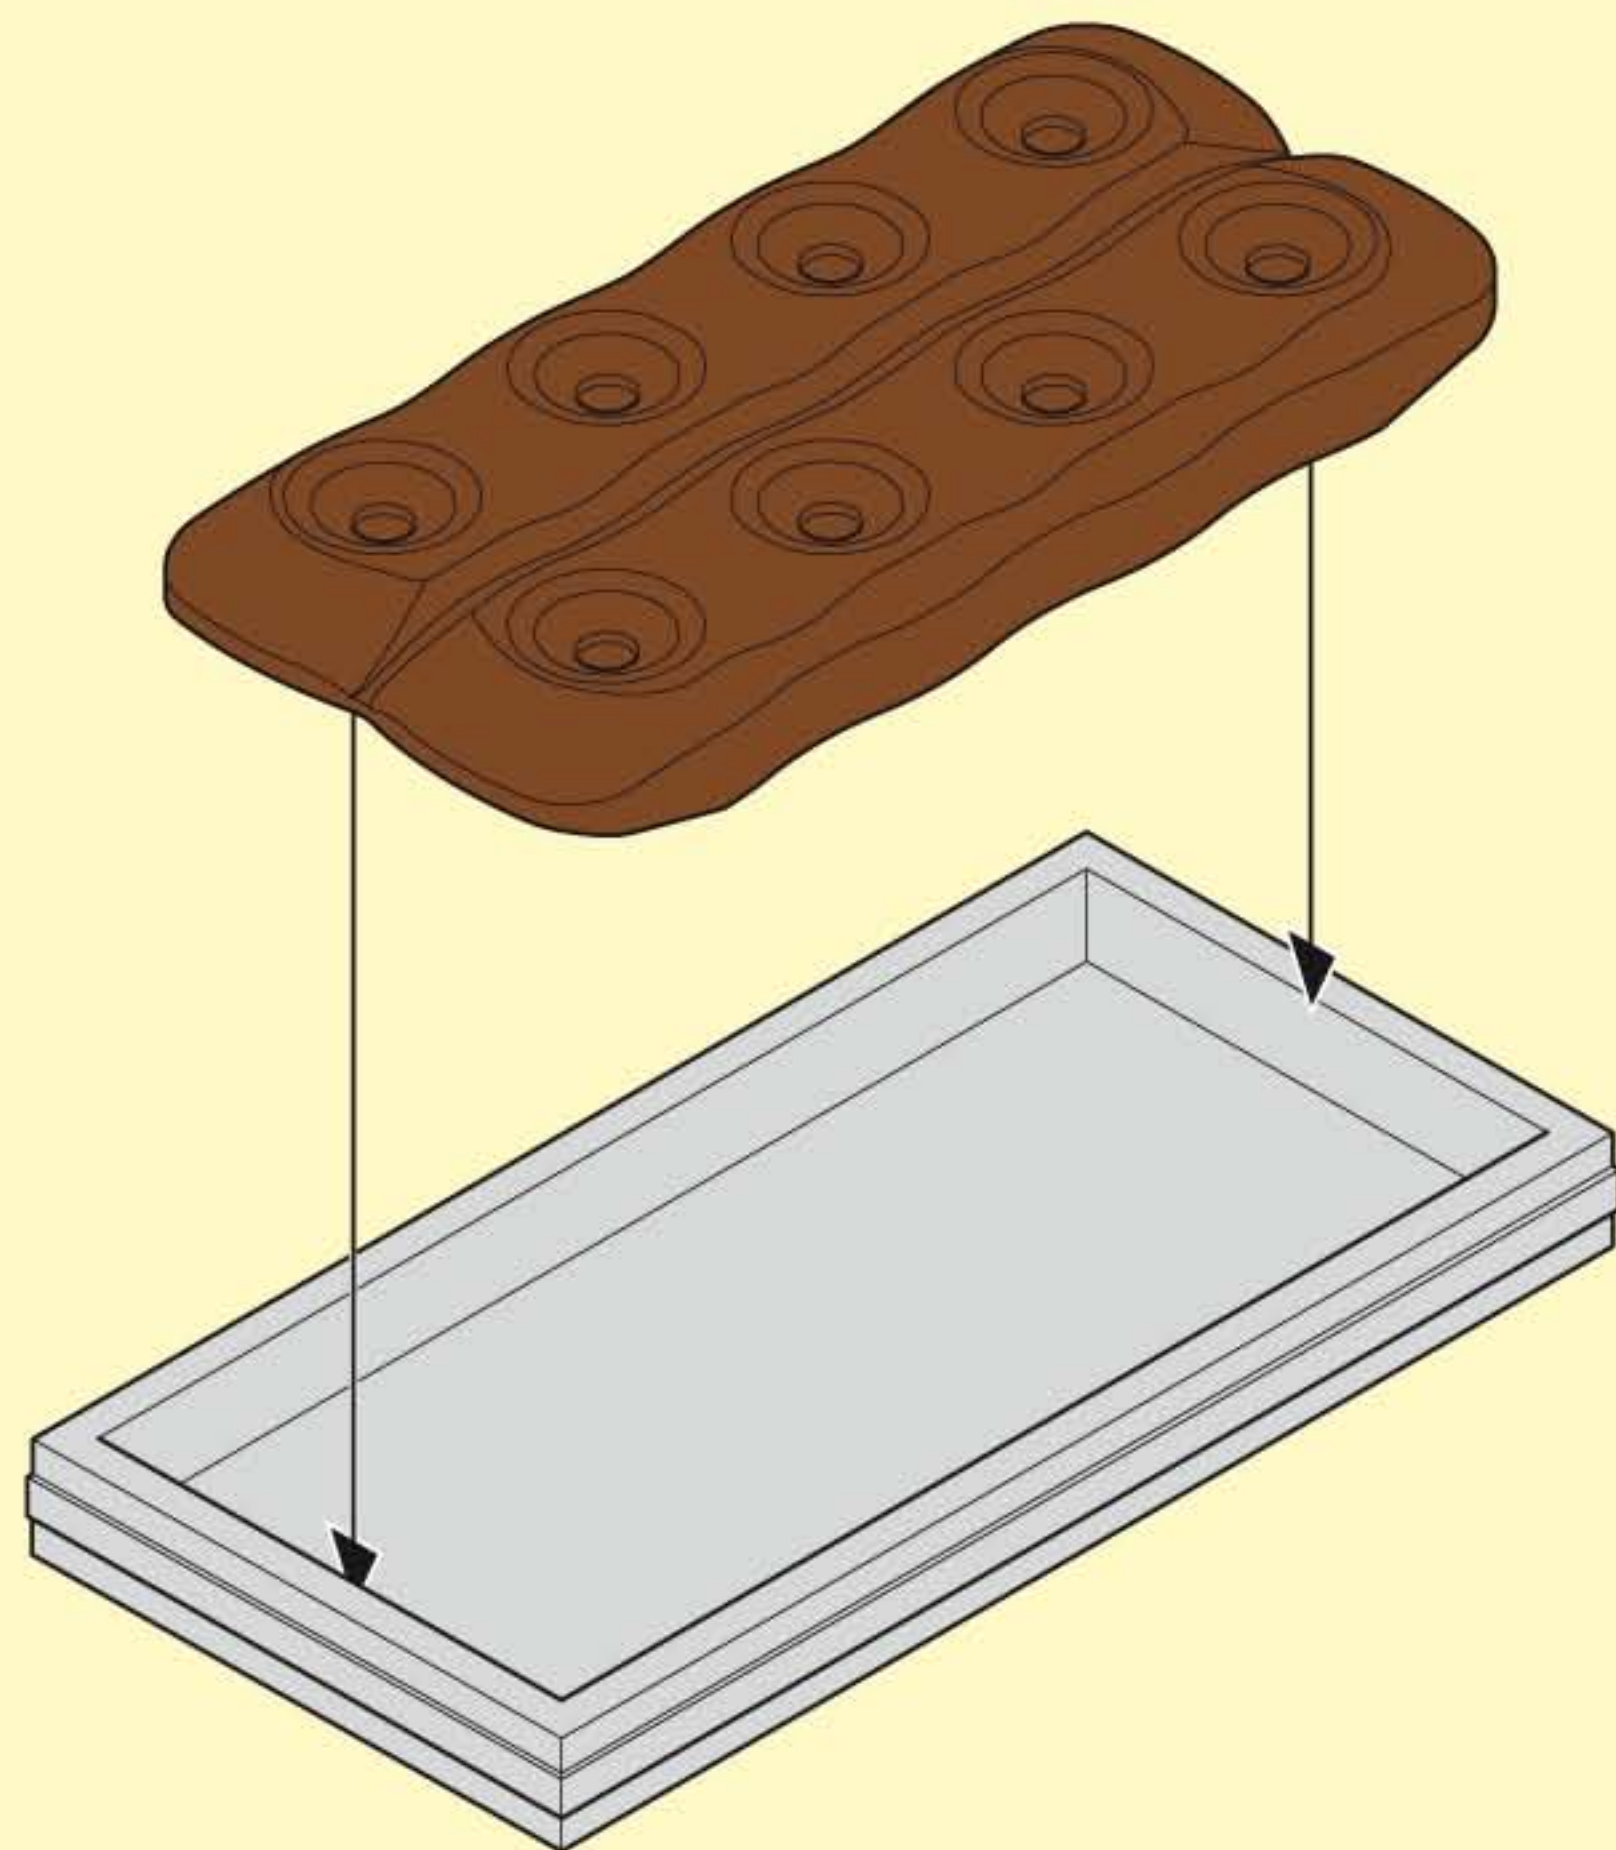 


2

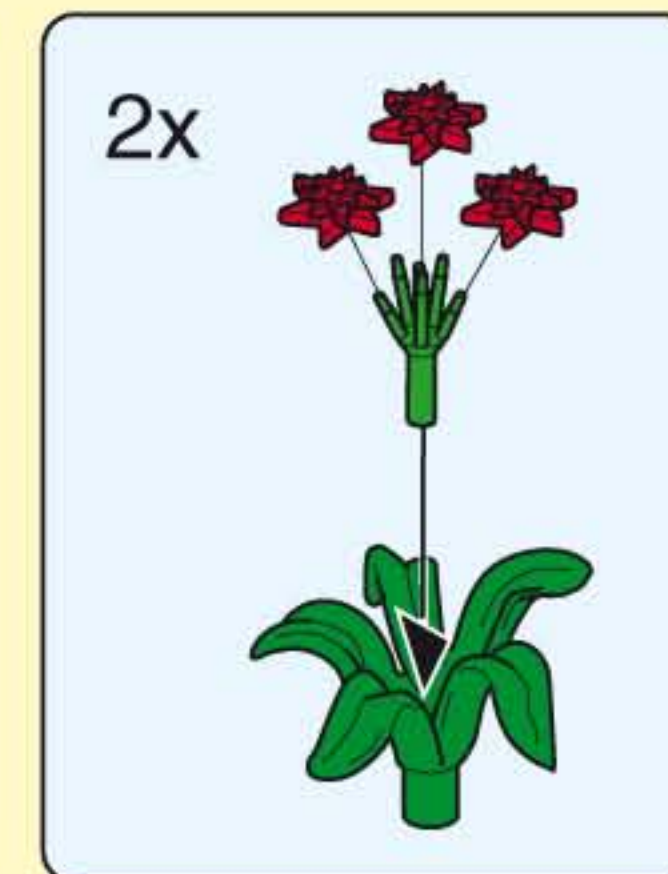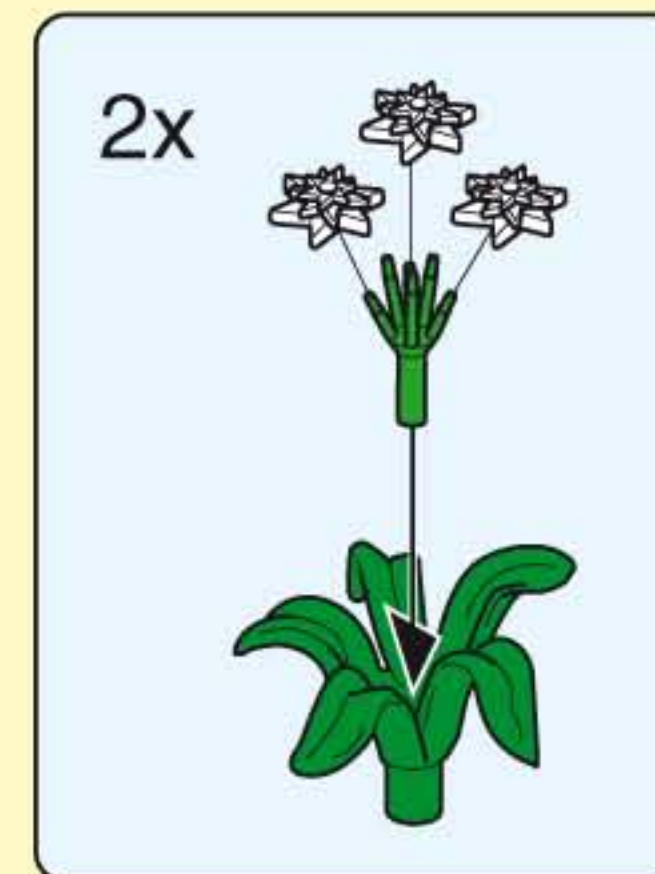  

1

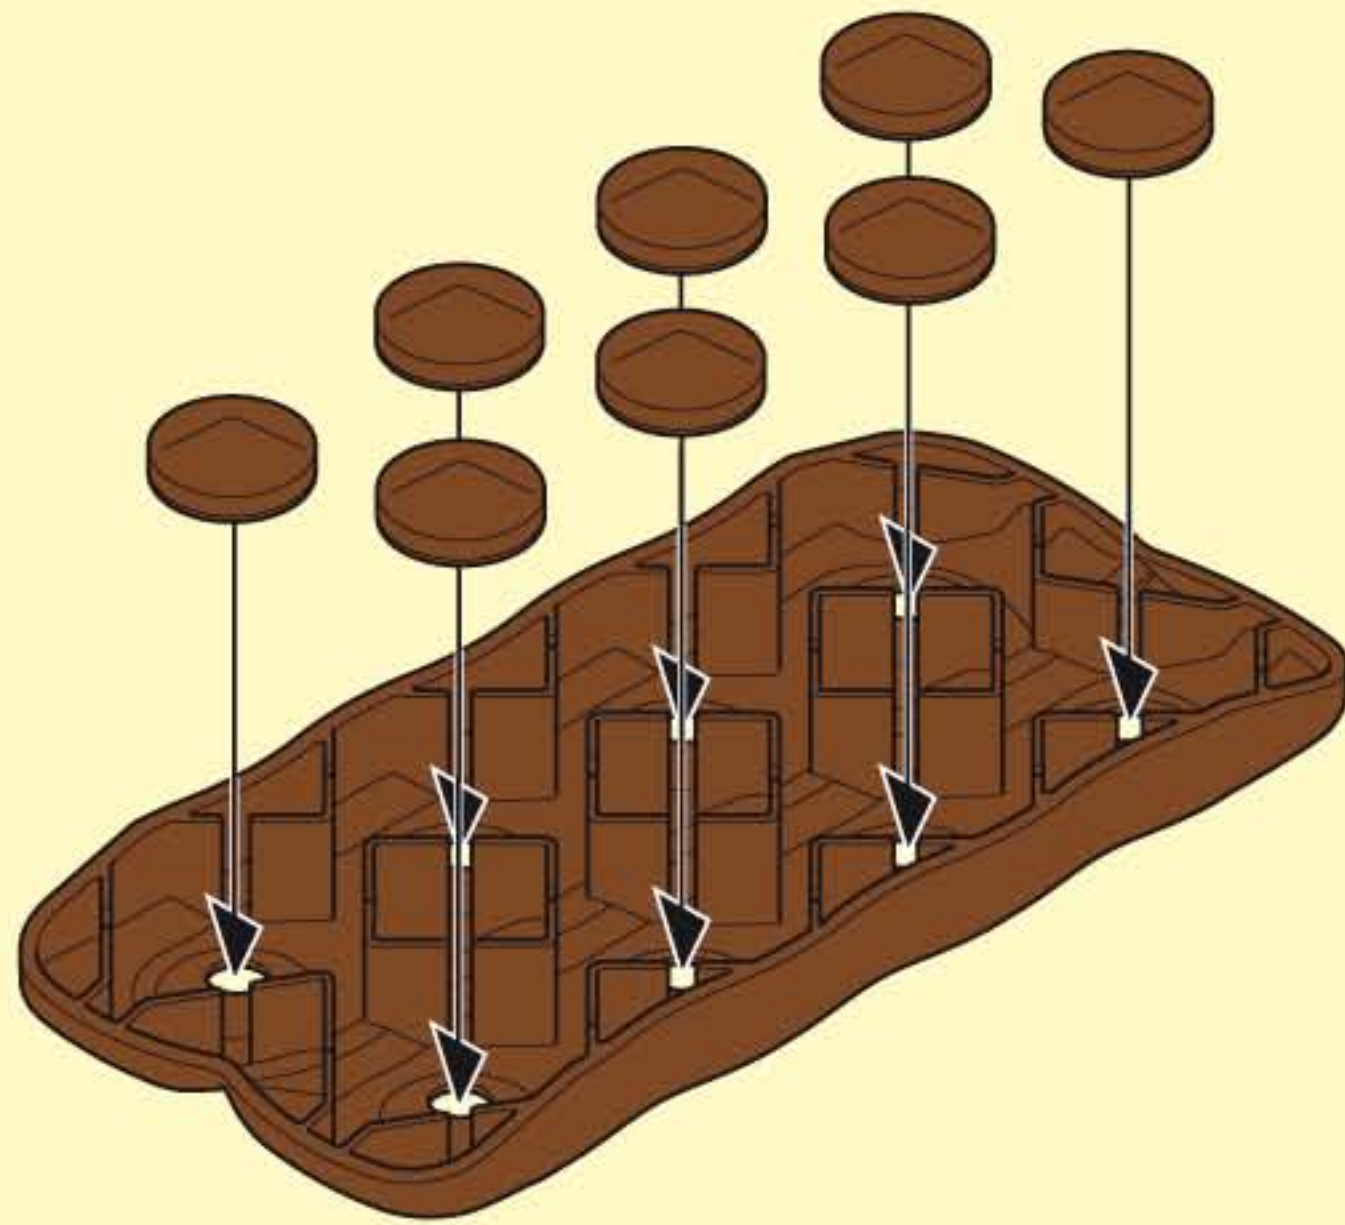 

2

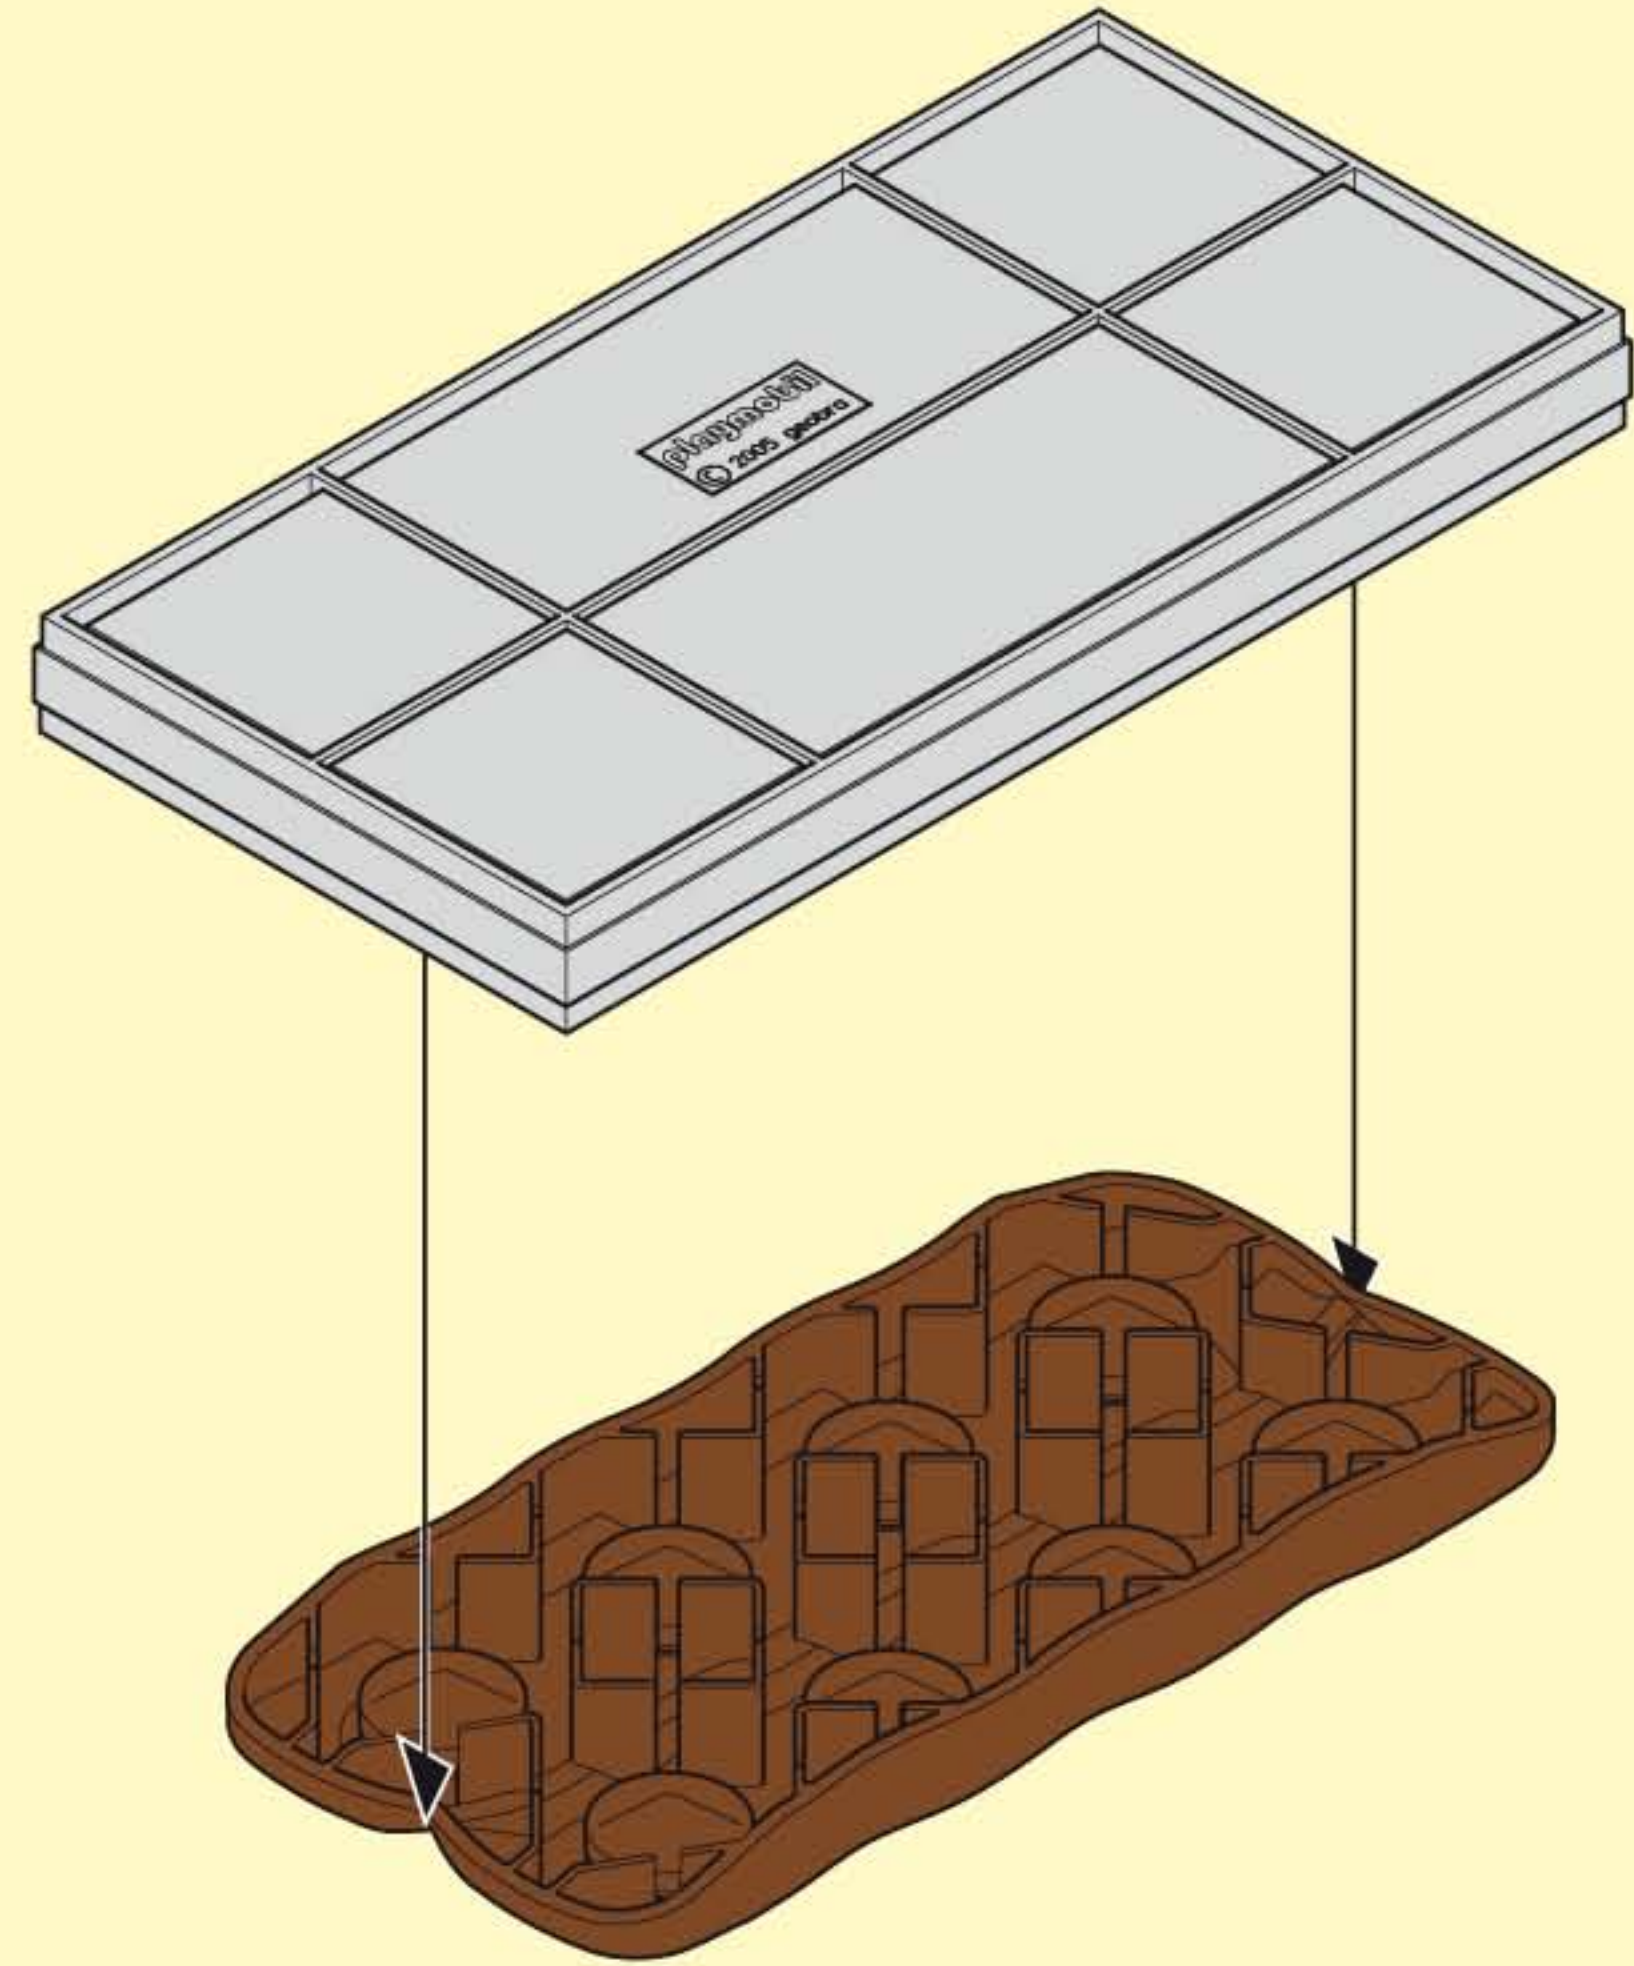 

3

4x



4x



(D) (A) (CH) (L) Nur Trinkwasser verwenden. Nach dem Spielen austrocknen lassen.

(USA) (GB) (CDN) (M) Use only tap water. Dry thoroughly after play.

(F) (CDN) (B) (L) (CH) N'utiliser que de l'eau potable. Faire sécher après chaque utilisation.

(E) (MEX) Utilizar solamente agua potable. Dejar secar antes de guardar.

(NL) (B) Enkel drinkbaar water gebruiken. Na het spelen laten drogen.

(I) (CH) Usare solo acqua potabile. Asciugare bene dopo ogni uso.

(P) Utilizar somente água potável. Deixar secar antes de guardar.

(DK) Anvend kun drikkevand. Lad det tørre ud når du er færdig med at lege.

(N) Kun drikkevann skal benyttes. Tørk opp etter at leken er ferdig.

(S) (FIN) Använd endast dricksvatten. Låt torka efter användandet.

(FIN) Käytä ainoastaan juomavettä. Anna kuivua leikin jälkeen.

(H) Kérjük kizárólag ivóvizet használgon! Játék után ajánlott a termék kiszáritása!

(CZ) Používat jen pitnou vodu. Po hraní nechat vyschnout.

(EST) Kasutada üksnes joogivett! Mängimise järel kuivatada!

(LV) Izmantot tikai dzeramo ūdeni. Pēc spēlēšanās ļaut nožūt.

(LT) Naudokite tik geriamąjį vandenį. Pažaidus, išdžiovinkite.

(M) Uza ilma tajjeb ax-xorb. Wara l-loghob hallih jinxef.

(SLO) V igračo vlivajte le pitno vodo. Po igri naj se igrača posuši.

 
(SK) Používať iba pitnú vodu. Po hre nechať vyschnúť.

(PL) Używaj tylko wodę pitną. Po zabawie pozostaw do wyschnięcia.



(TR) (CY) Sadece içme suyu kullanınız. Oyundan sonra kurumaya bırakın.




(GR) (CY) Χρησιμοποιείτε μόνο νερό βρύσης. Μόλις τελειώσετε, αφήστε το παιχνίδι να στεγνώσει εντελώς.

1

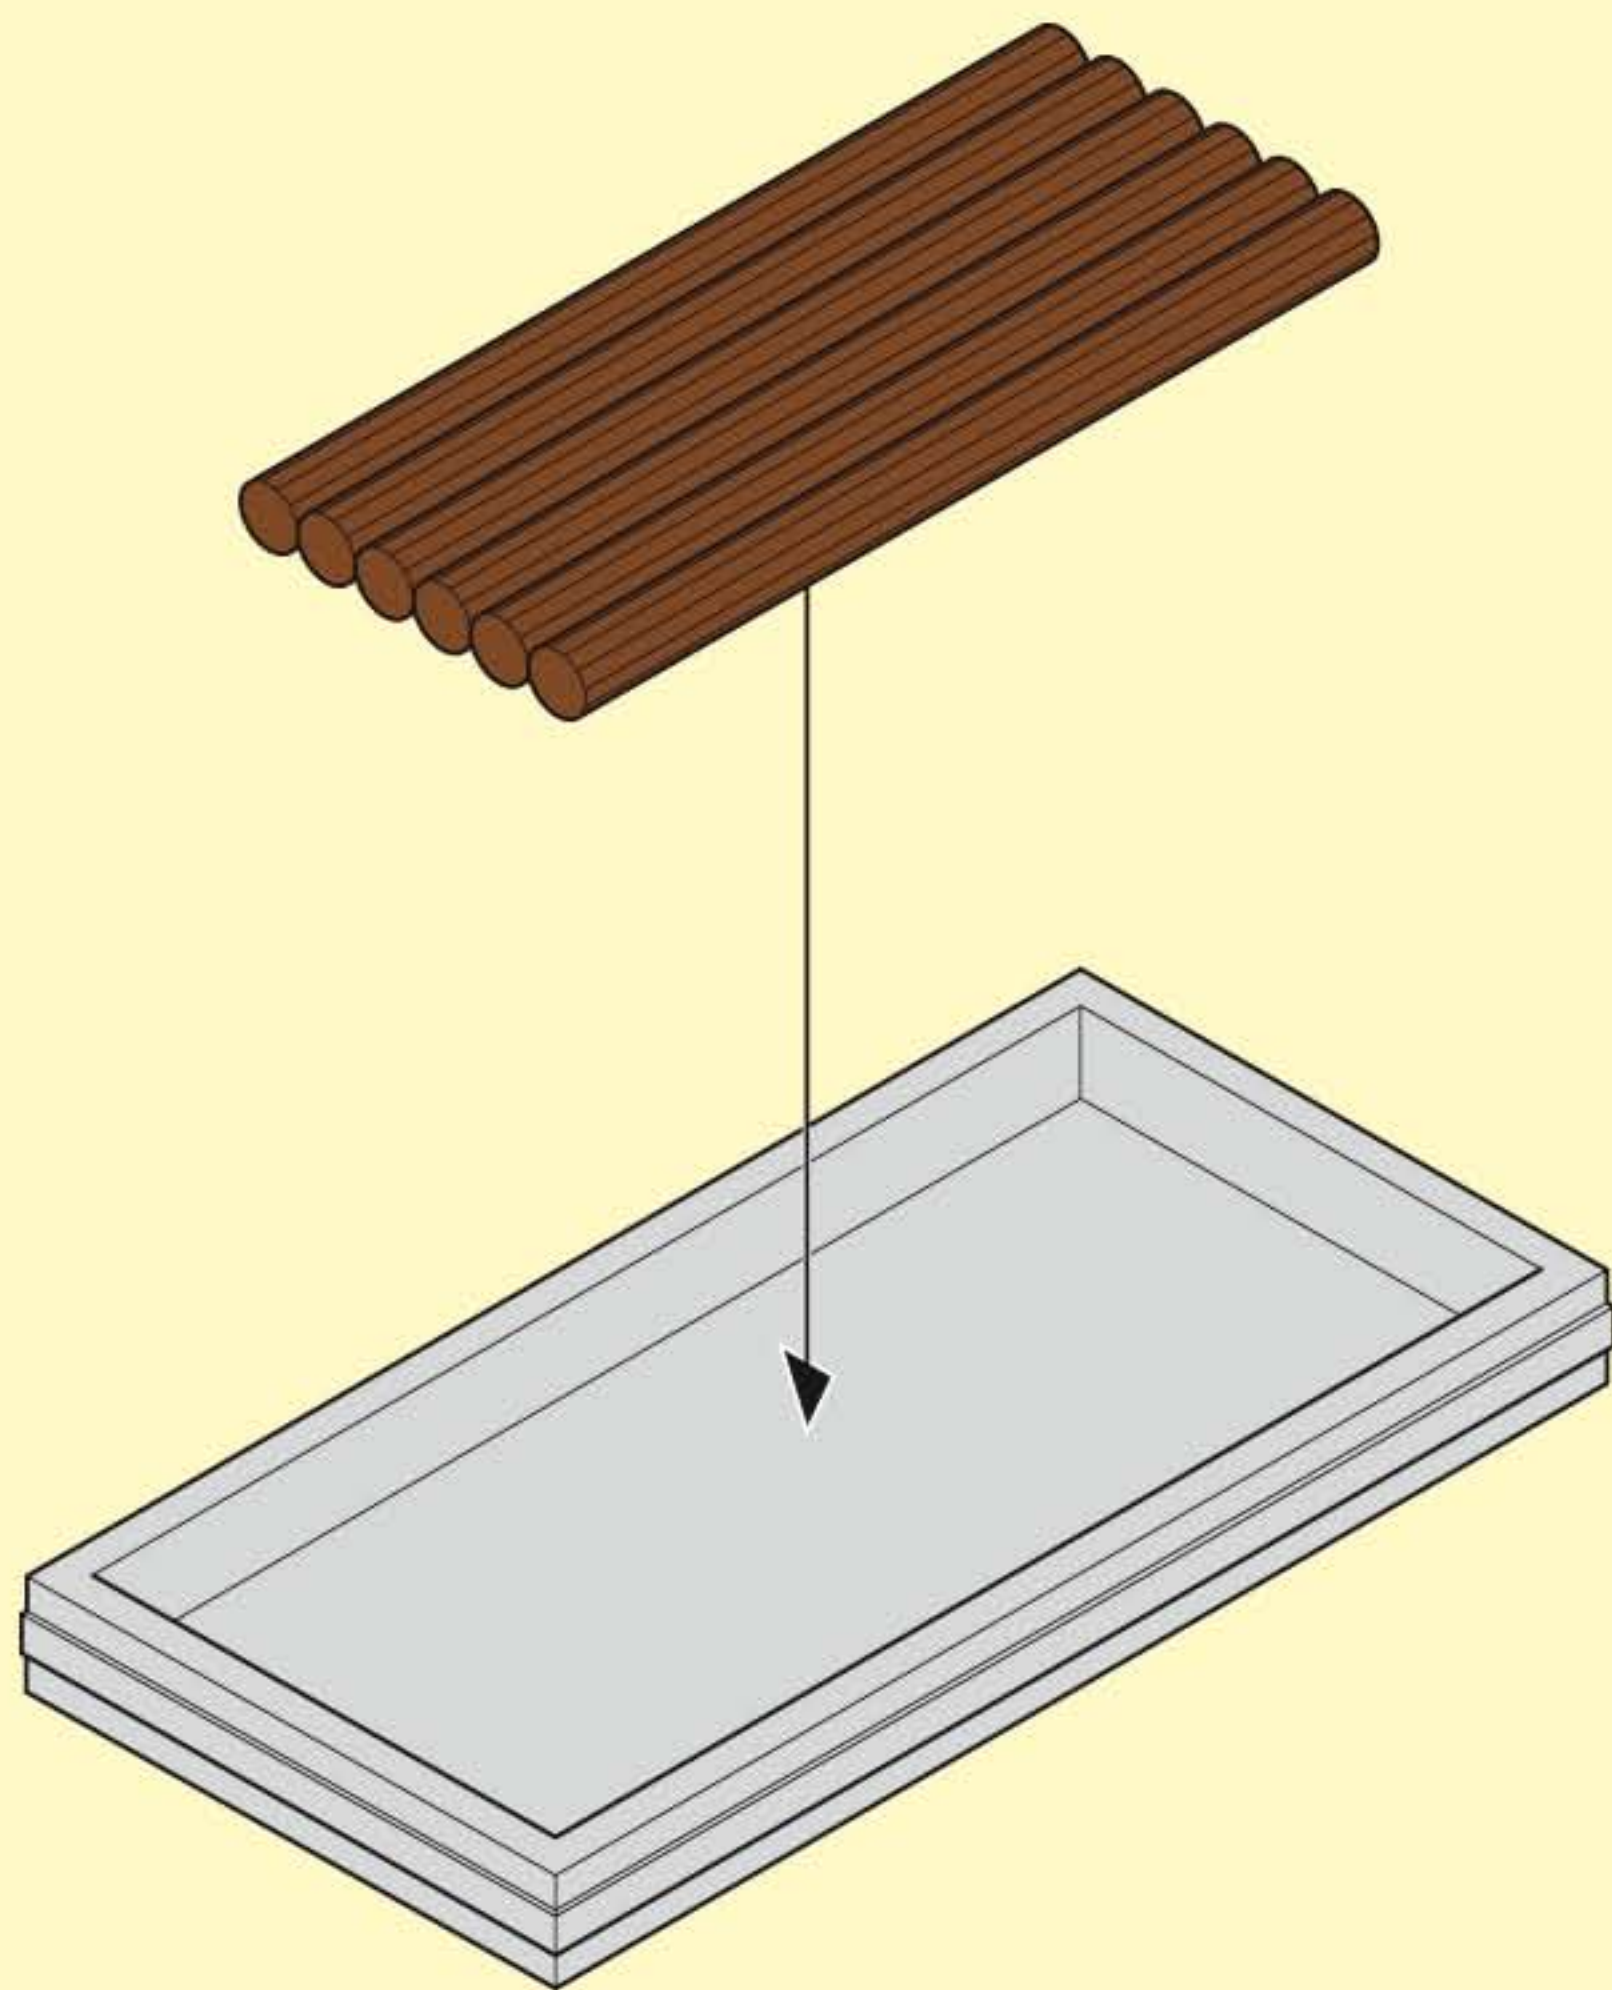

2

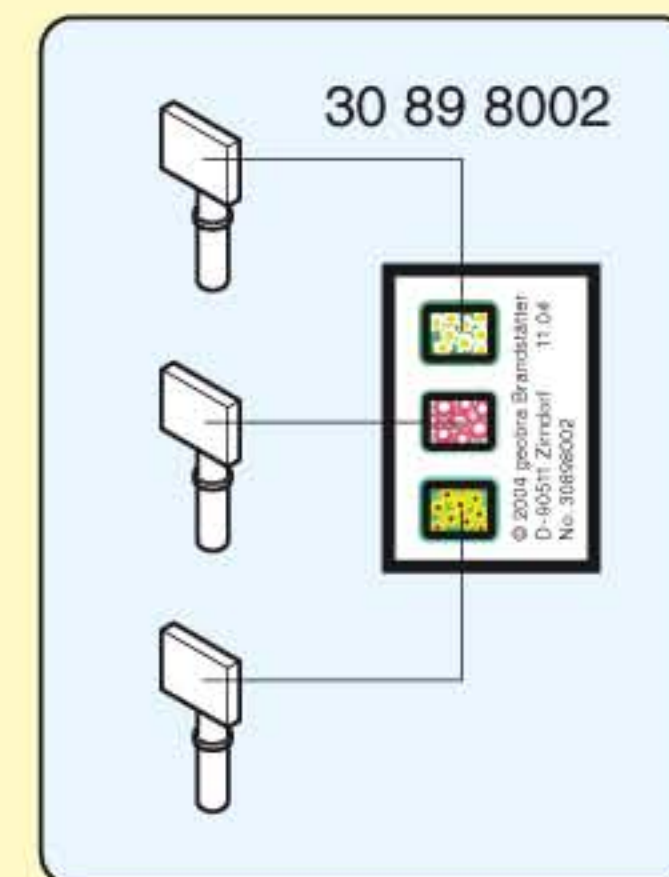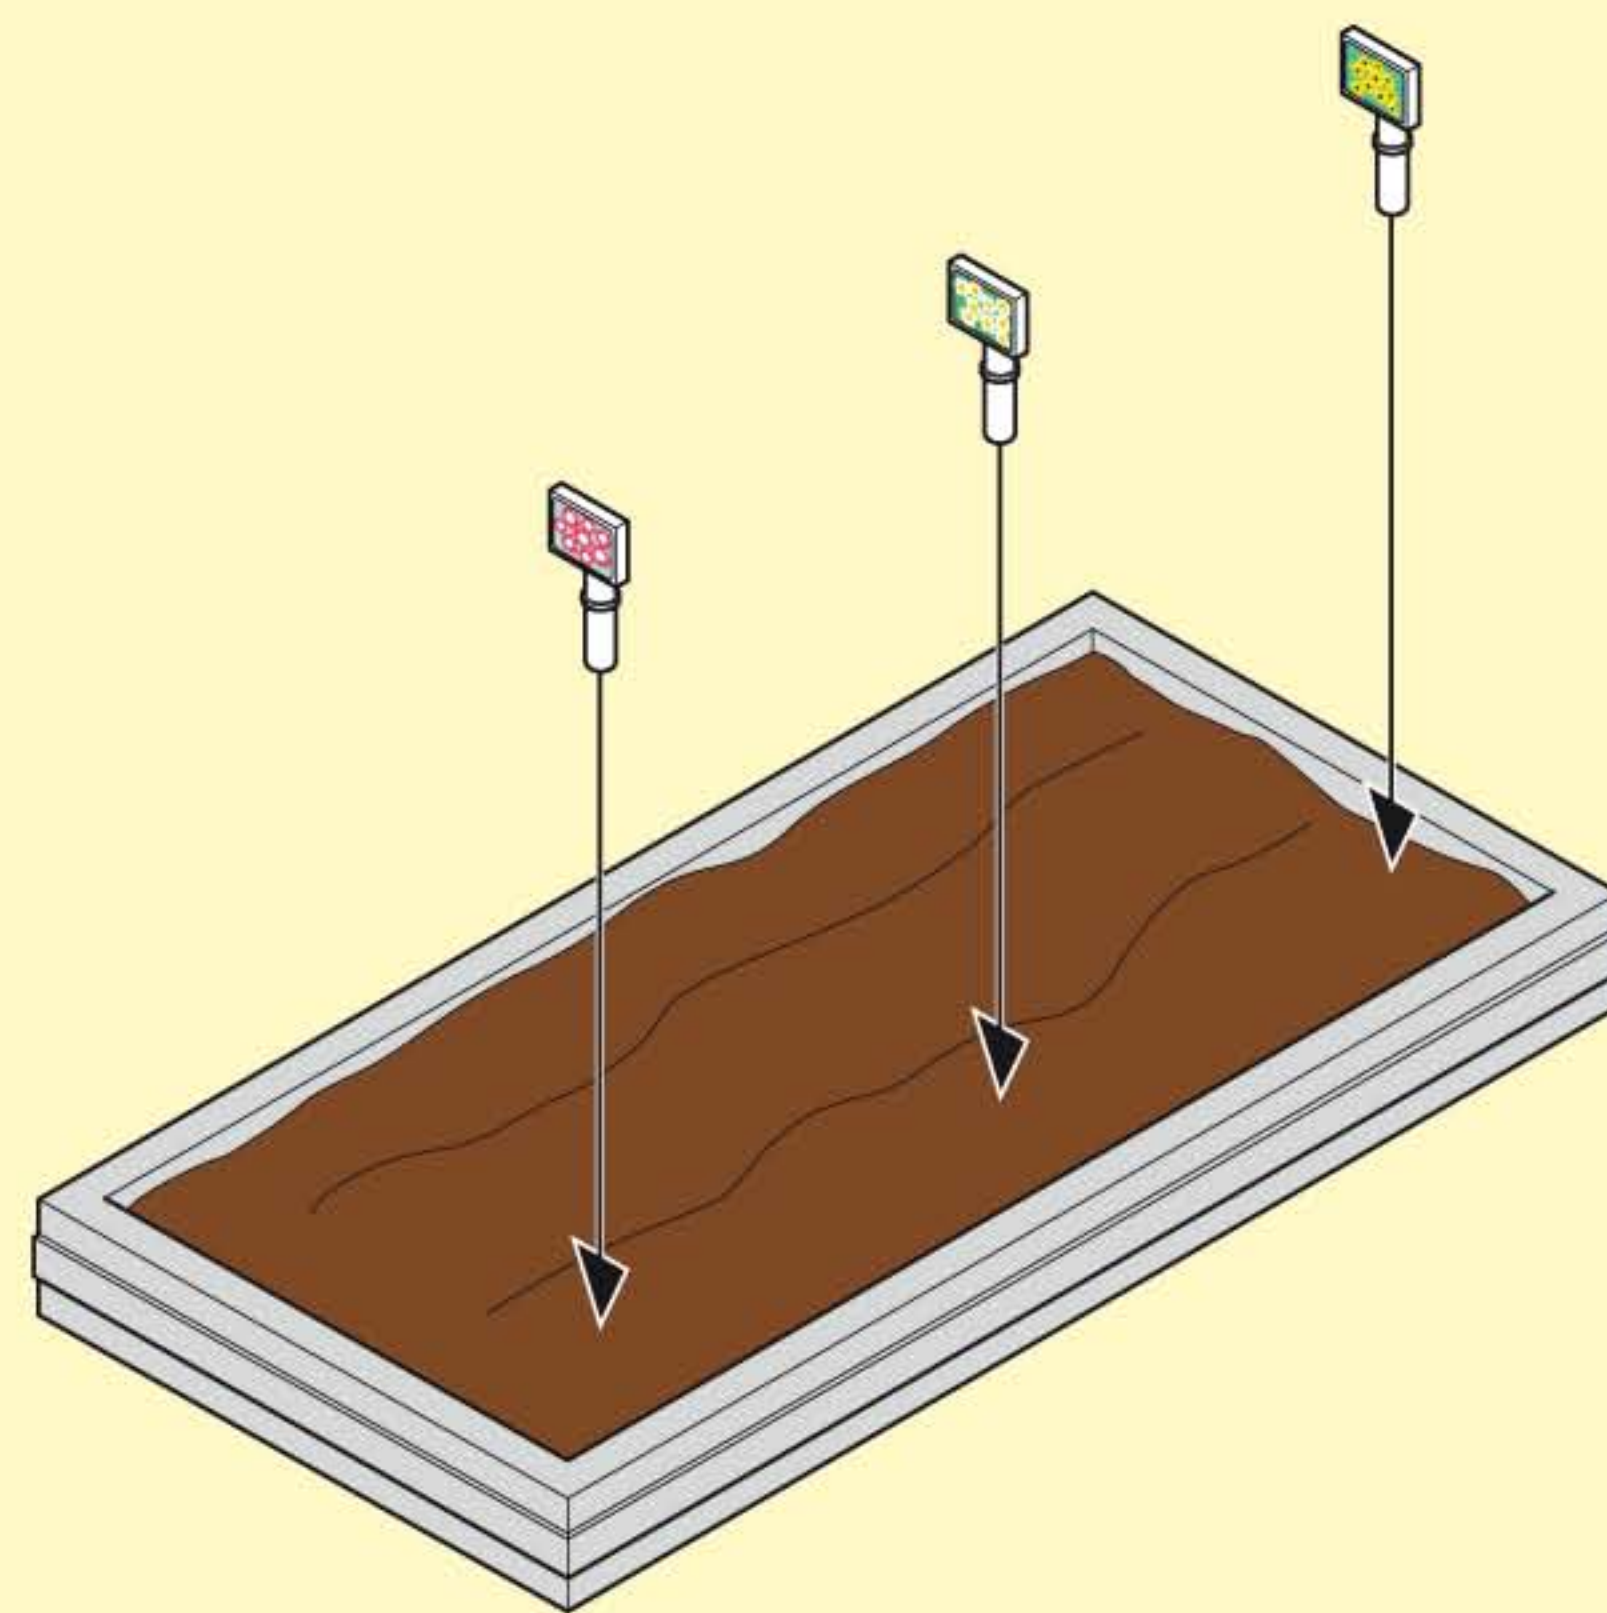  

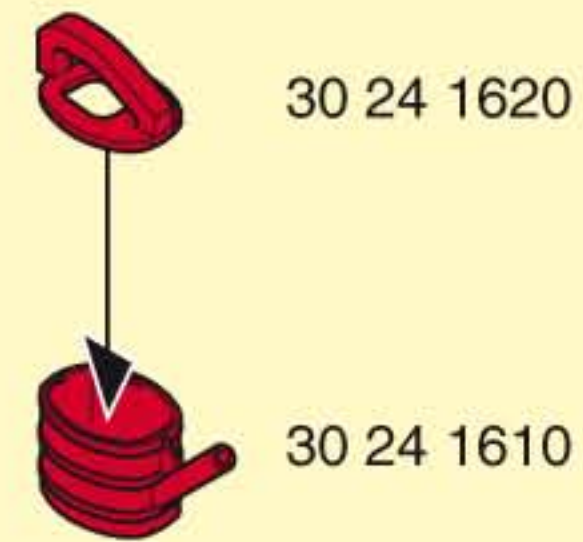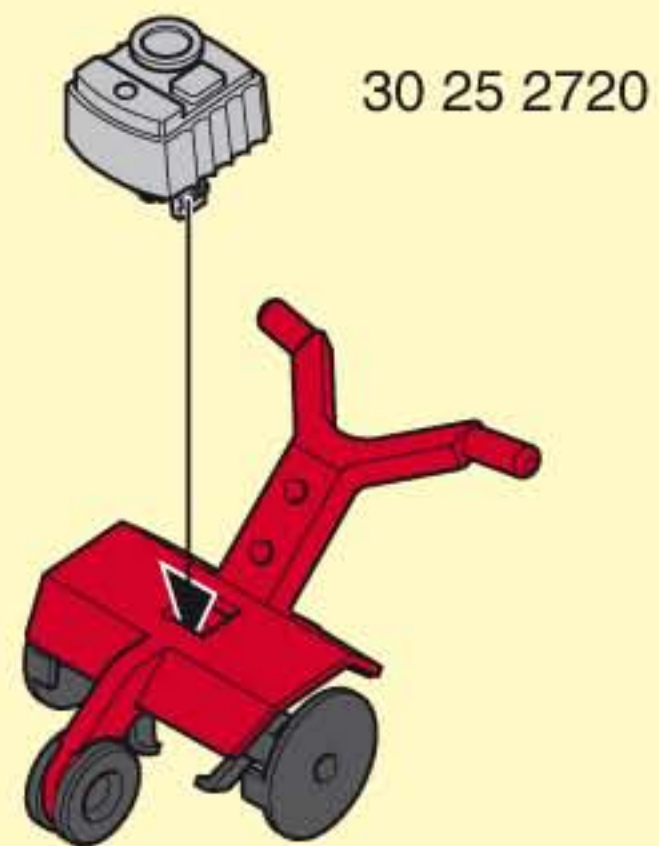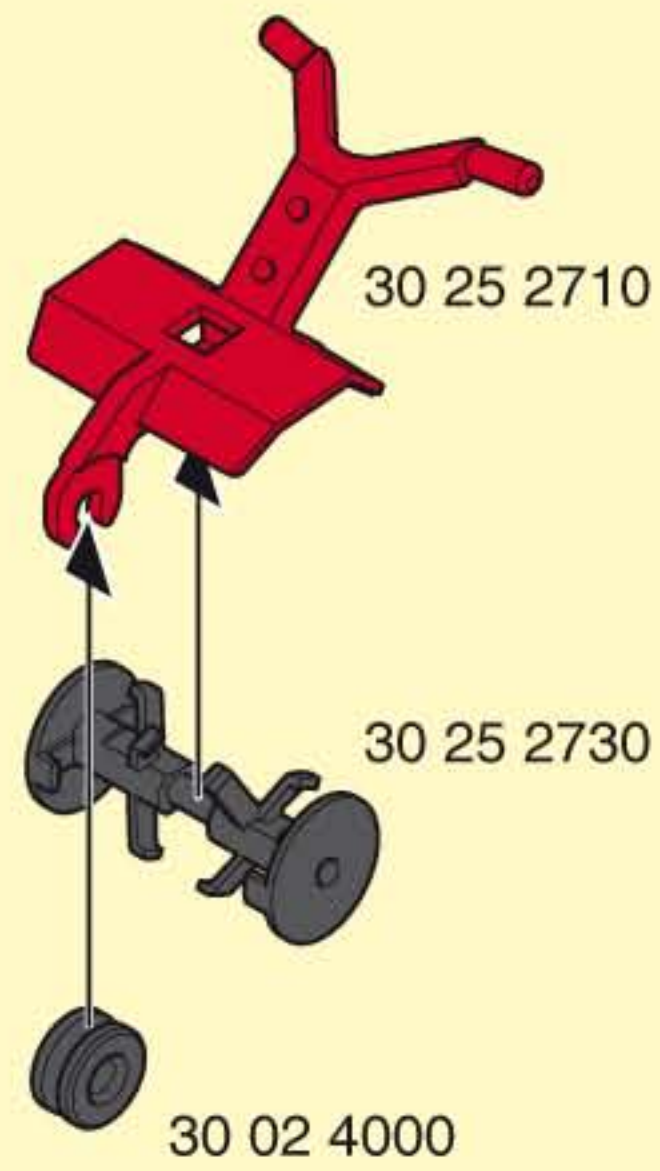   

30 06 9550



30 25 2750



30 00 1682

 
30 25 2740




30 06 9720



30 14 2530

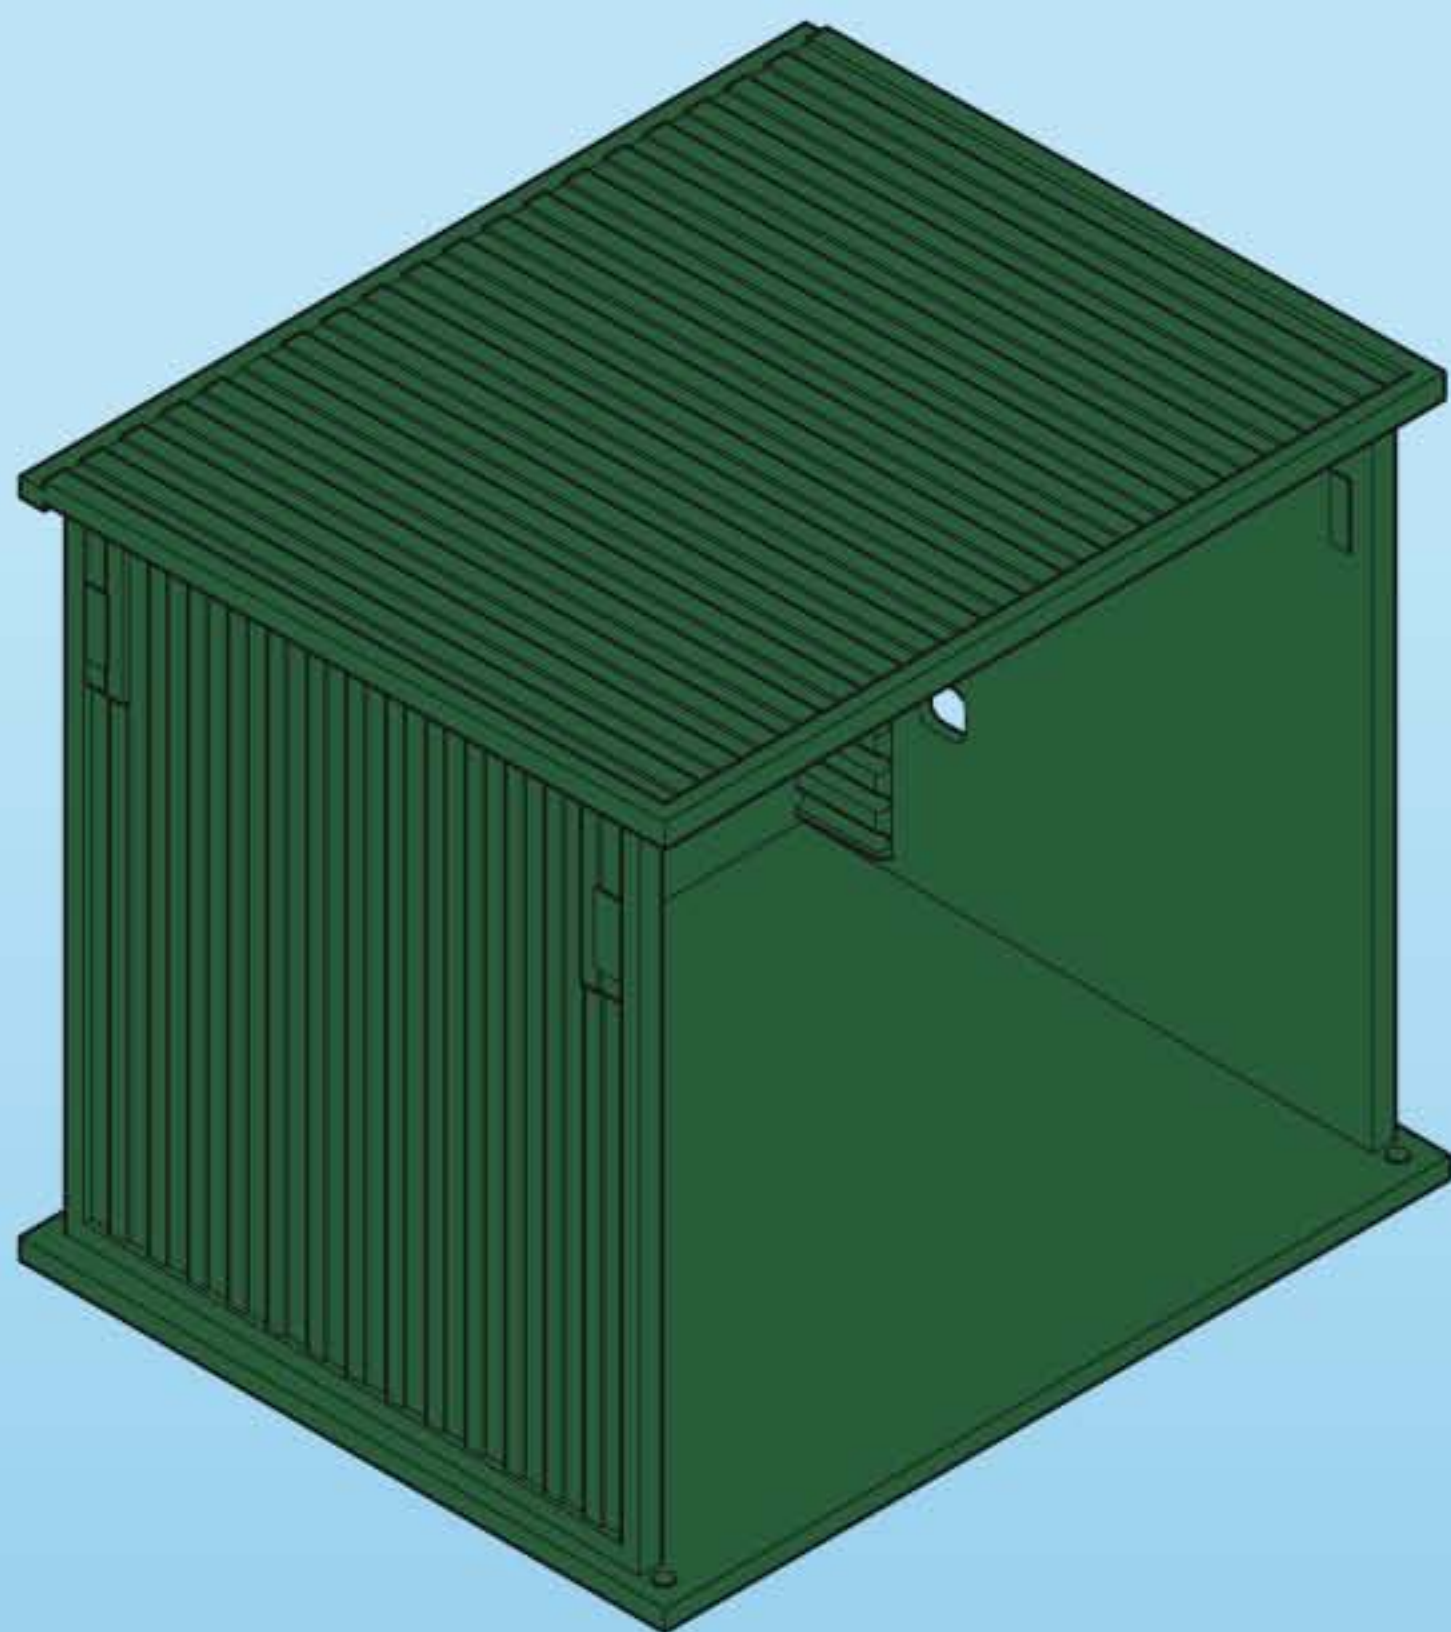


30 25 2610

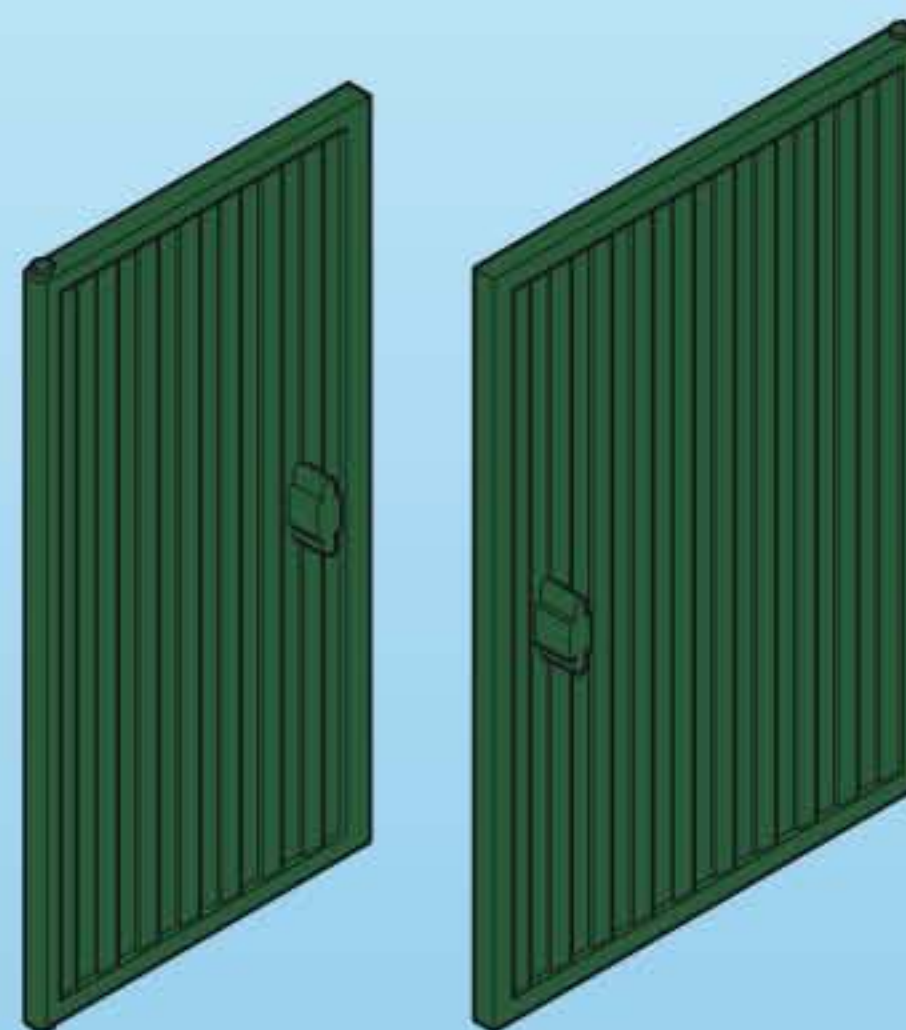 


30 51 3280



 
3x 30 25 2620

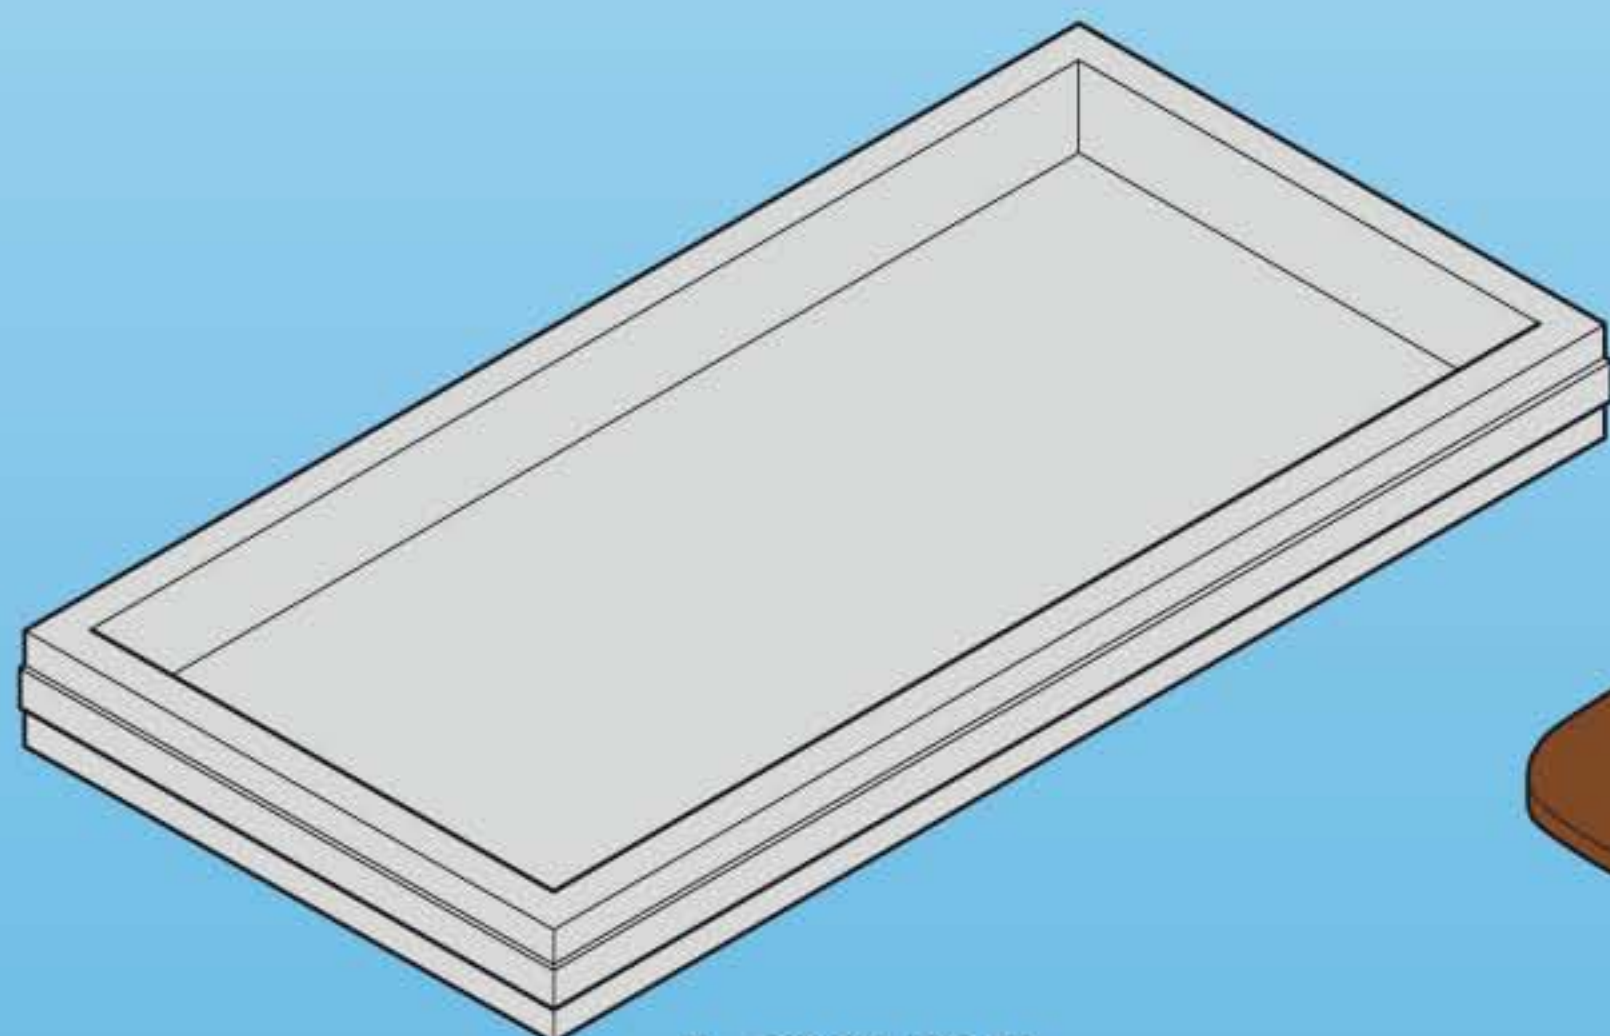

3x 30 25 2340

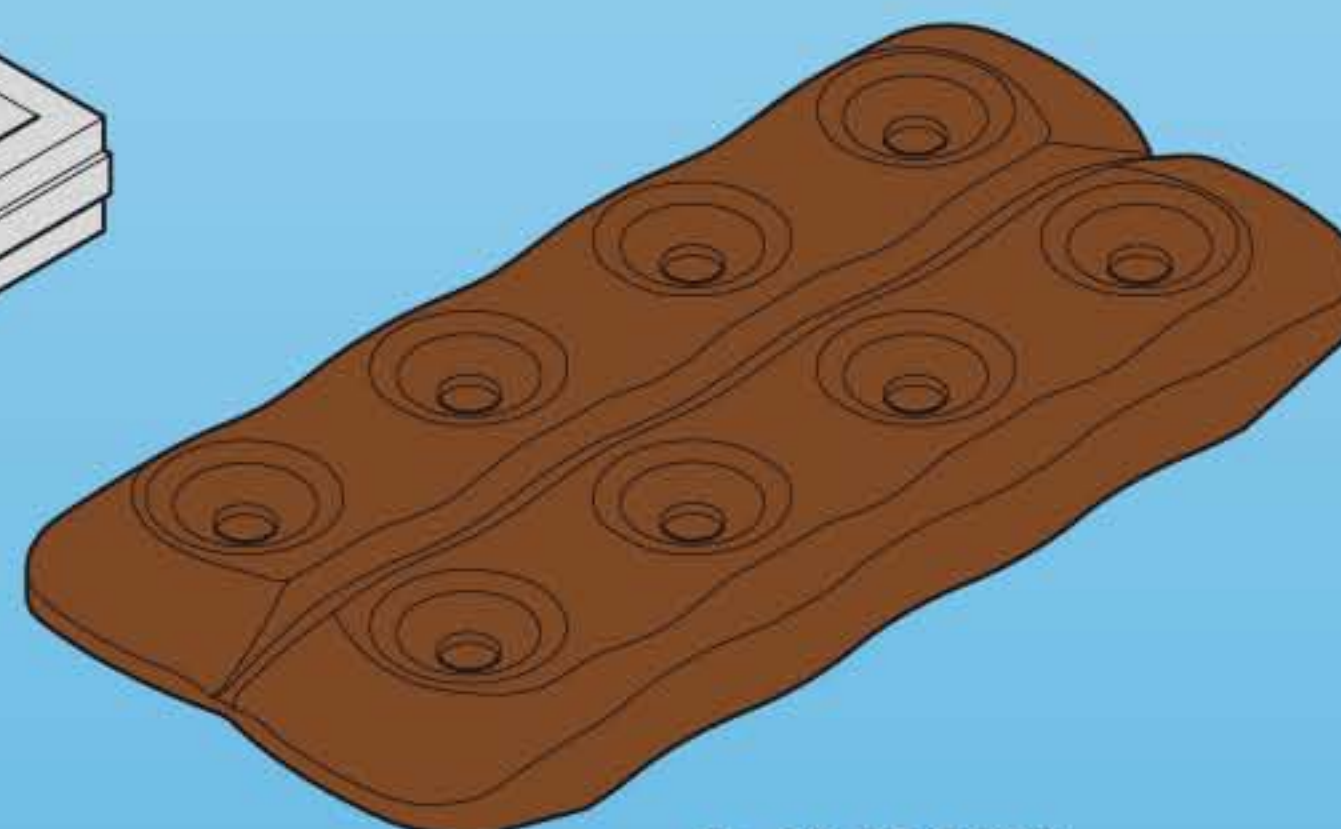 

2x 30 25 2690

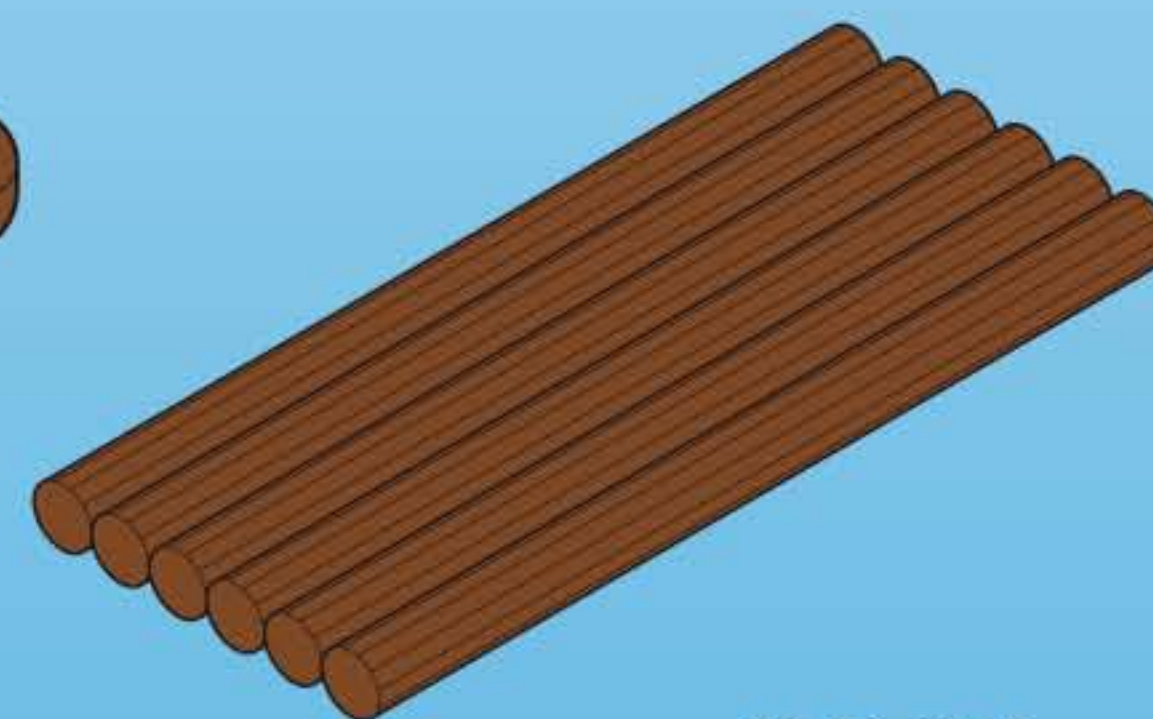 

30 89 9712



30 66 9300



30 60 0160



30 25 2680



30 25 2700



30 89 2930



30 22 5780



4x 30 20 4700



 
4x 30 20 9770



30 22 0300



30 21 6120

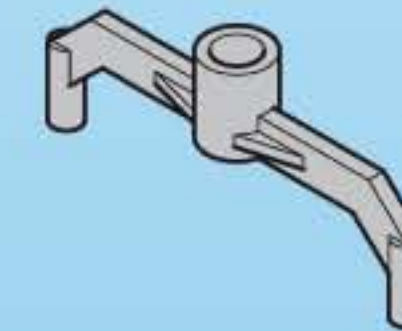

30 45 4710



30 45 4720



30 09 6250



30 09 6270



30 25 2670



3x 30 24 1910



 
8x 30 67 9460



30 25 2630



2x 30 23 0460



4x 30 25 2660



4x 30 25 2640



4x 30 05 7420



8x 30 24 9820



6x 30 25 2760

 
 


6x 30 02 6840

4482

+

7716

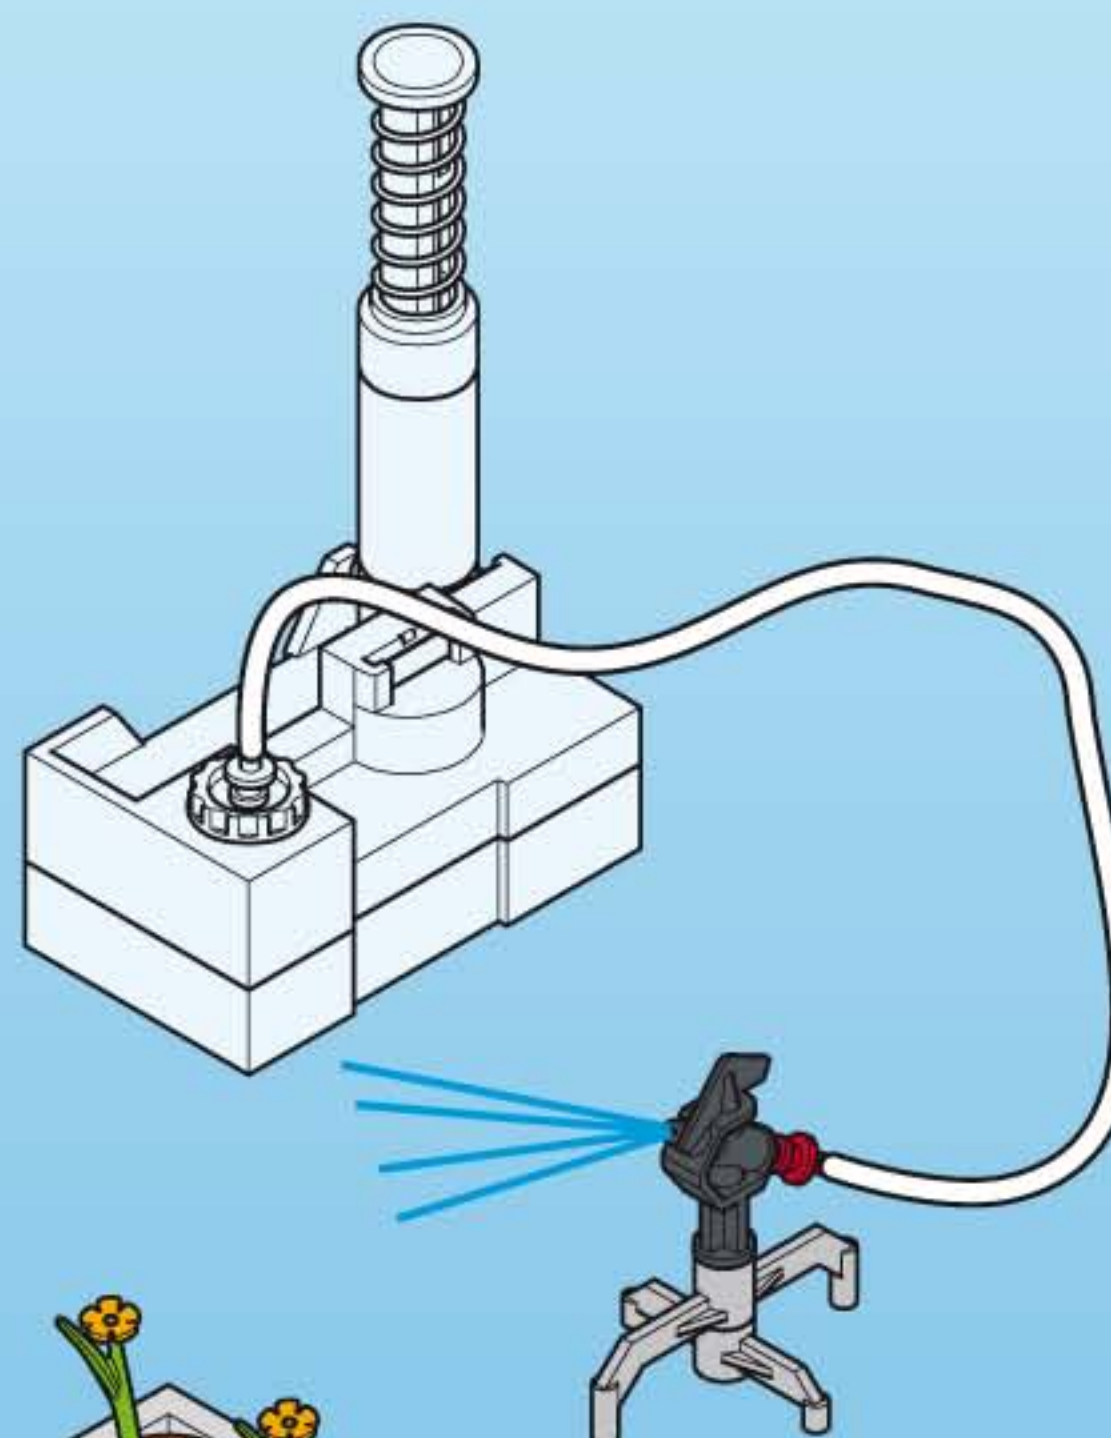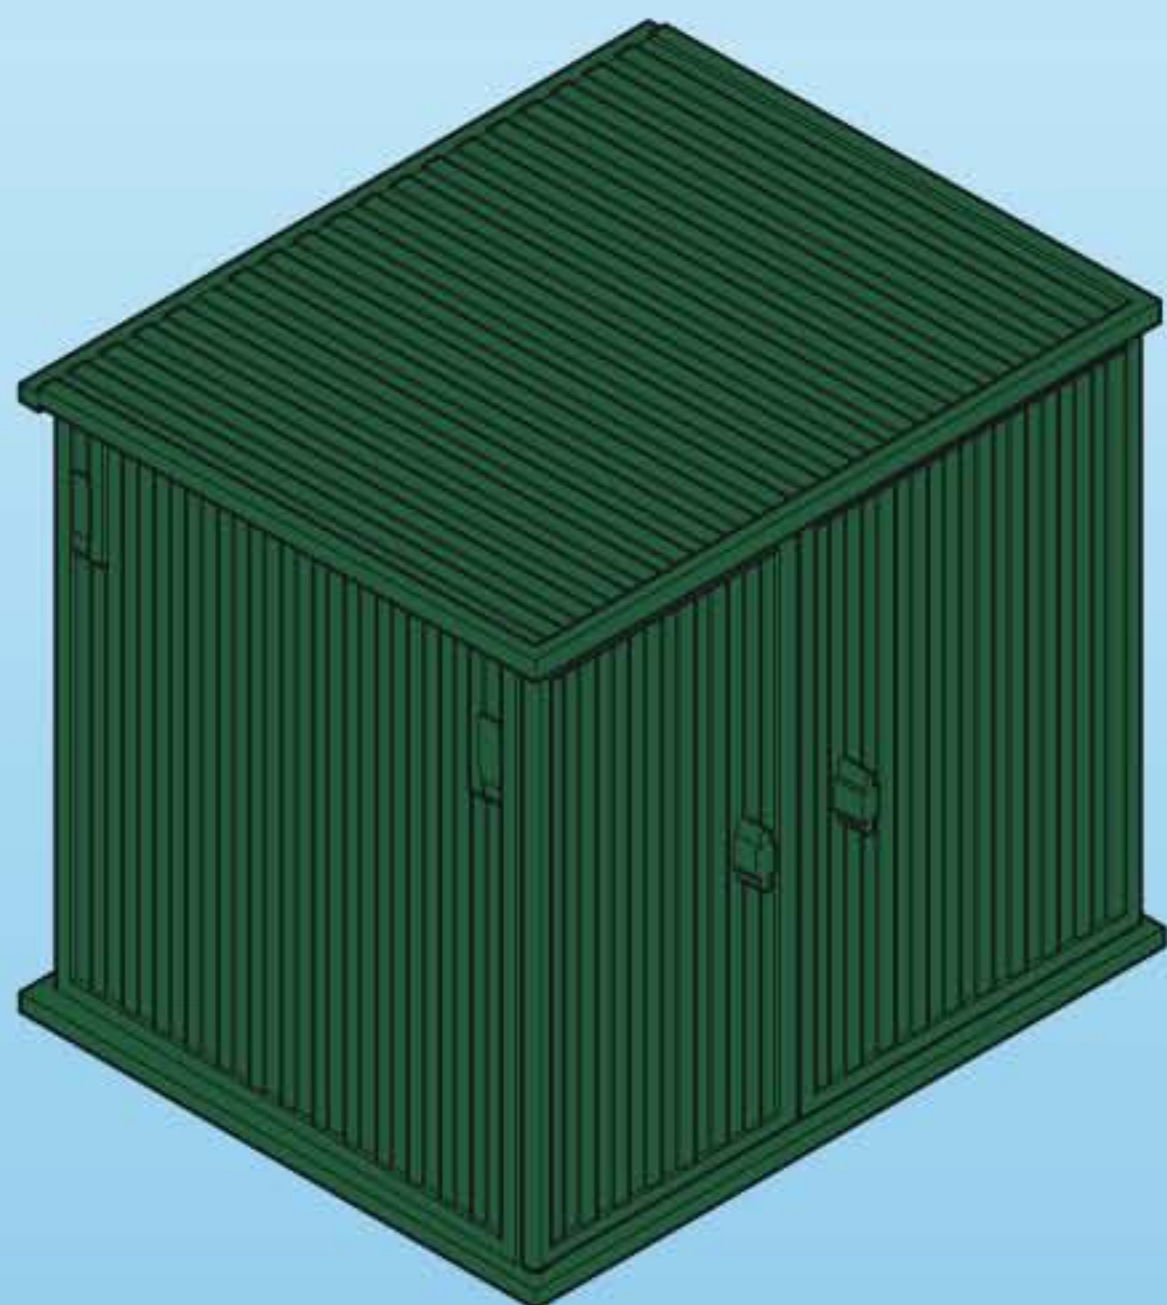

Serviceadressen finden Sie in
allen Playmobil-Prospekten

Addresses of Customer Service
Departments are shown in all
Playmobil catalogues

L'adresse du service
consommateurs est indiquée
dans tous les catalogues
Playmobil

Troverete gli indirizzi dei centri
di assistenza in tutti i cataloghi
Playmobil

Las Direcciones de los
Departamentos de Servicio al
Consumidor se encuentran en
todos los catálogos Playmobil

Η διεύθυνση του Γραφείου
Εξυπηρέτησης Πελατών
είναι καταχωρημένη σε όλους
τους καταλόγους Playmobil

pronounce: plāy-mō-bēēl