 
 
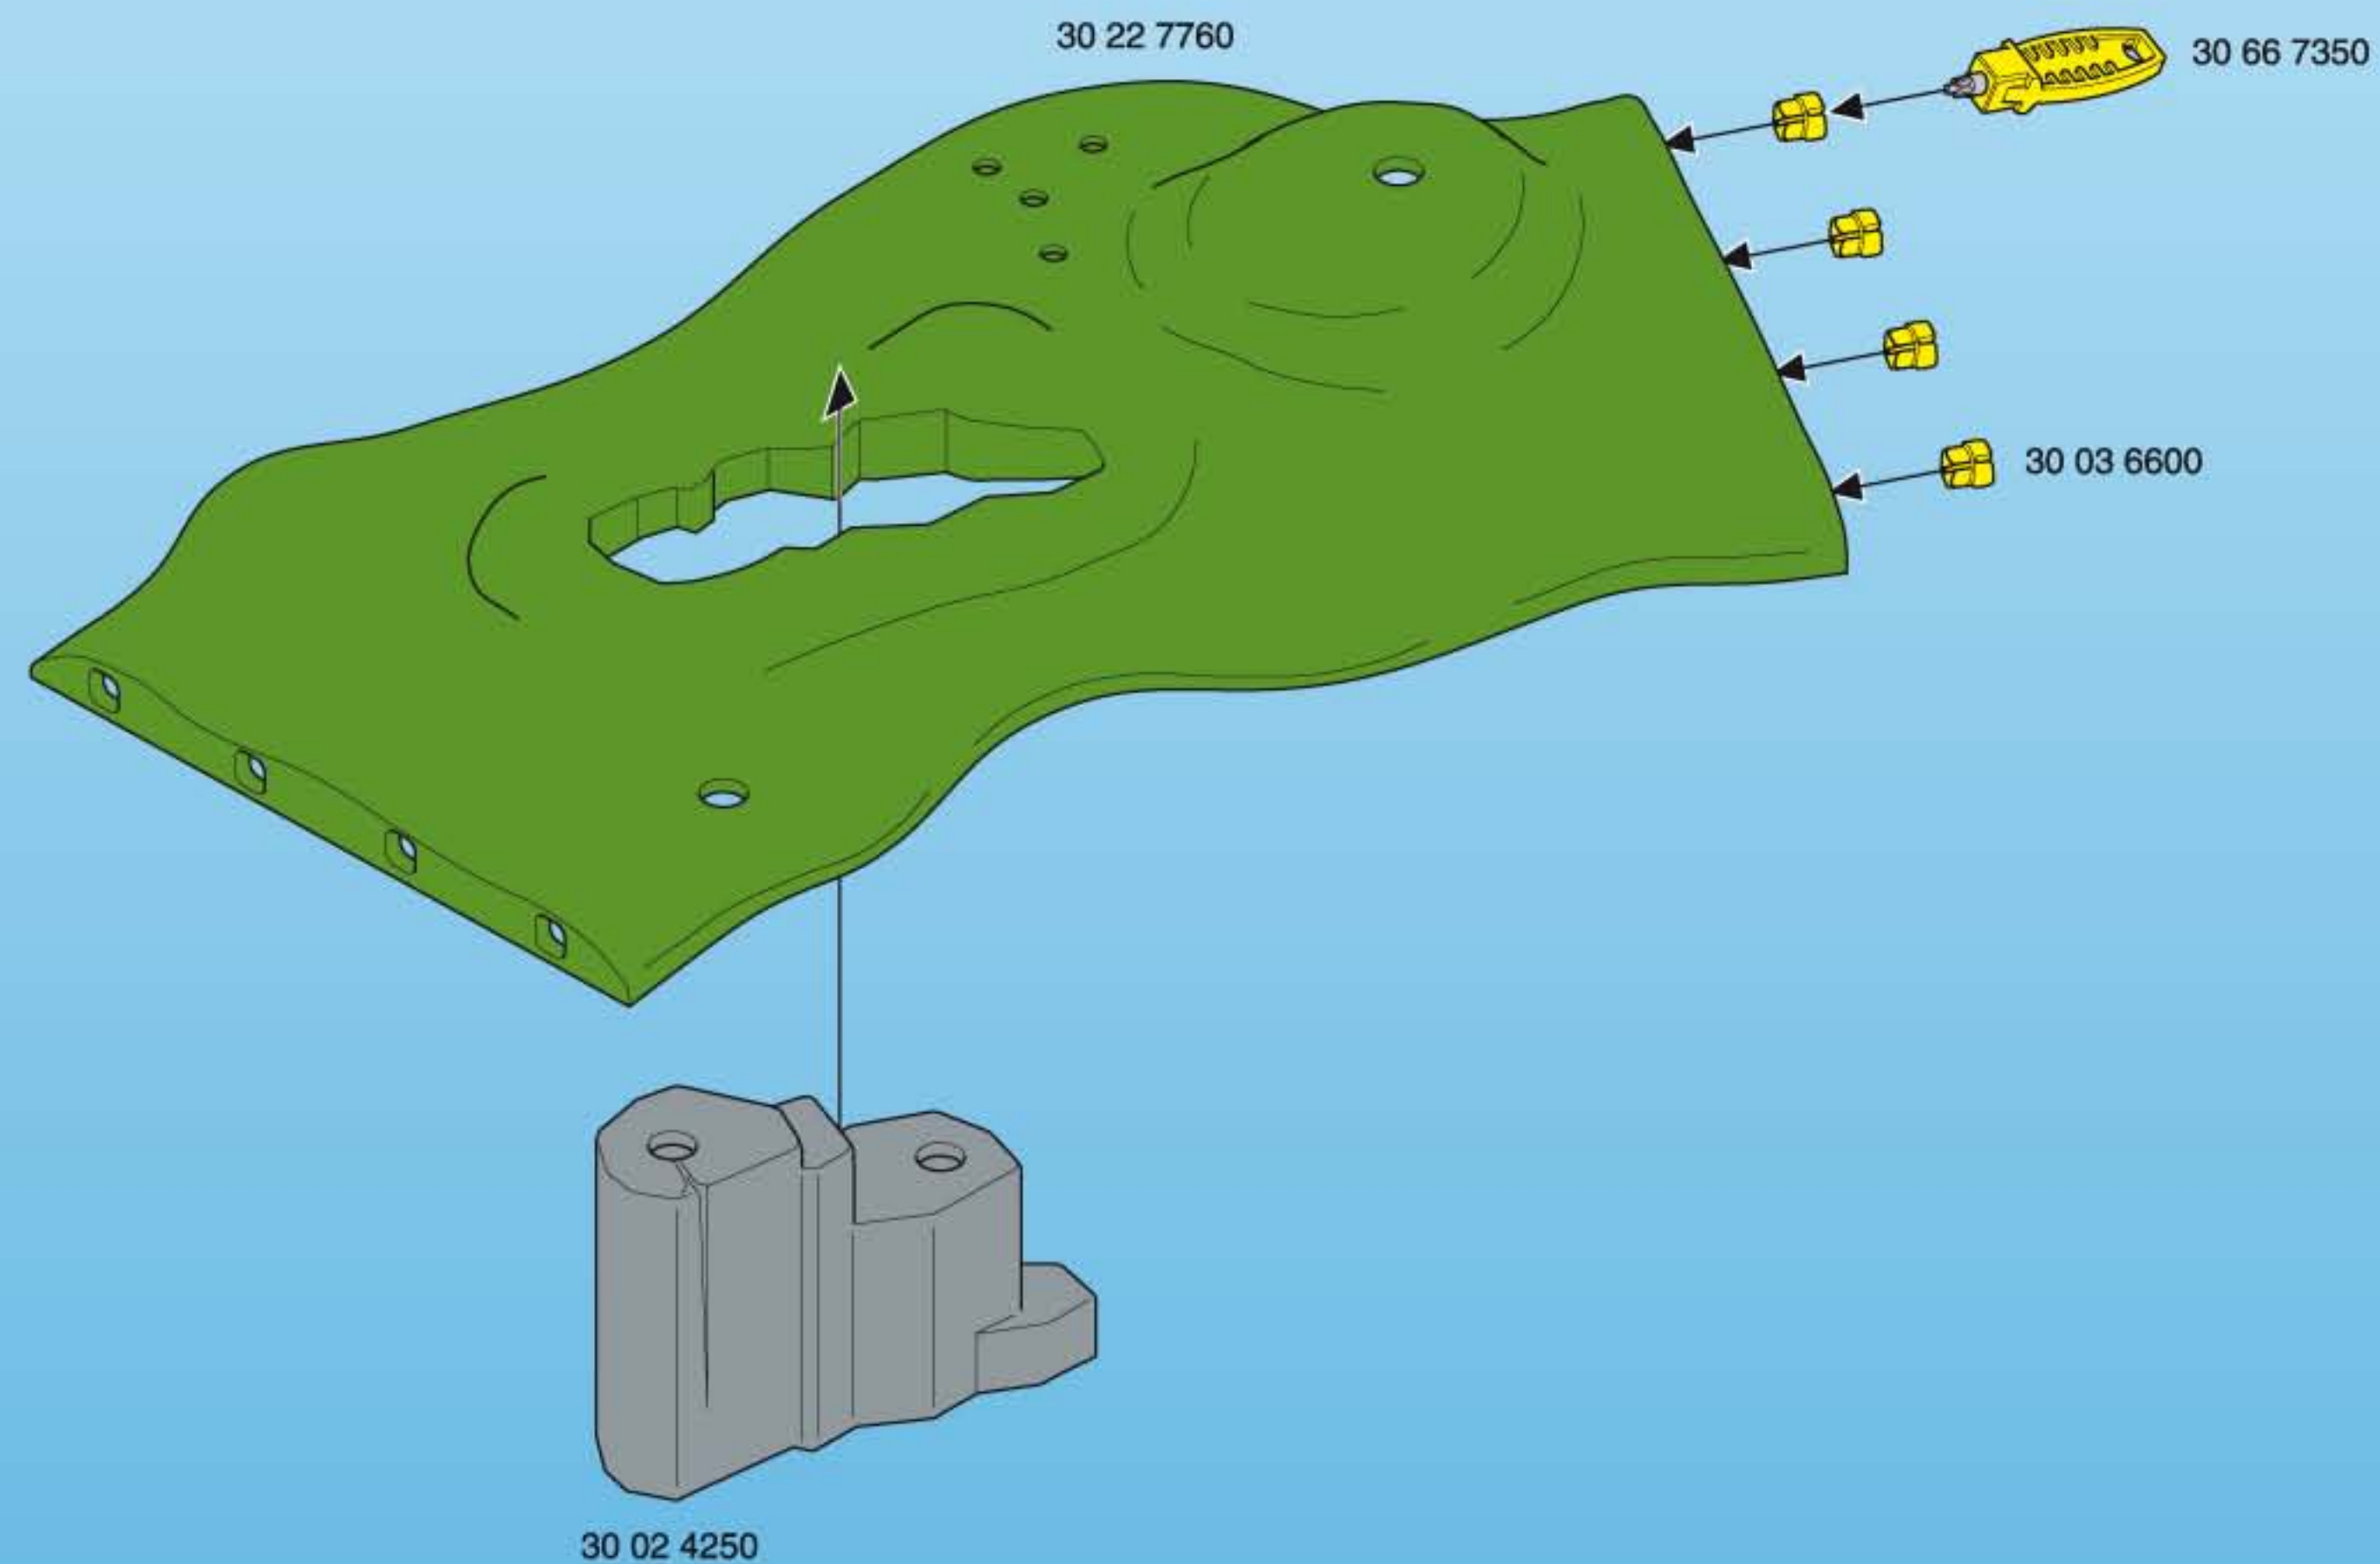 





1 2x

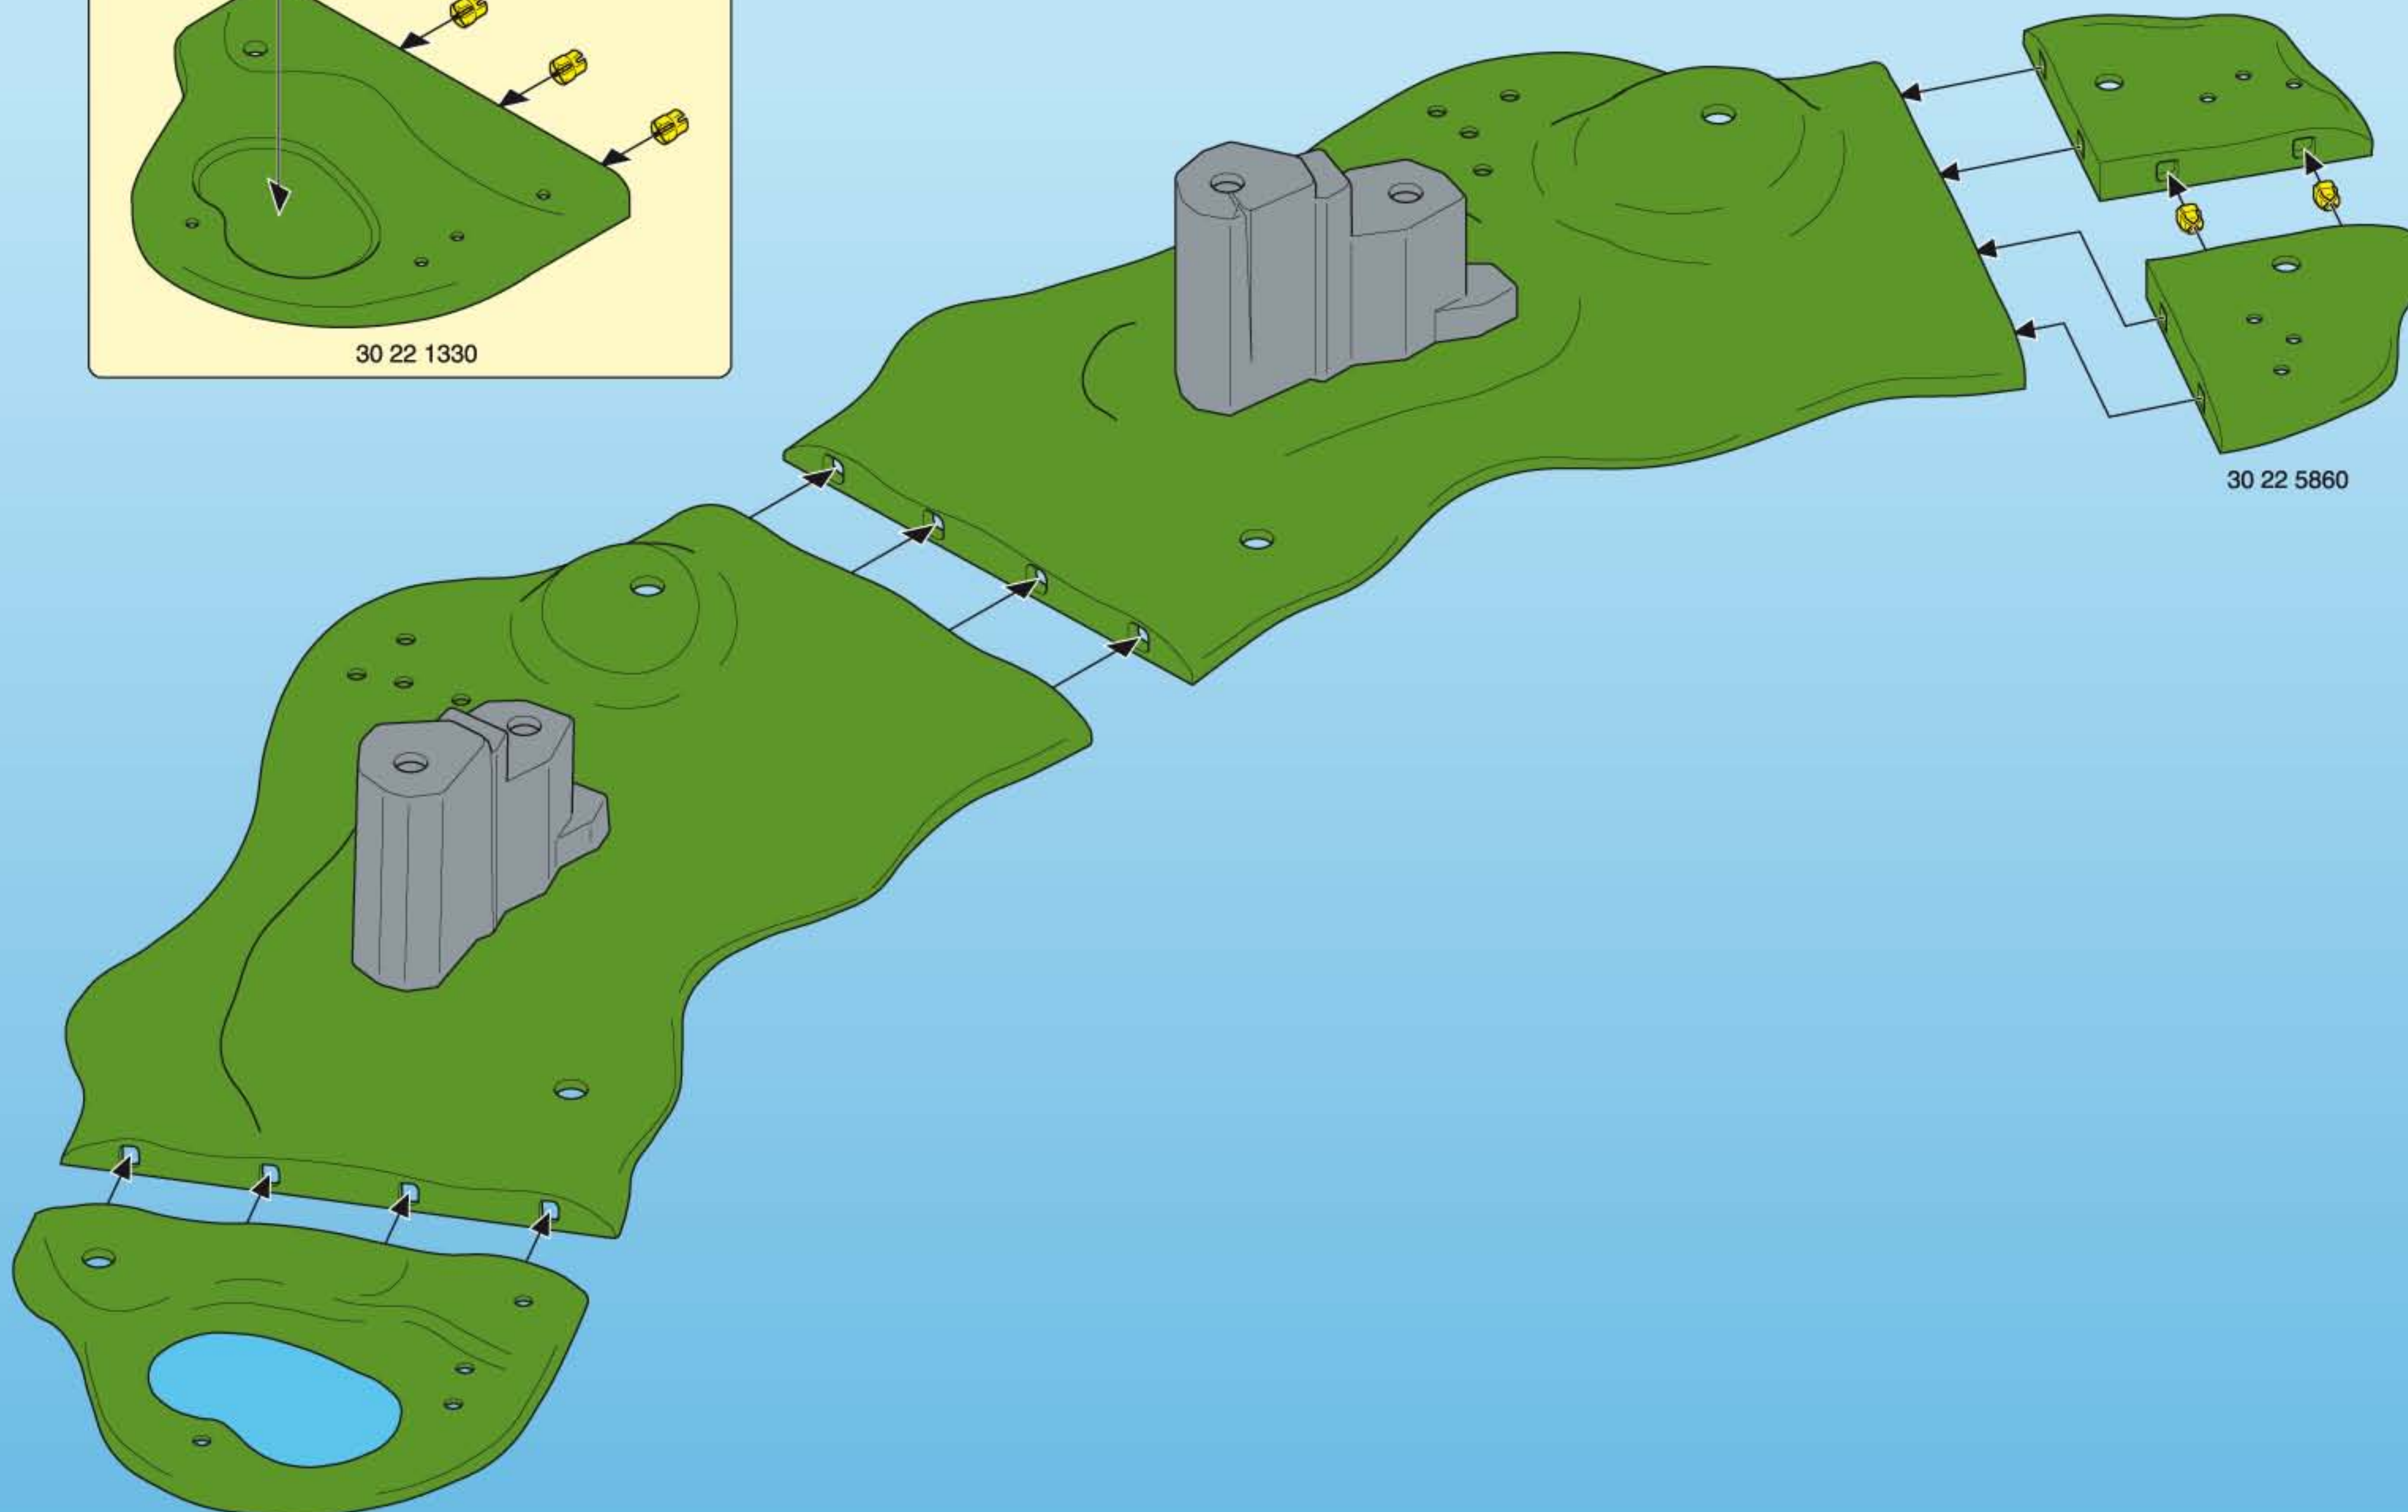




2

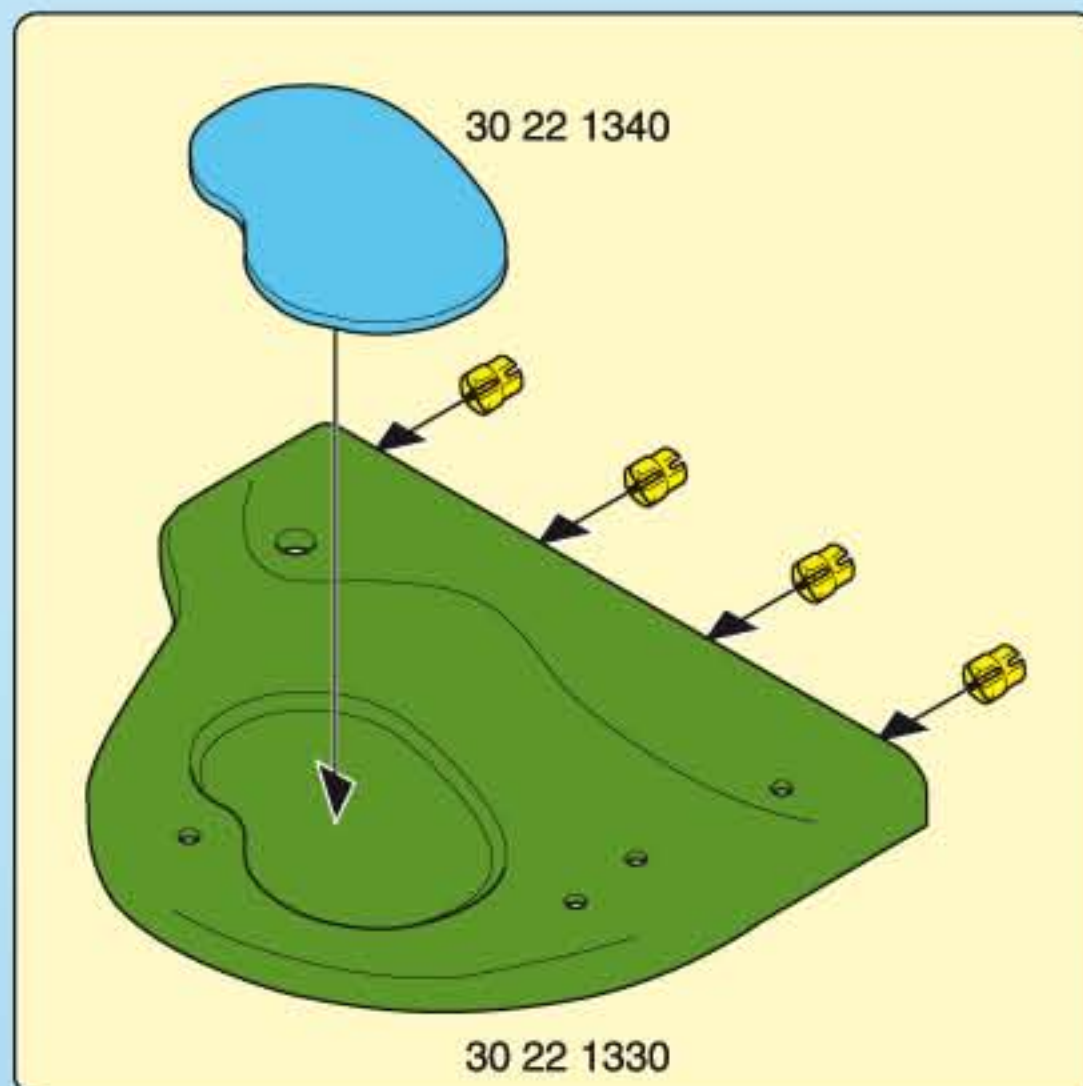

   3

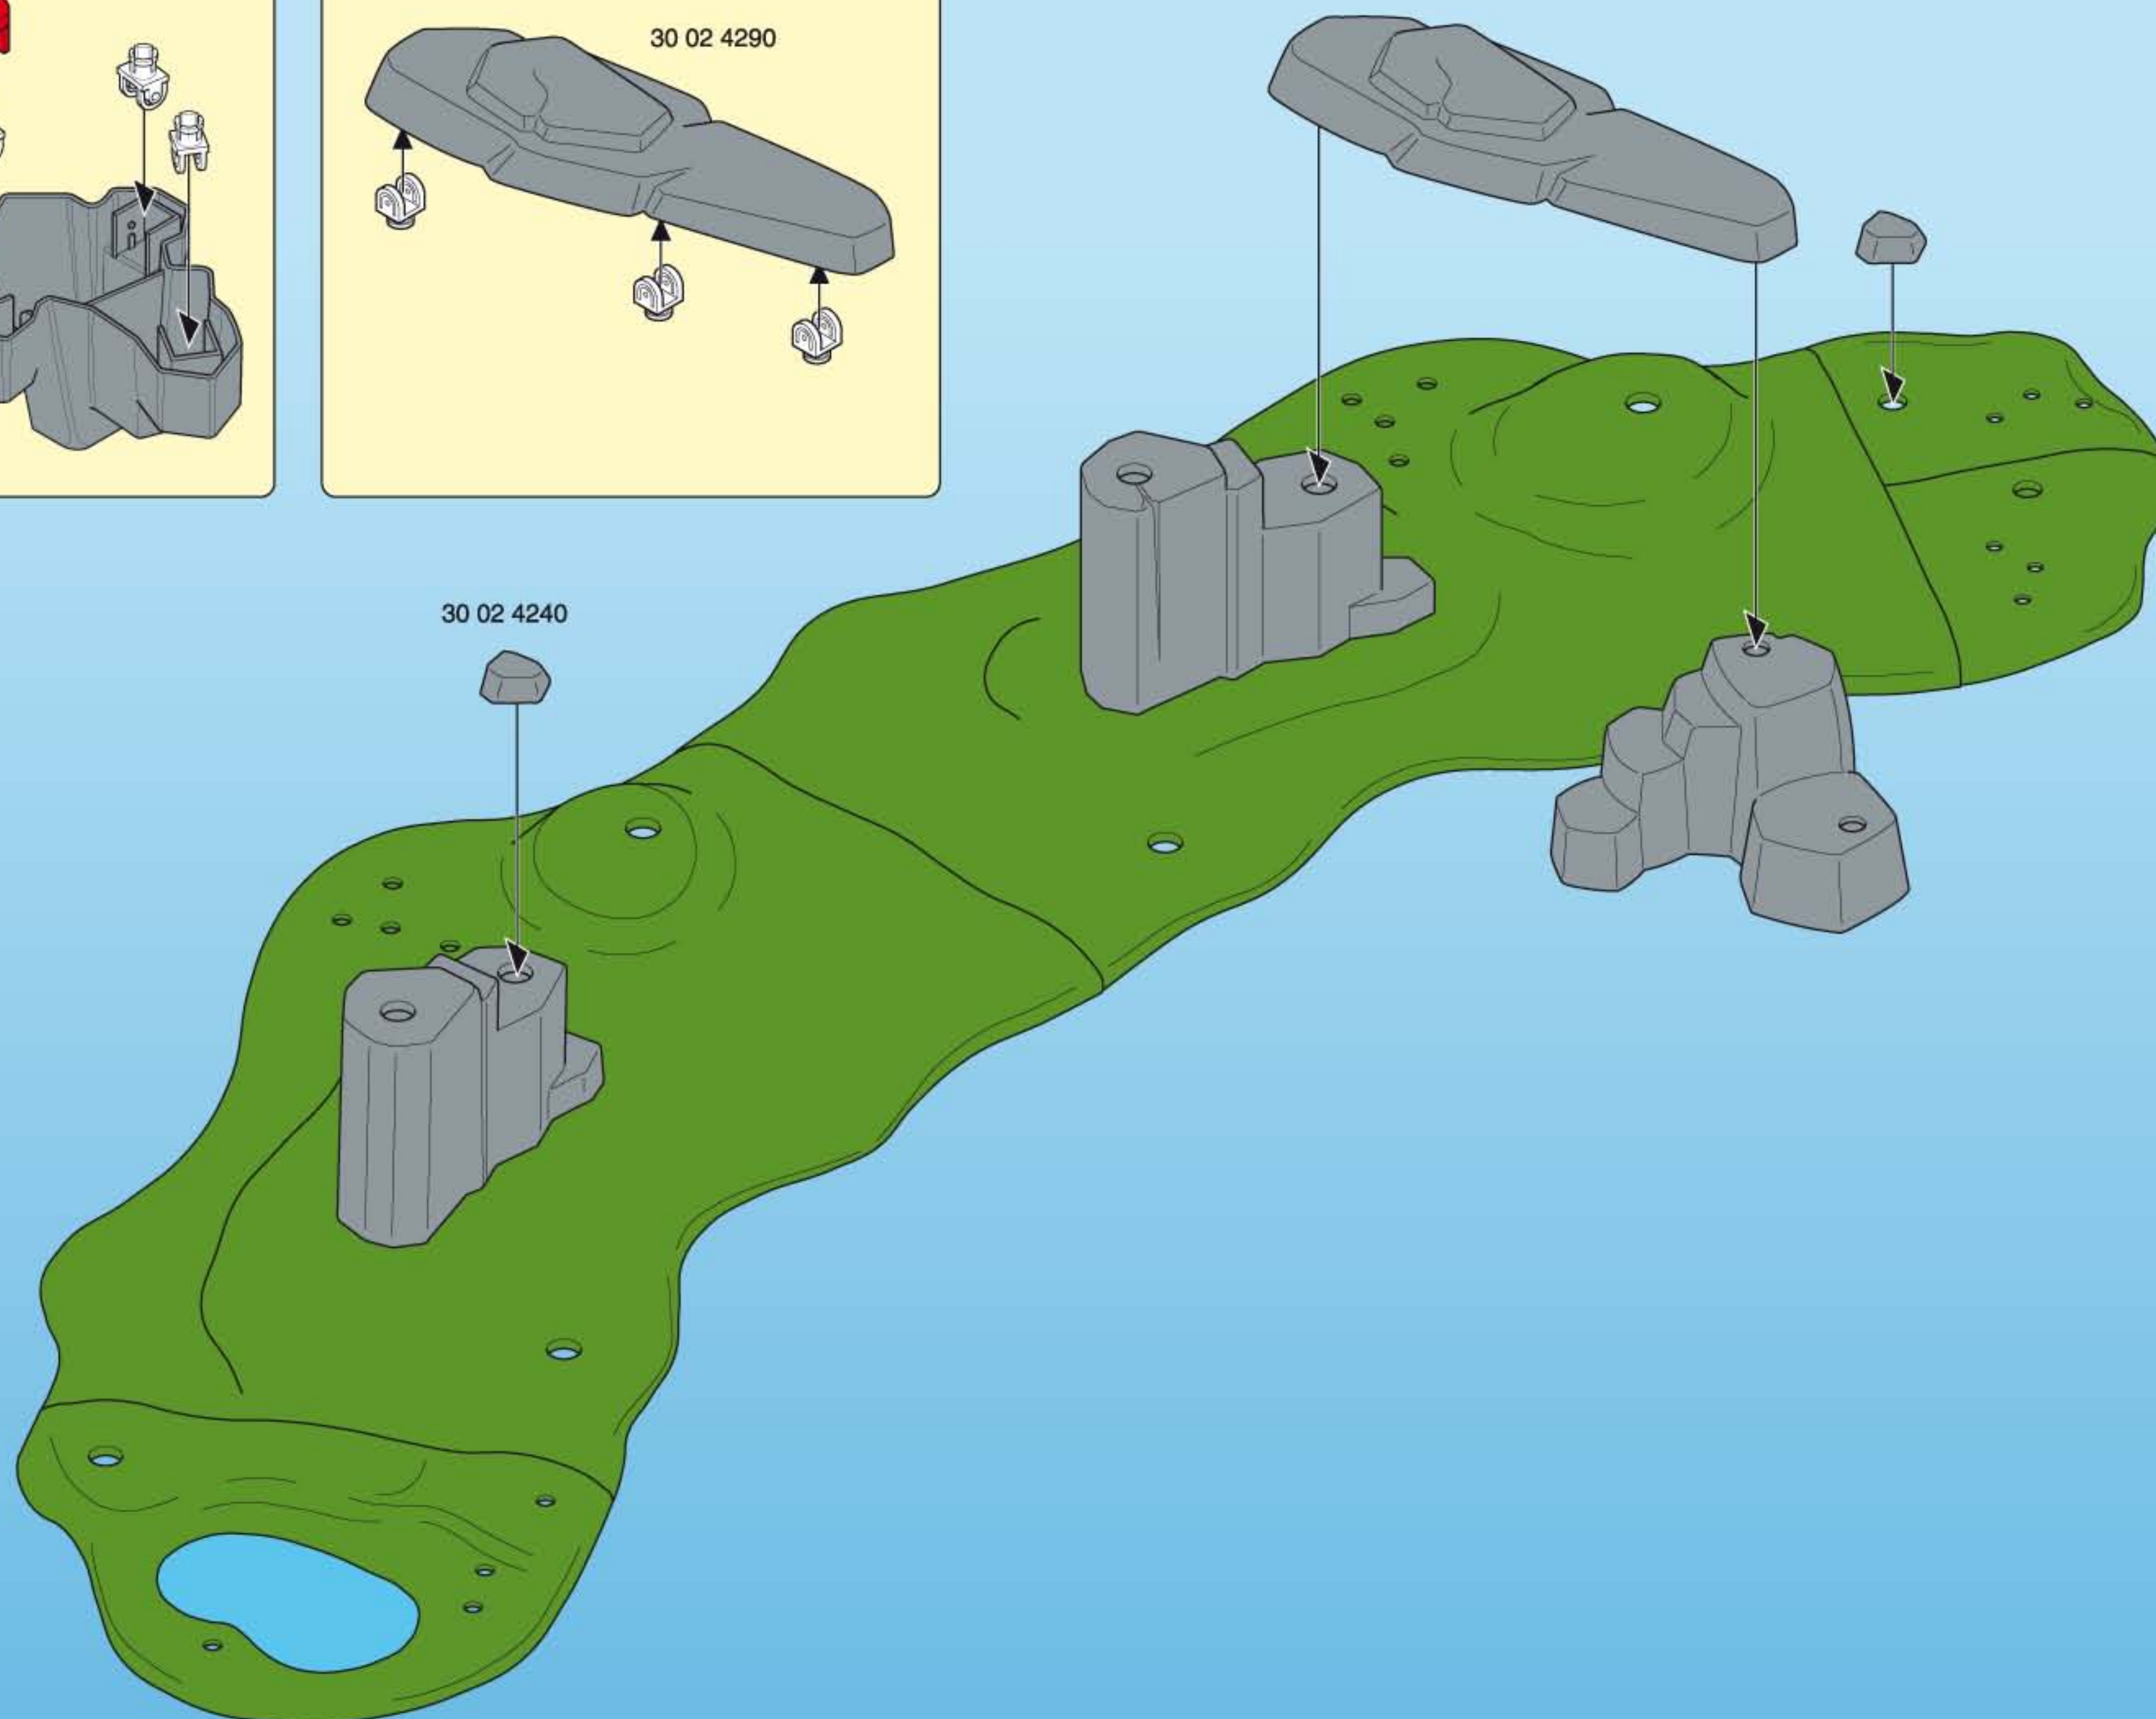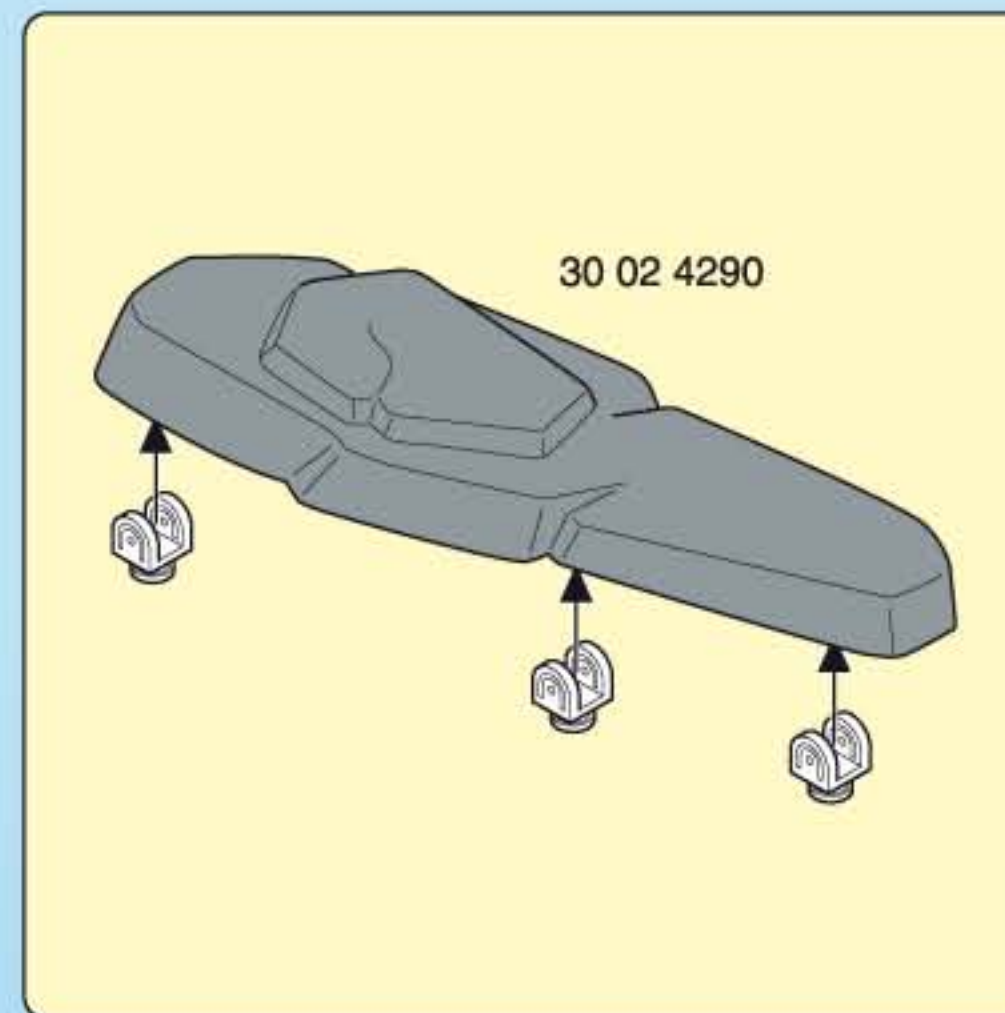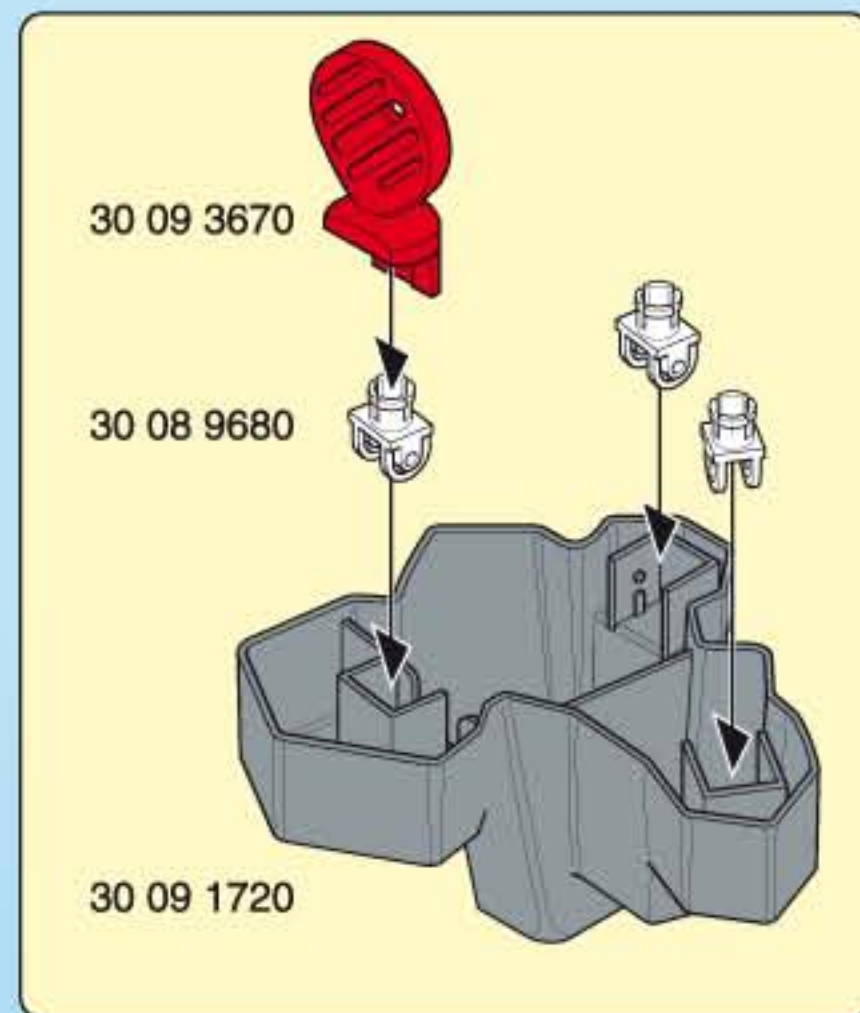


4

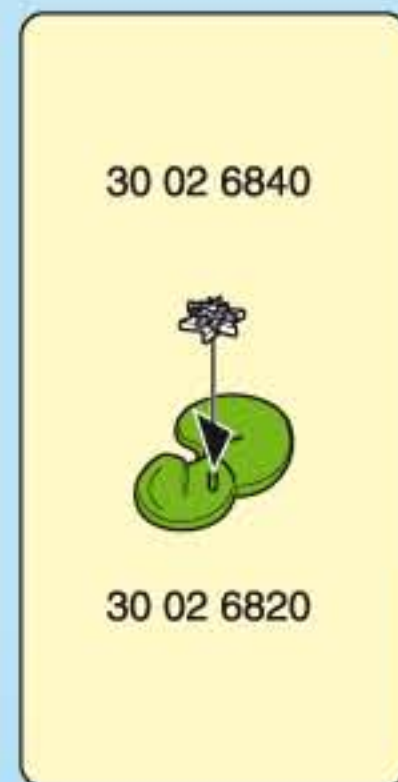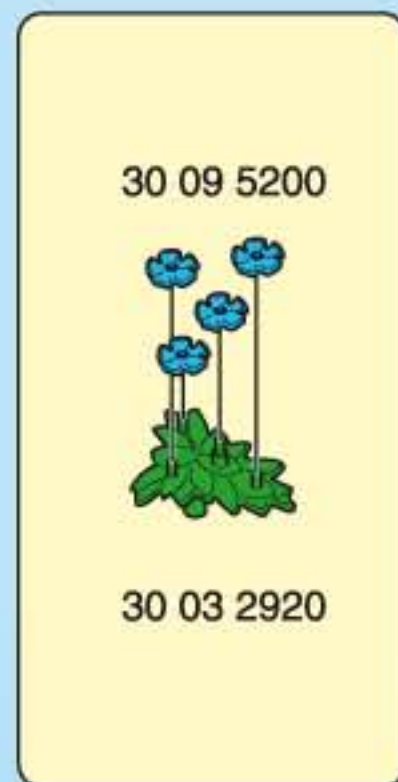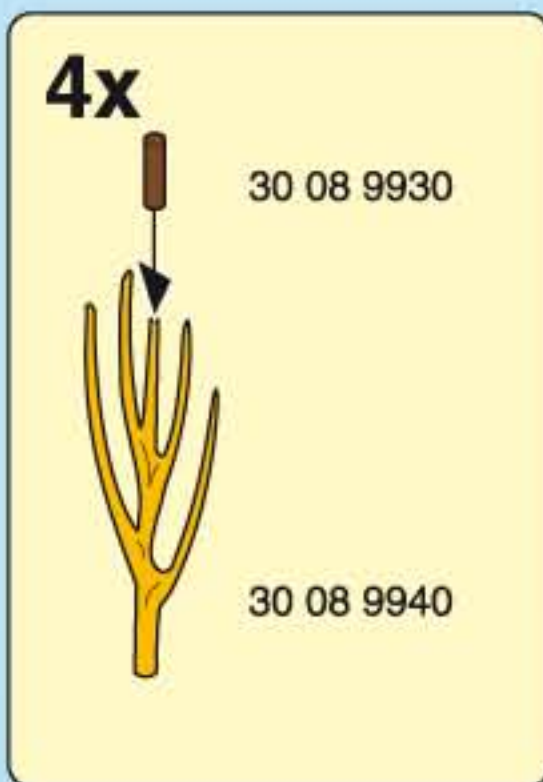   

30 09 1760




 30 04 2760

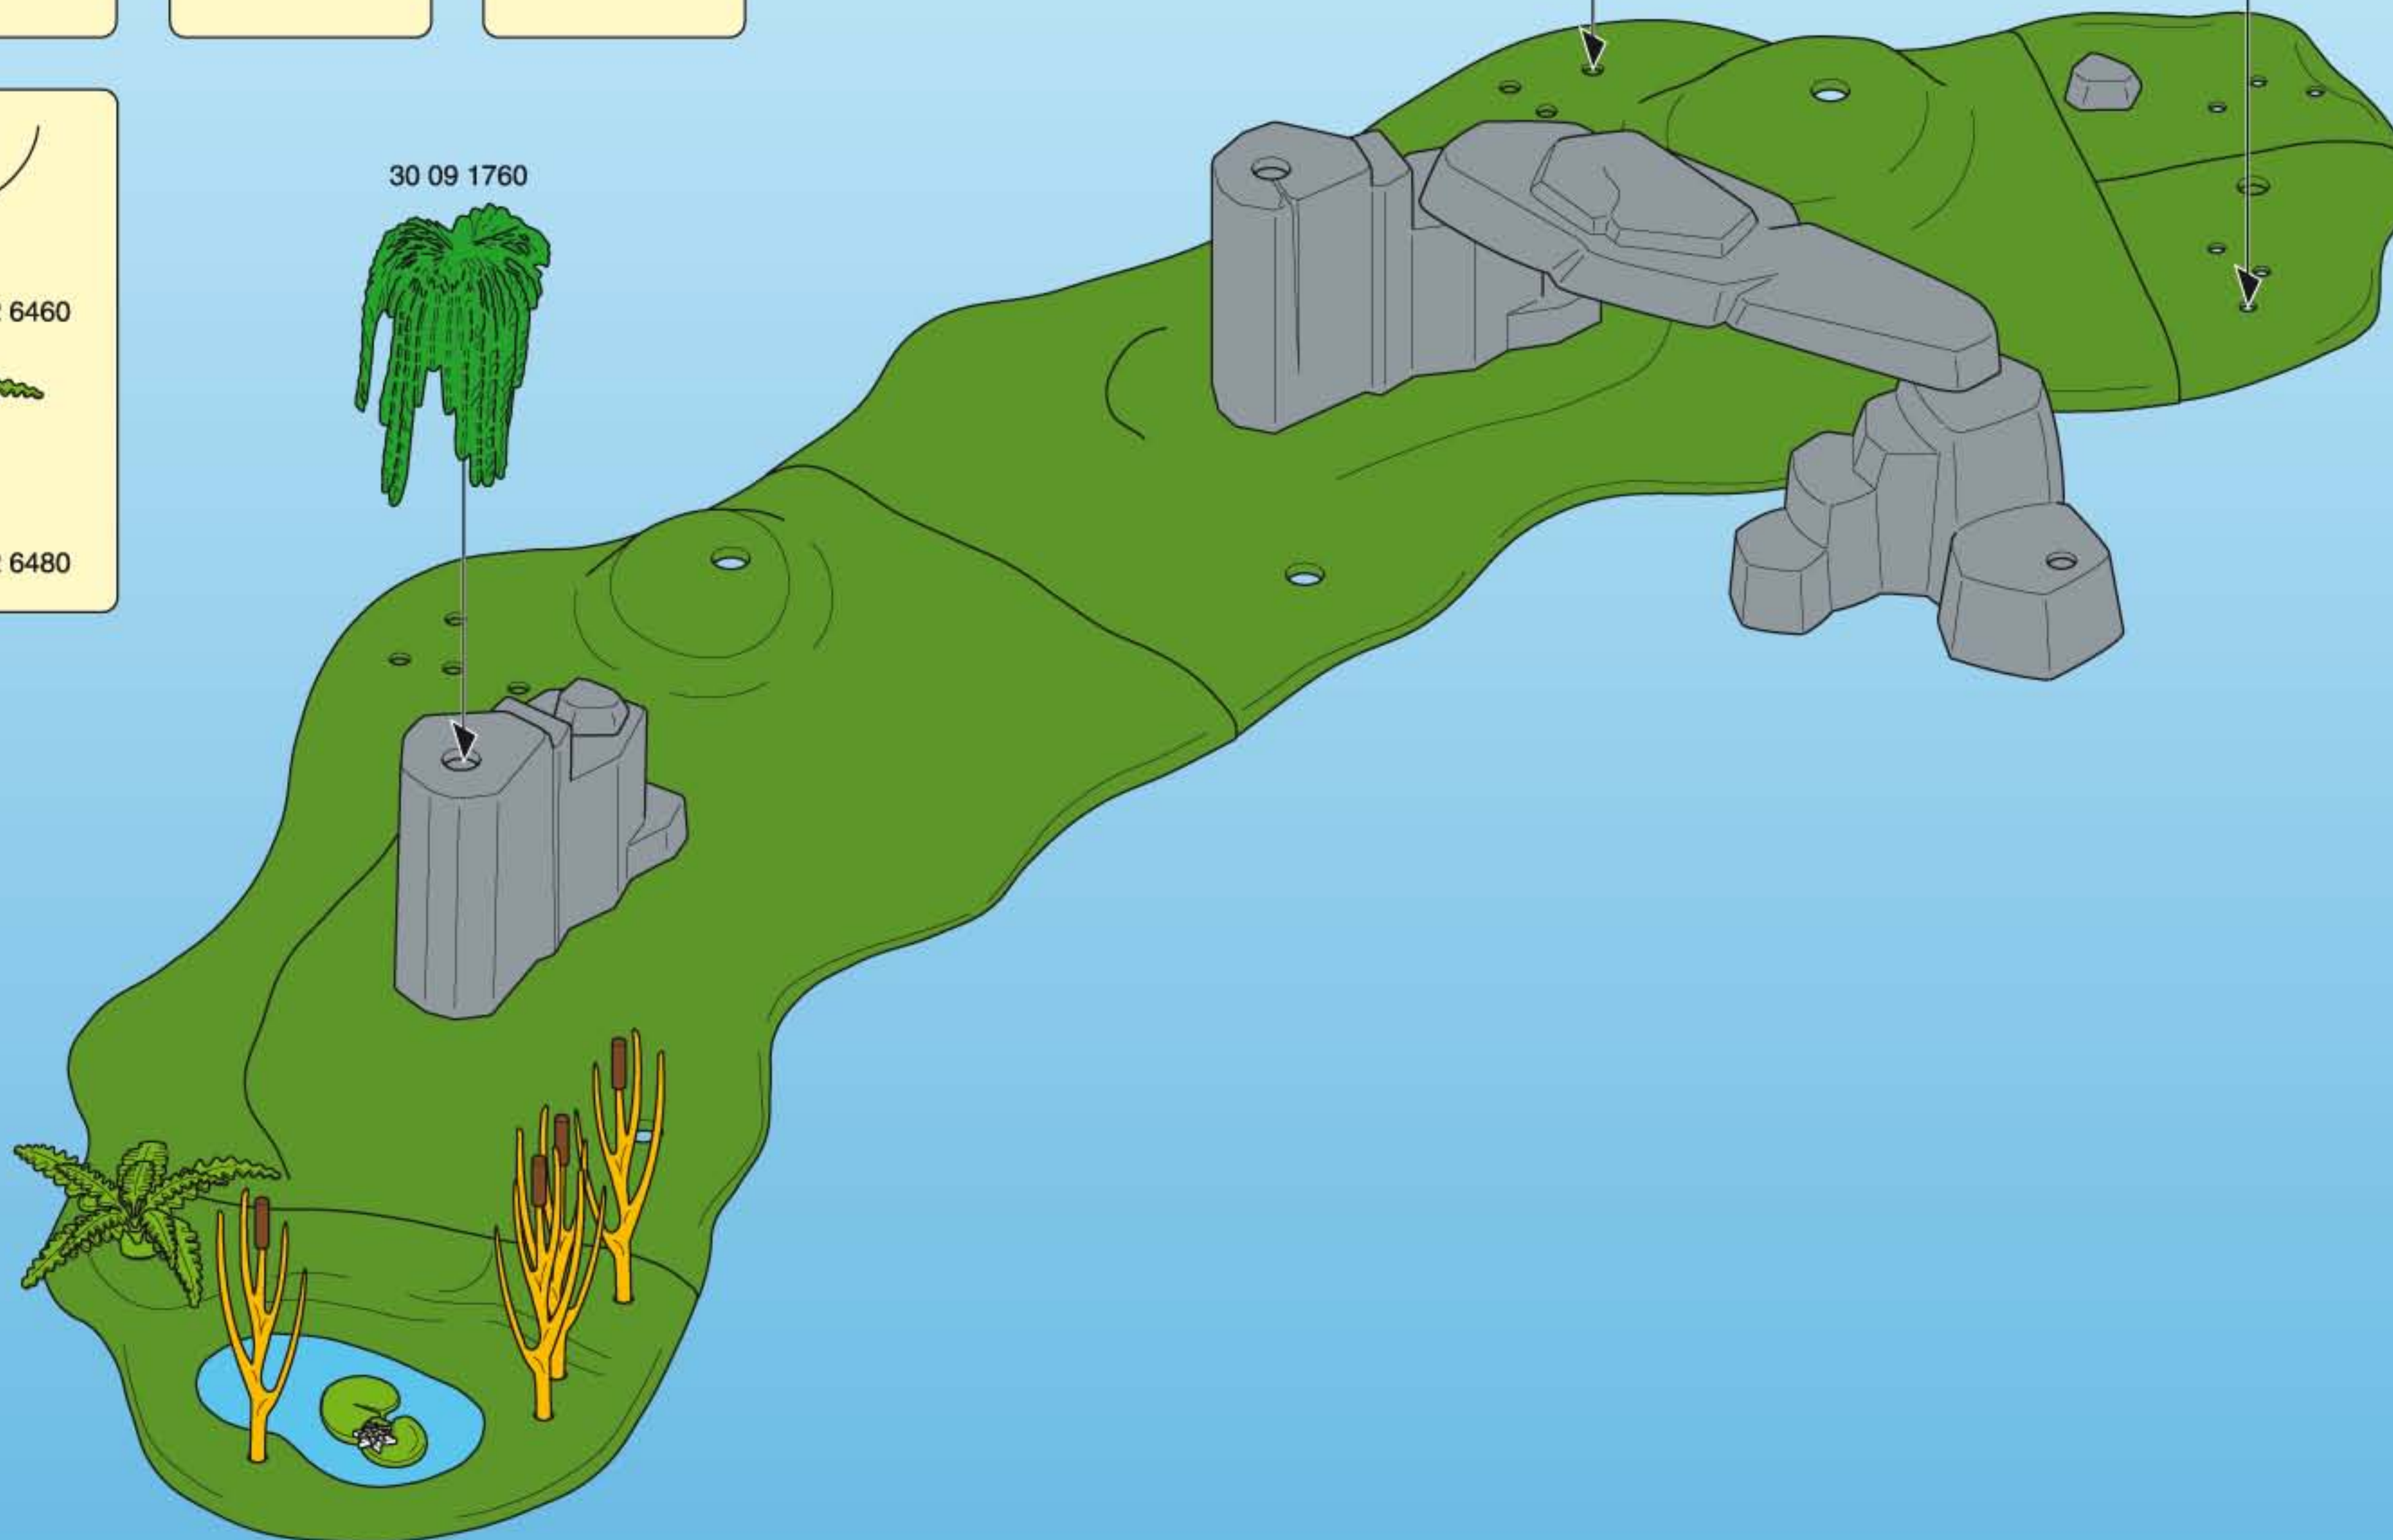

5

 2x

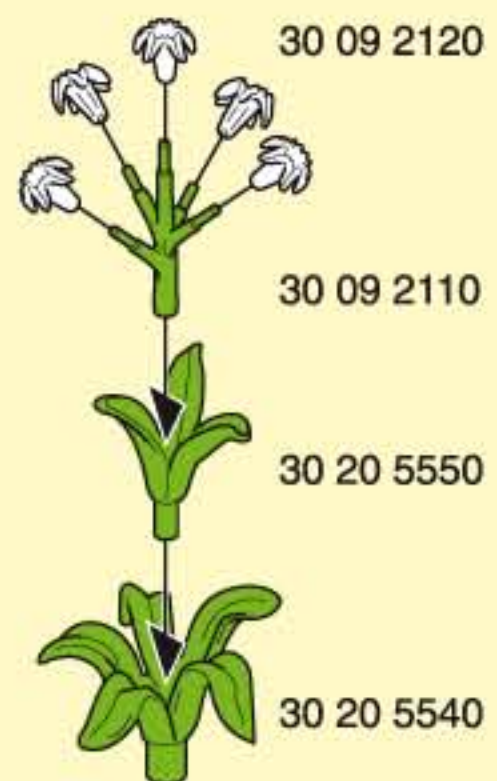


3x






3x







 
30 05 9720

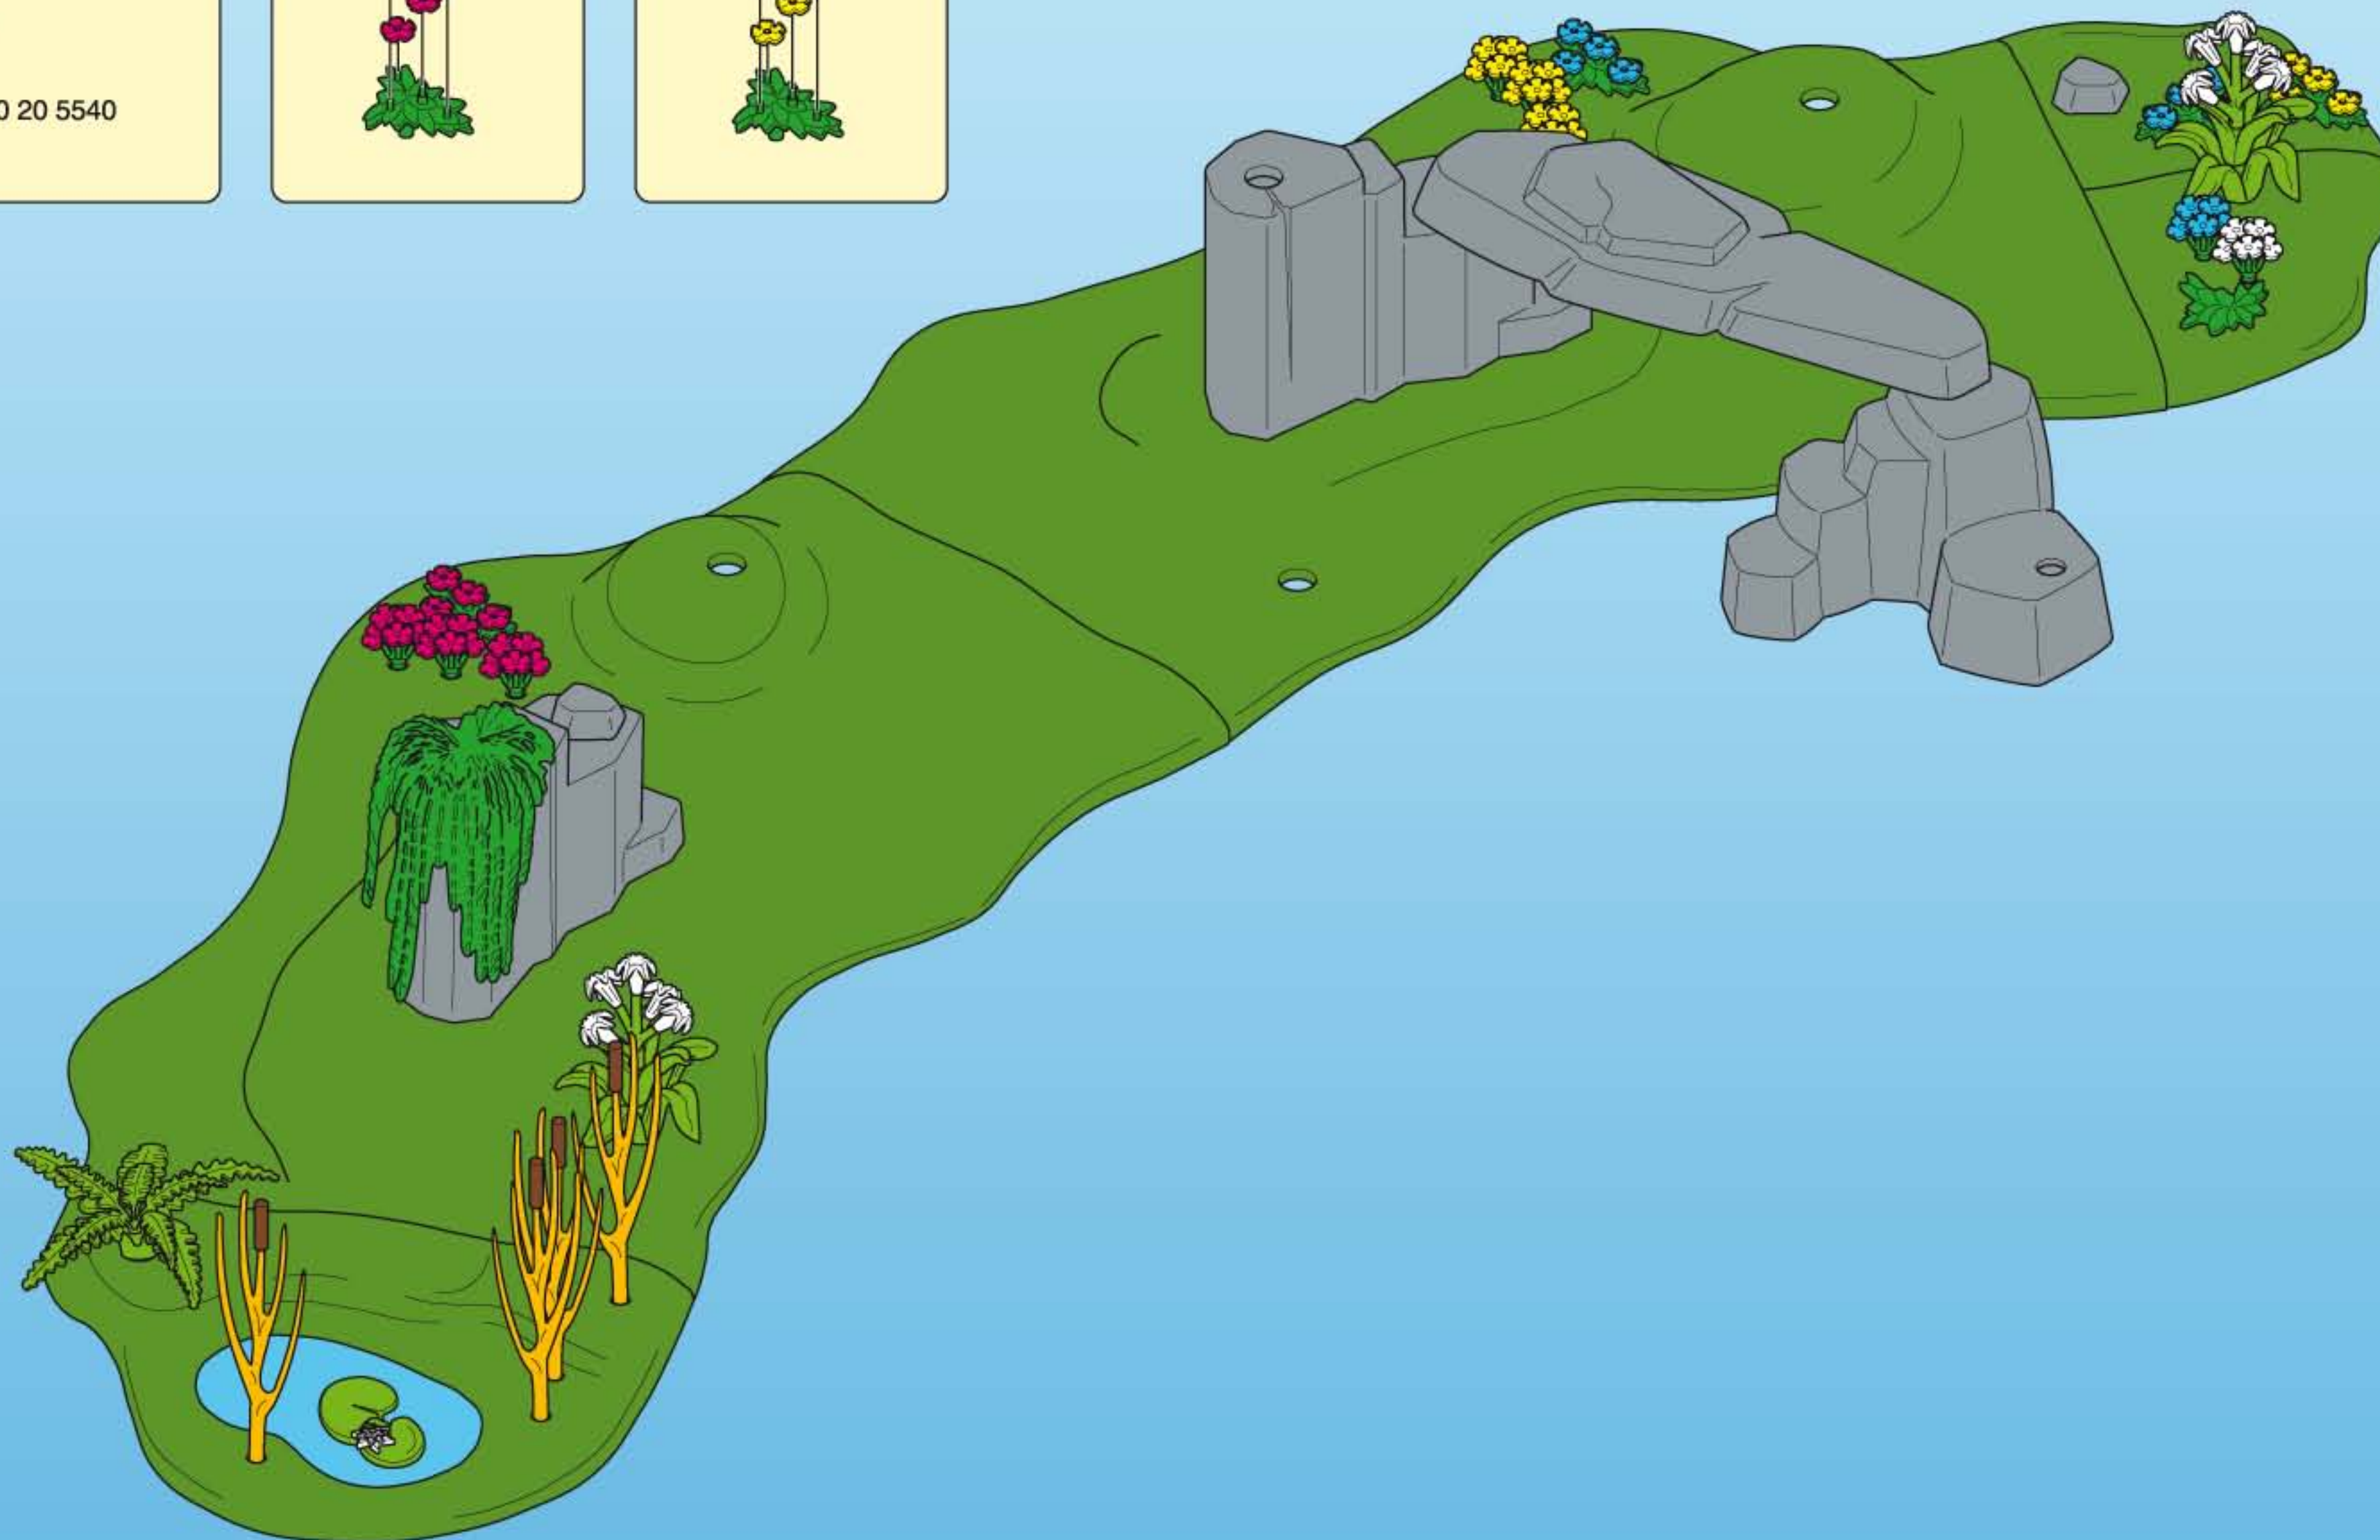

6

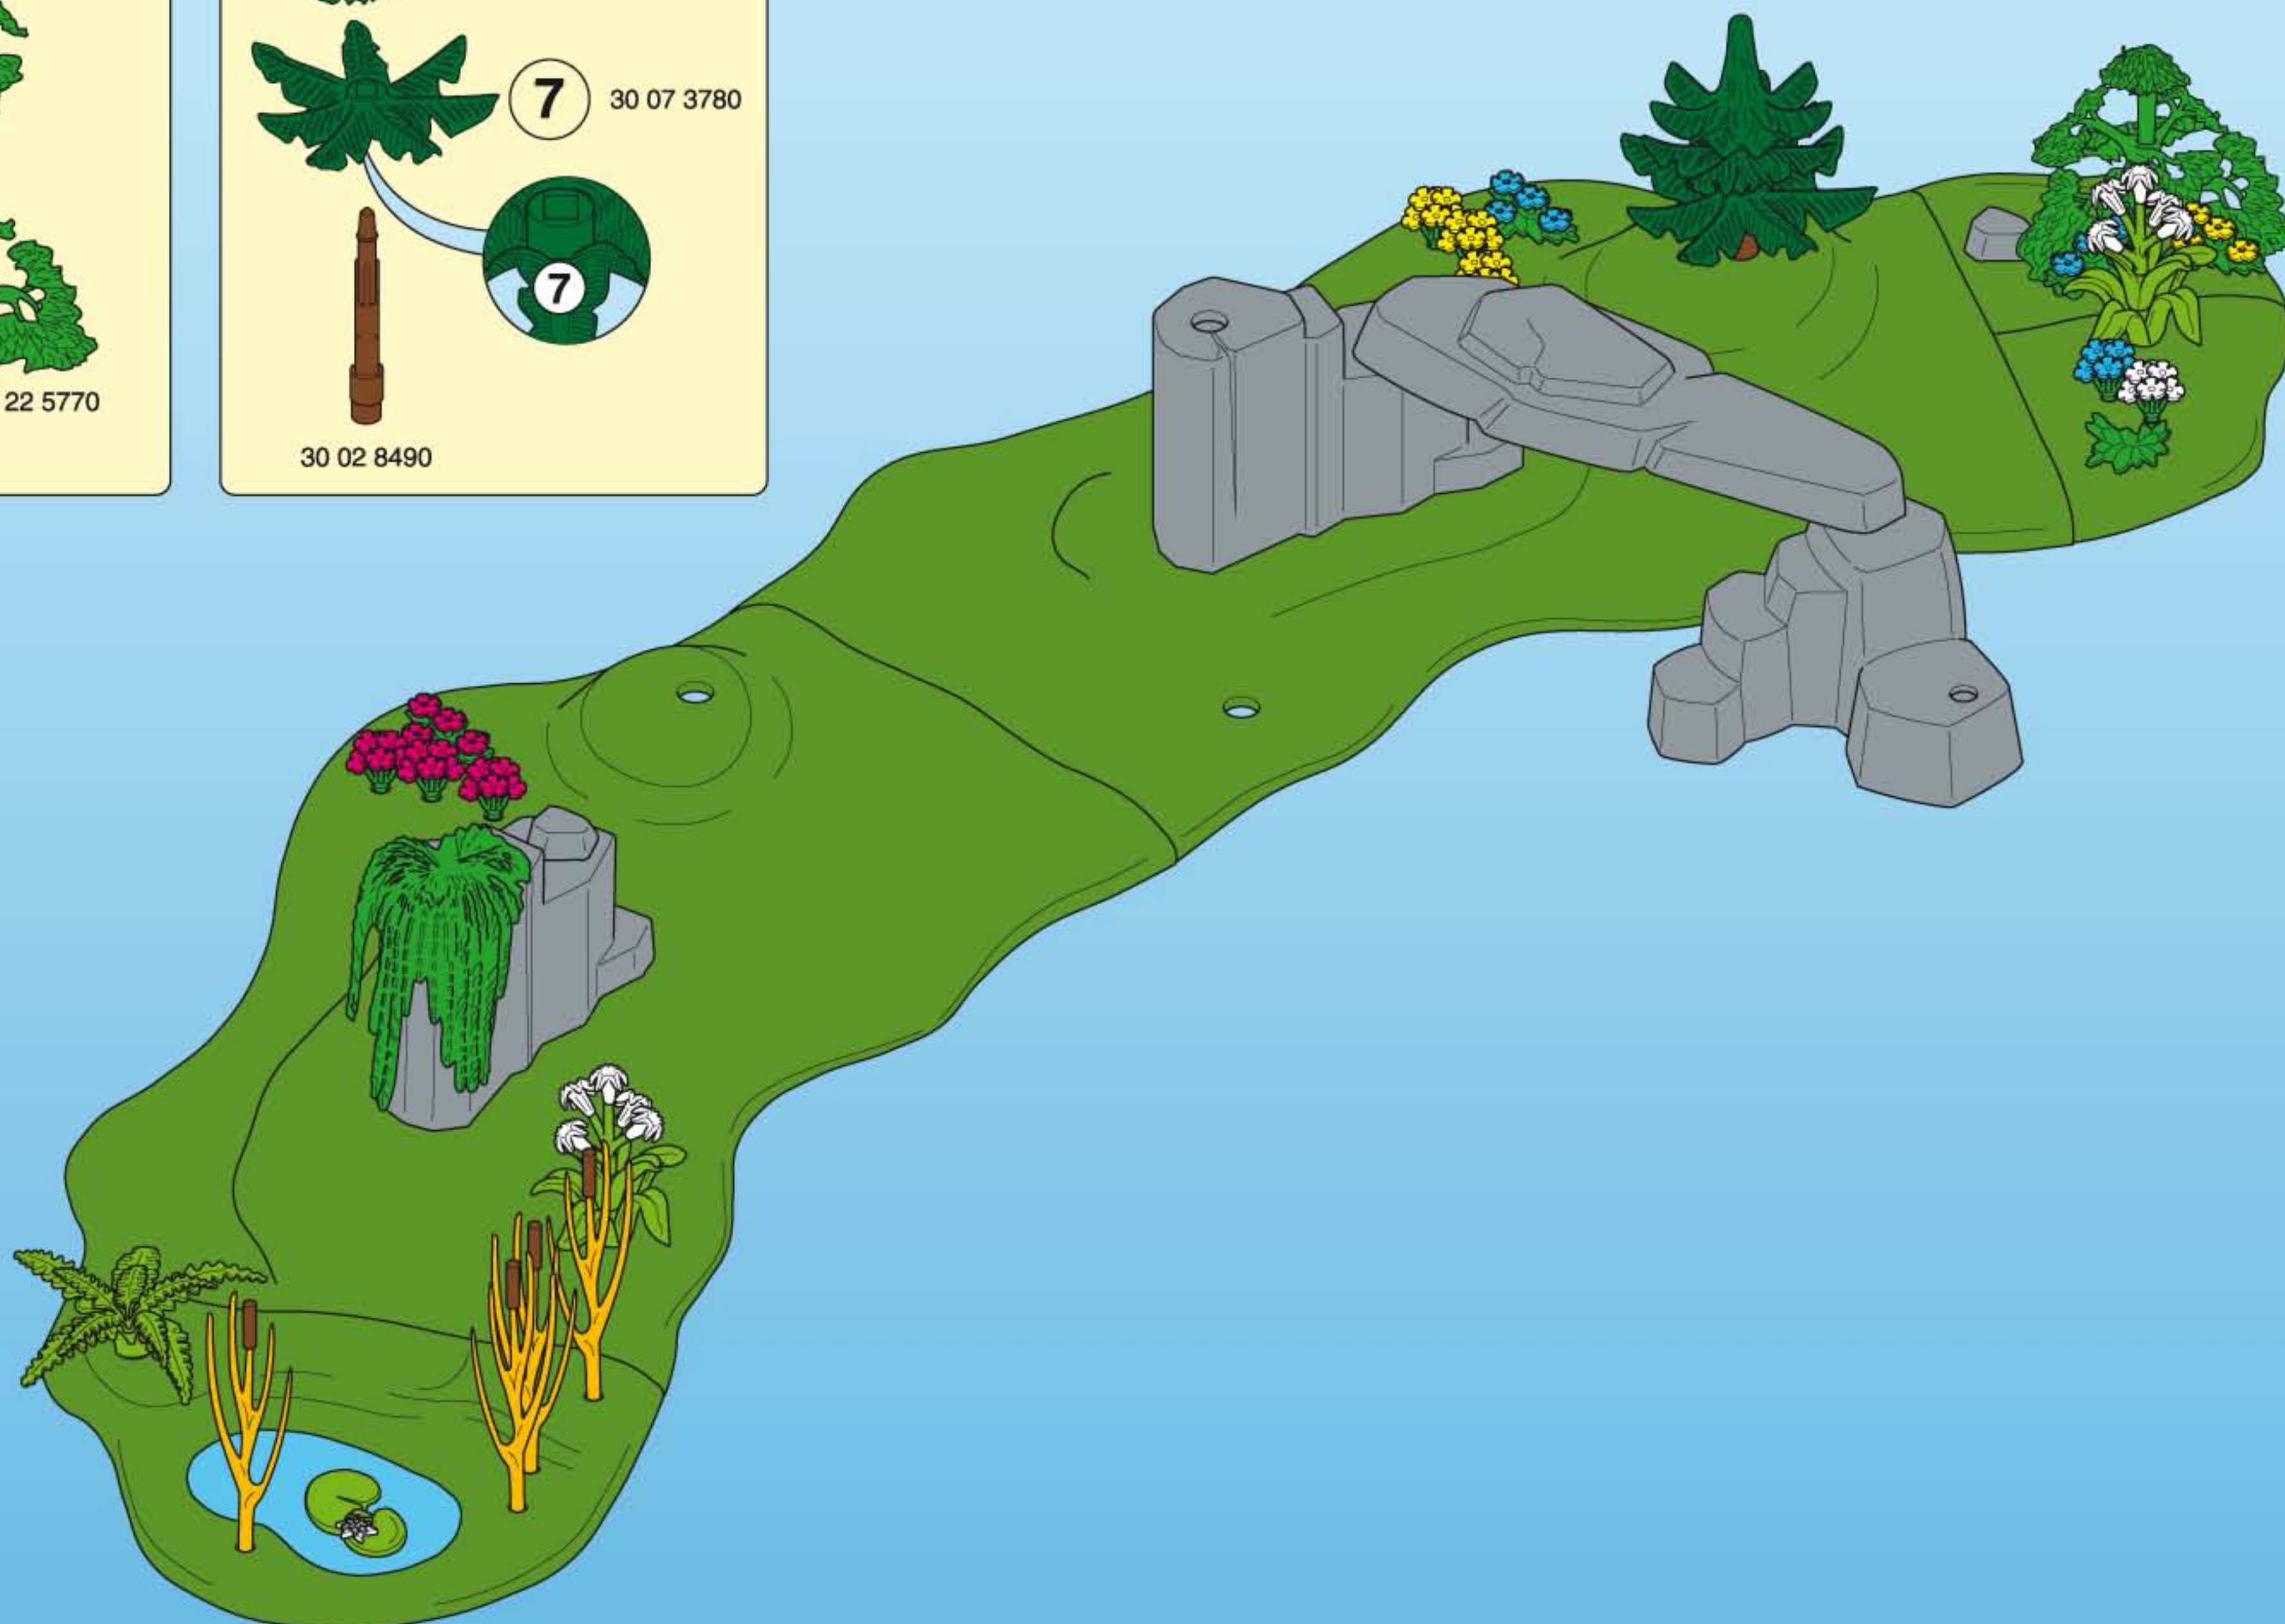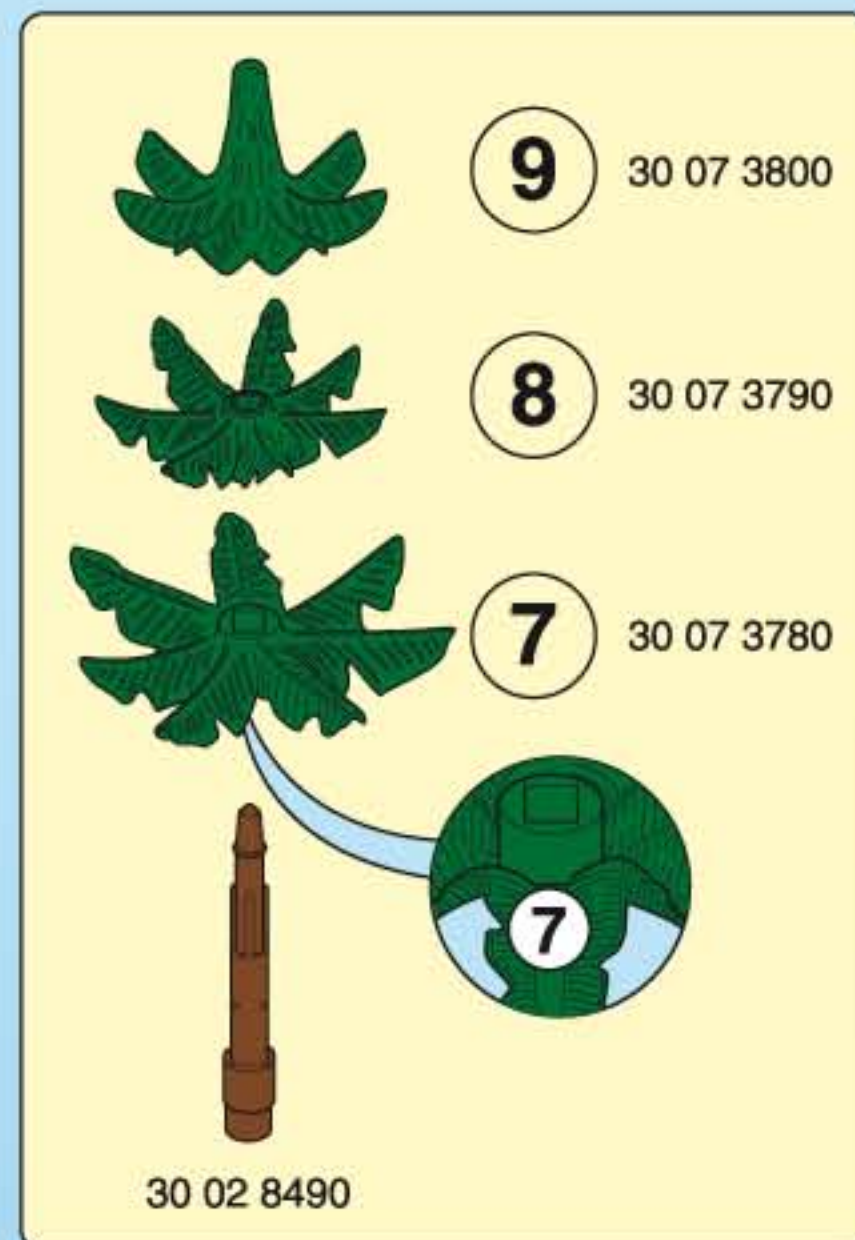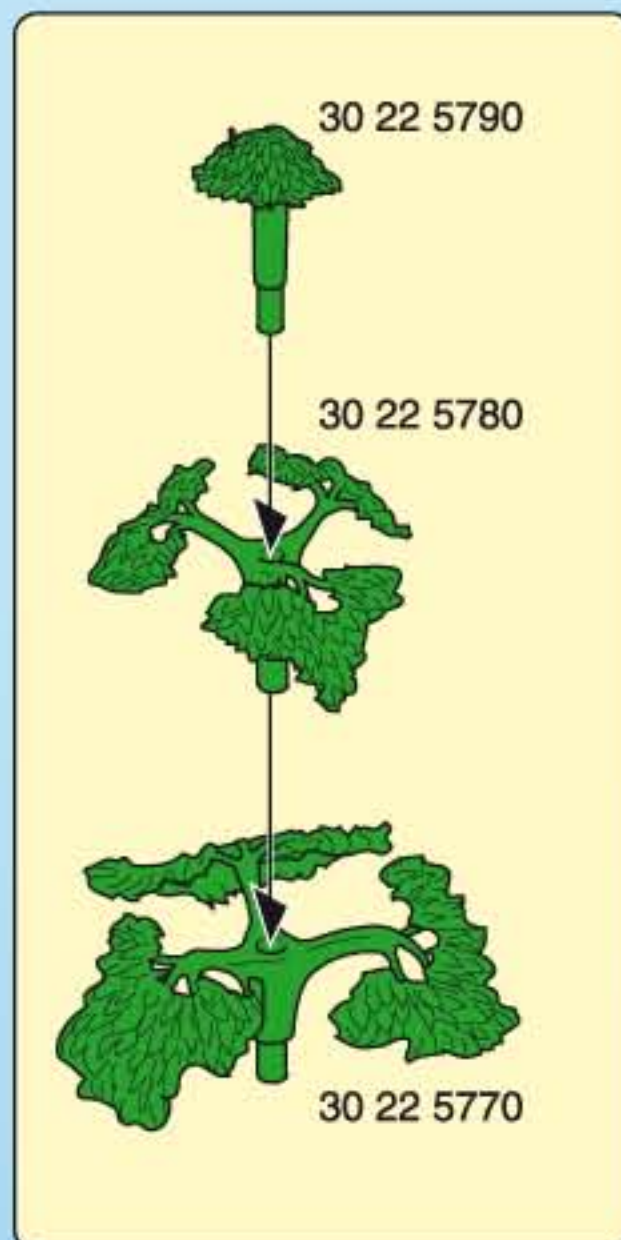   

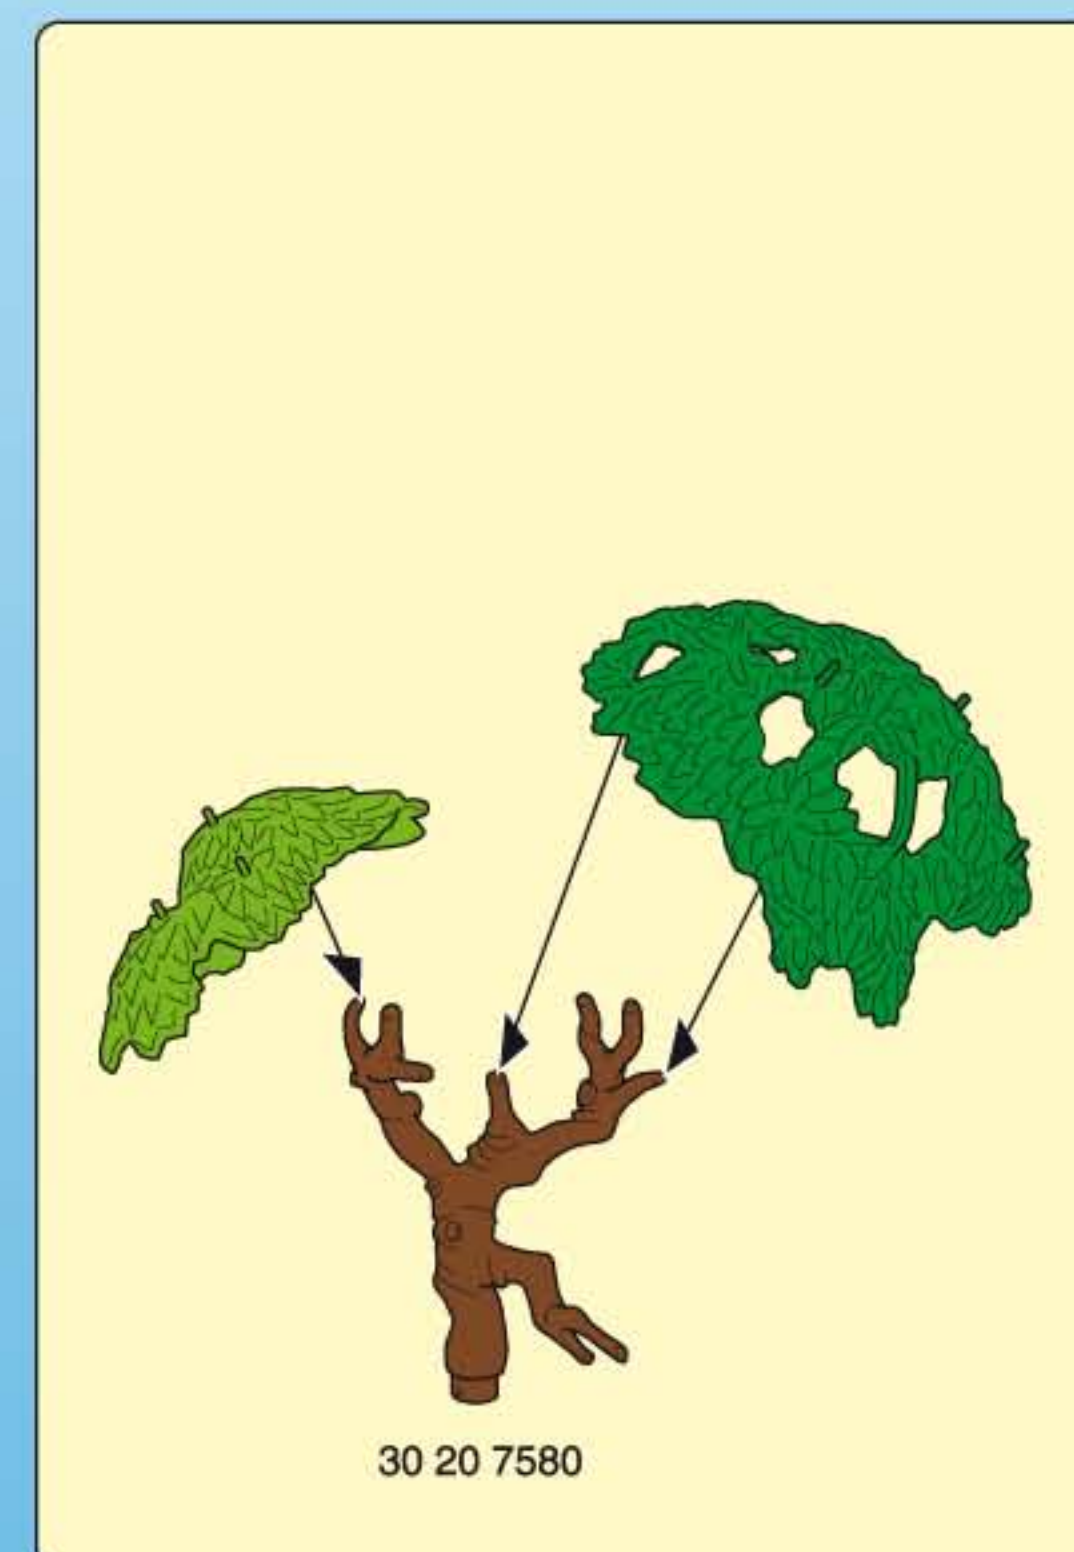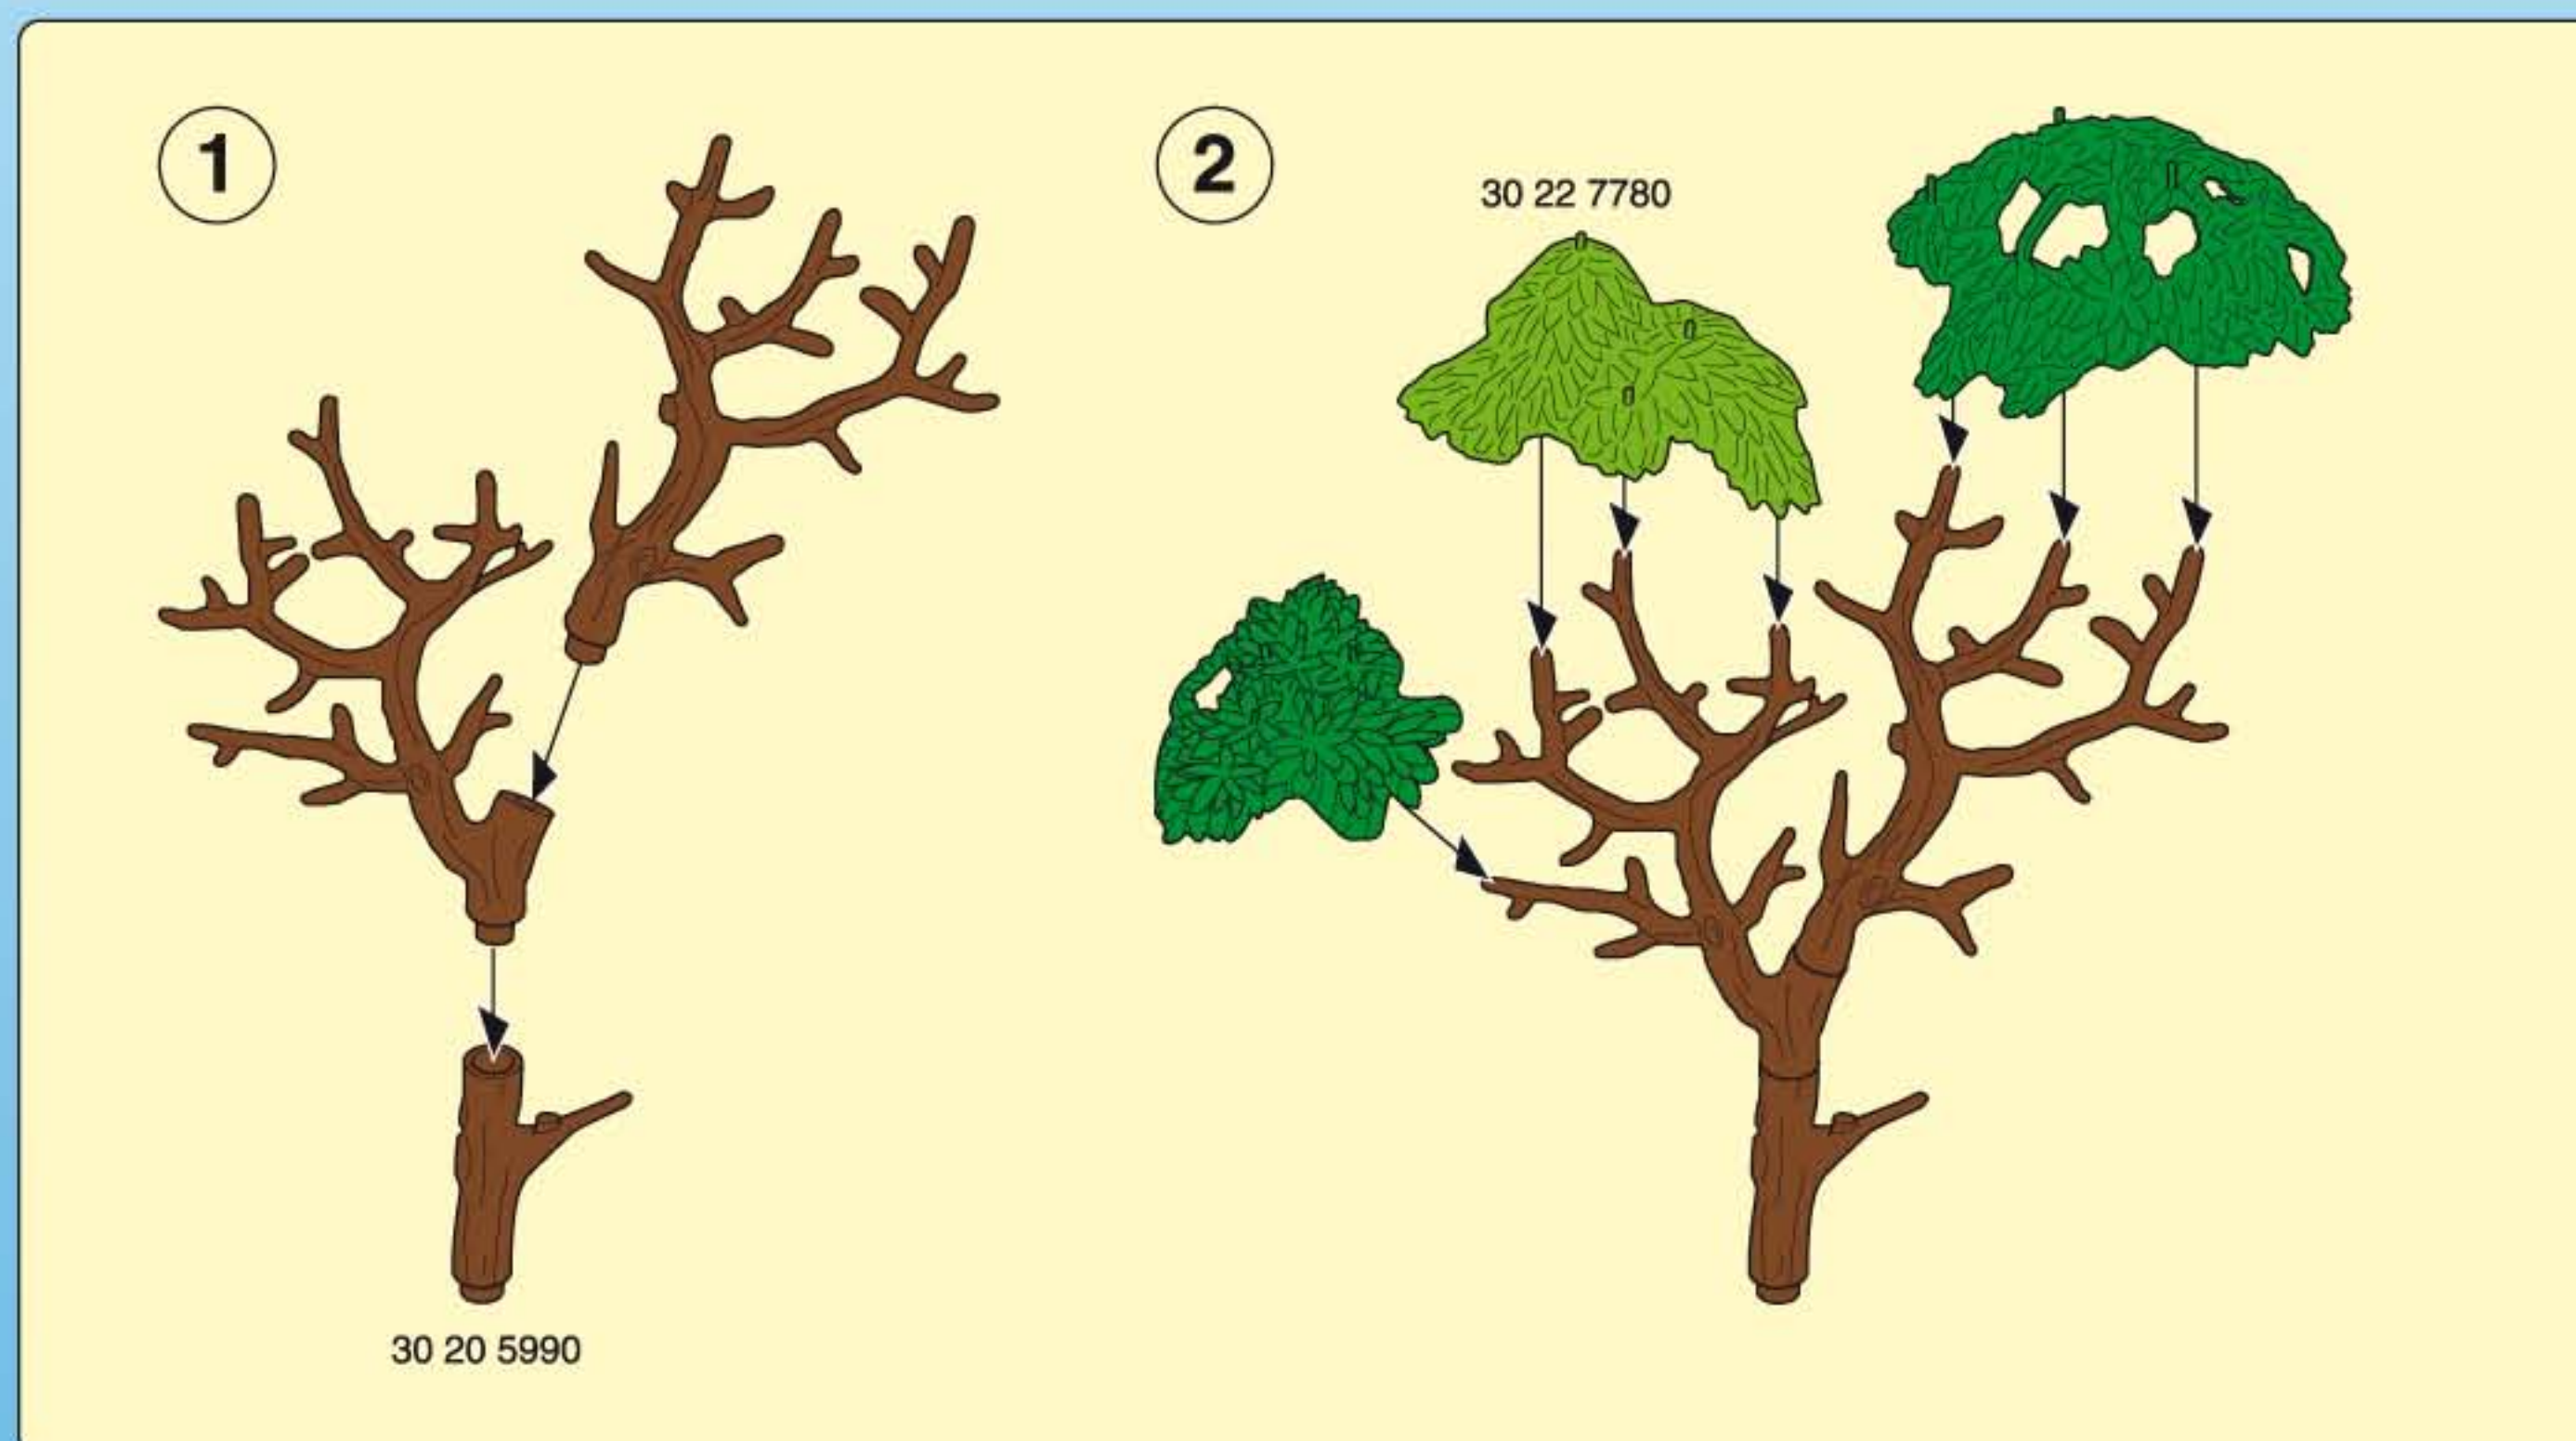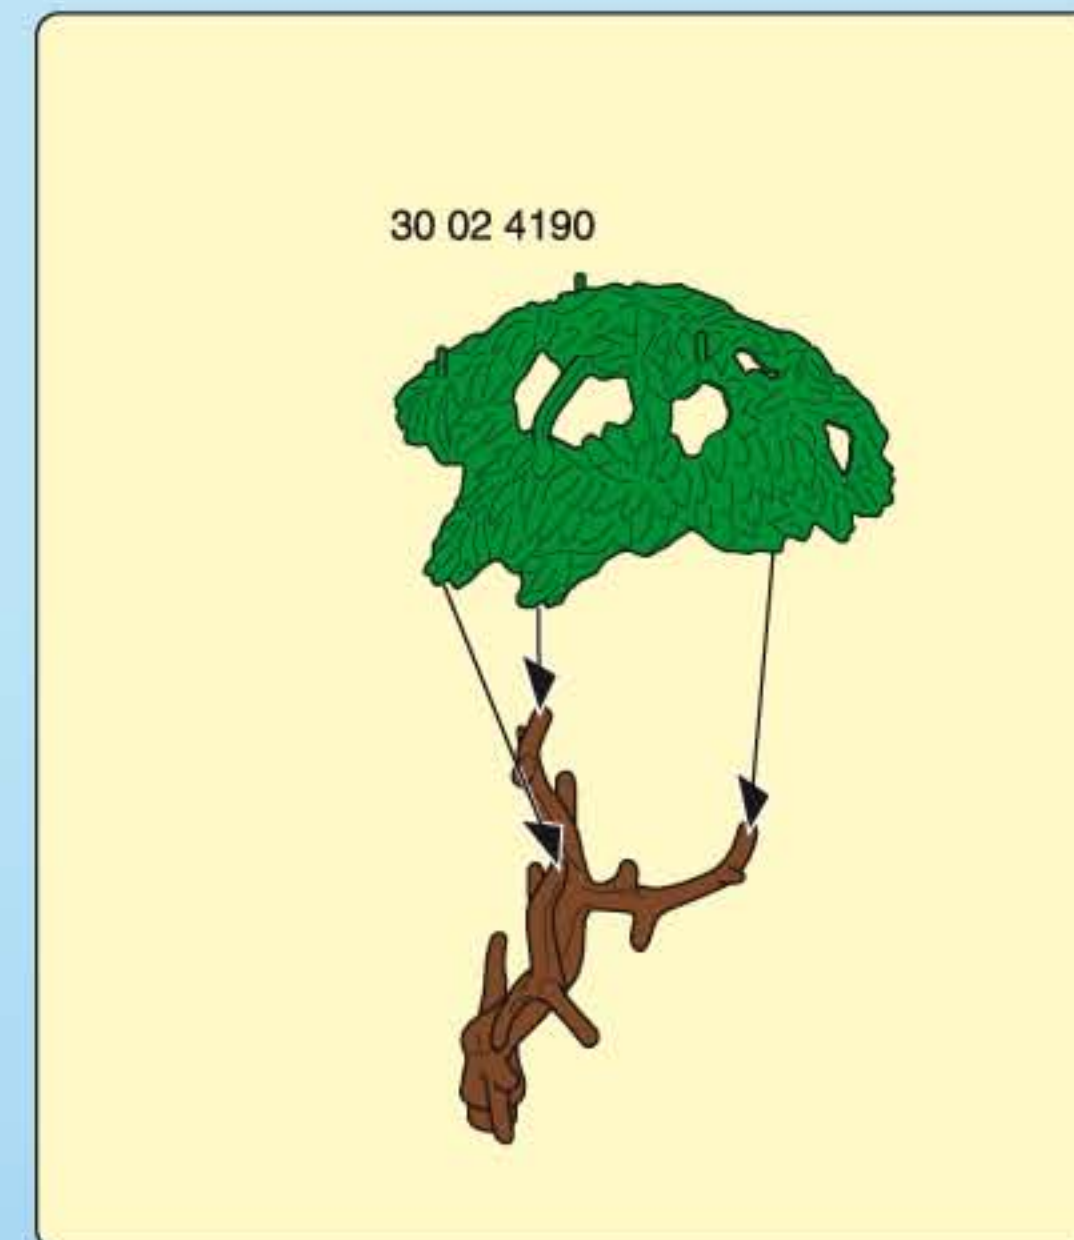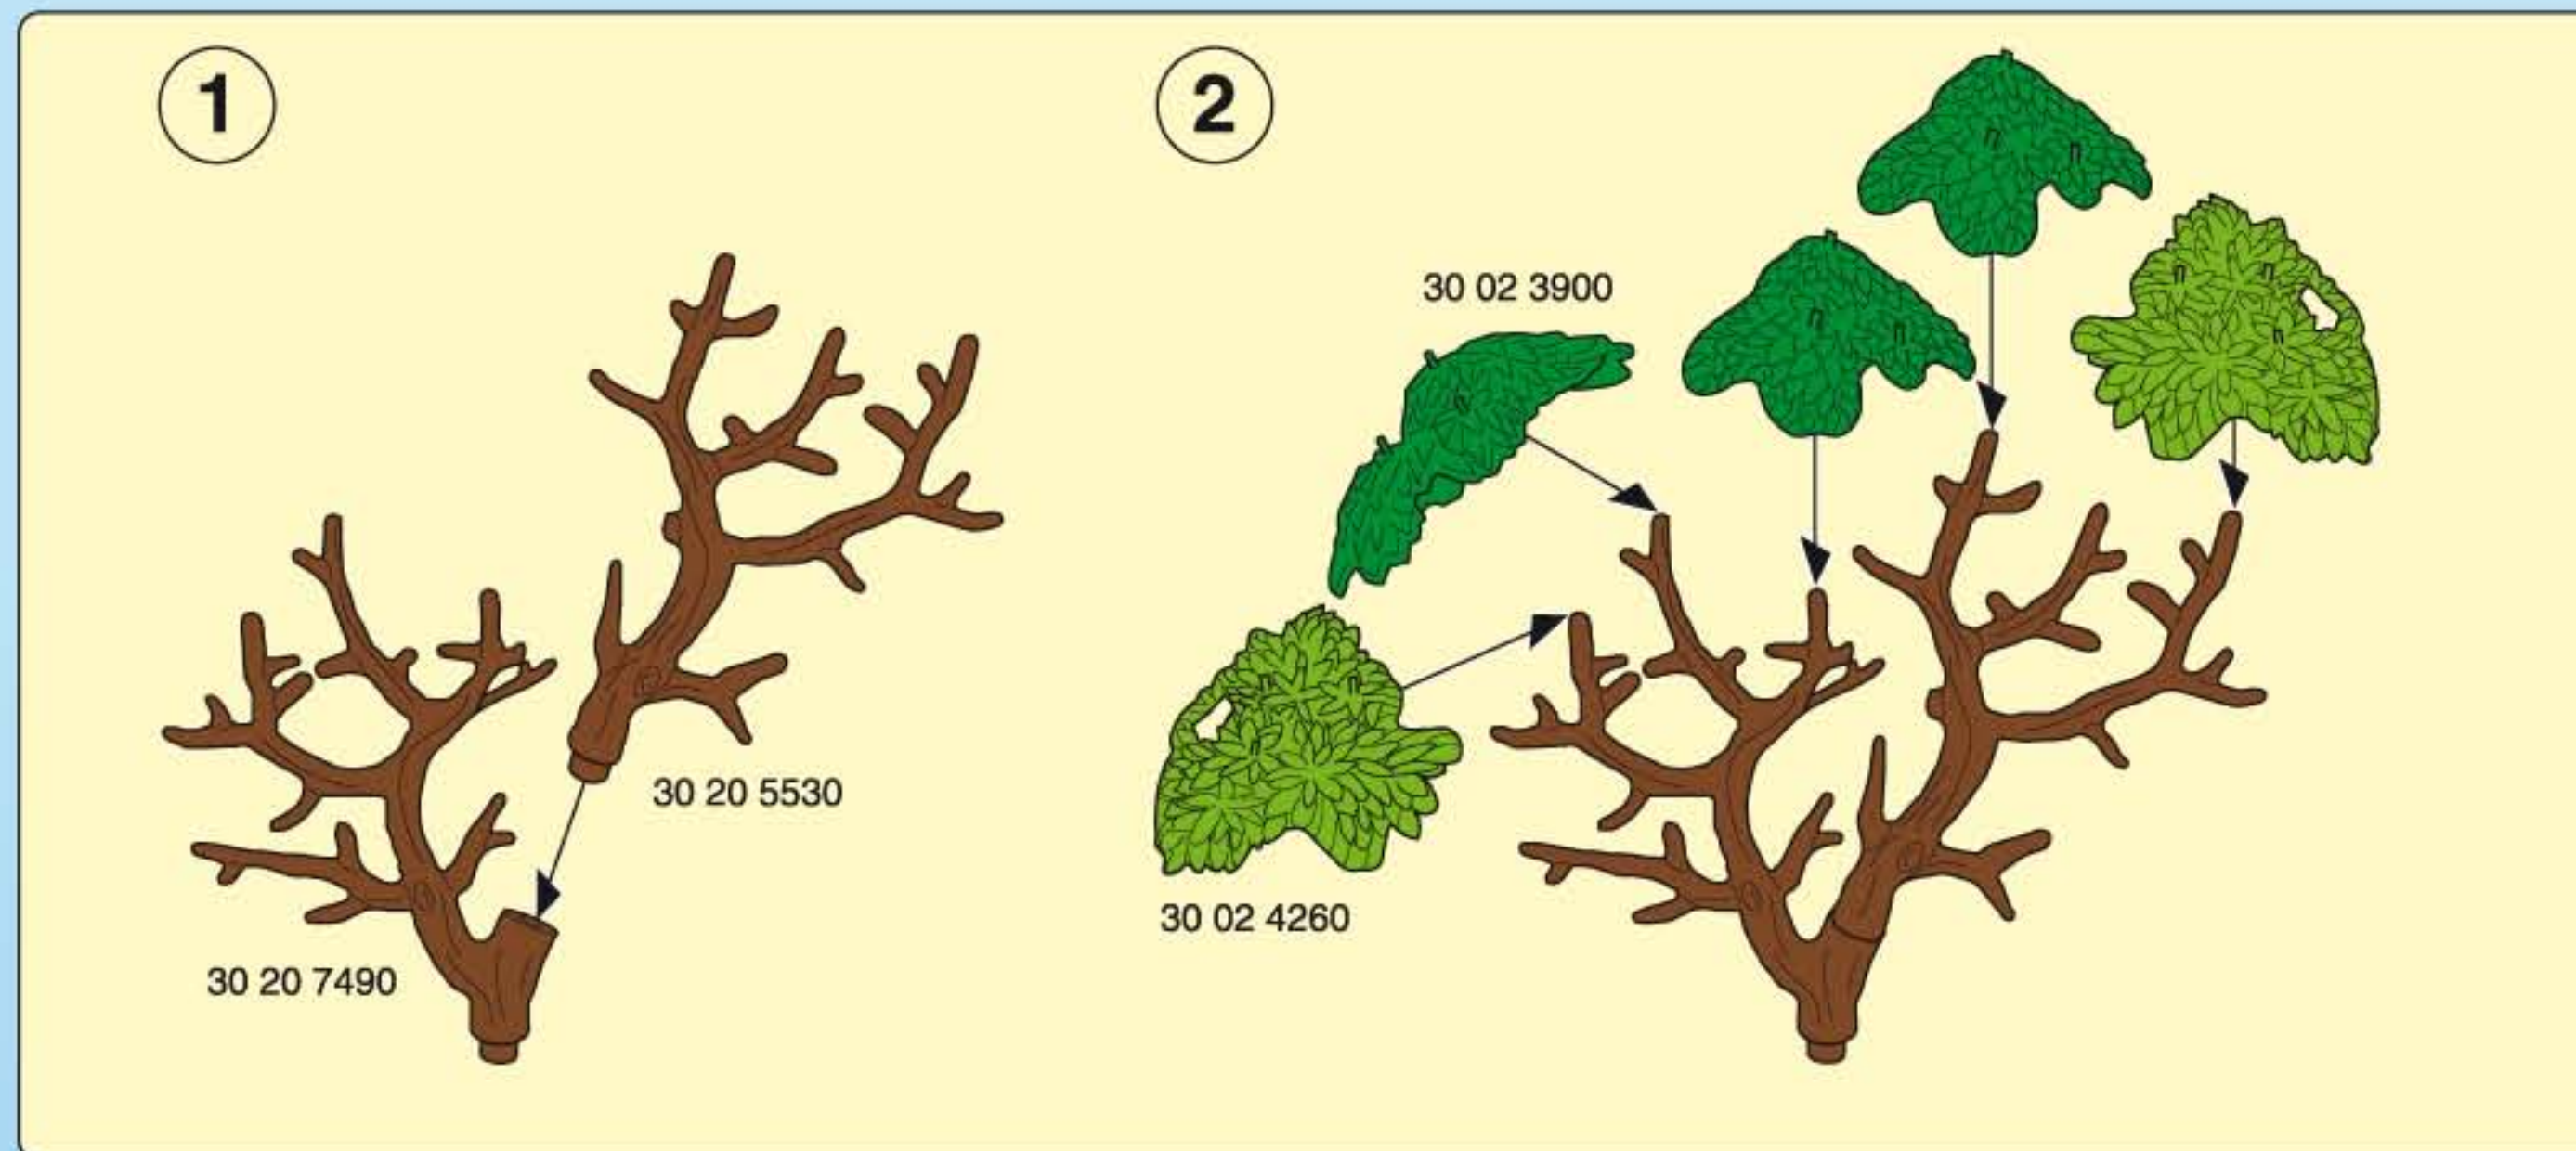    

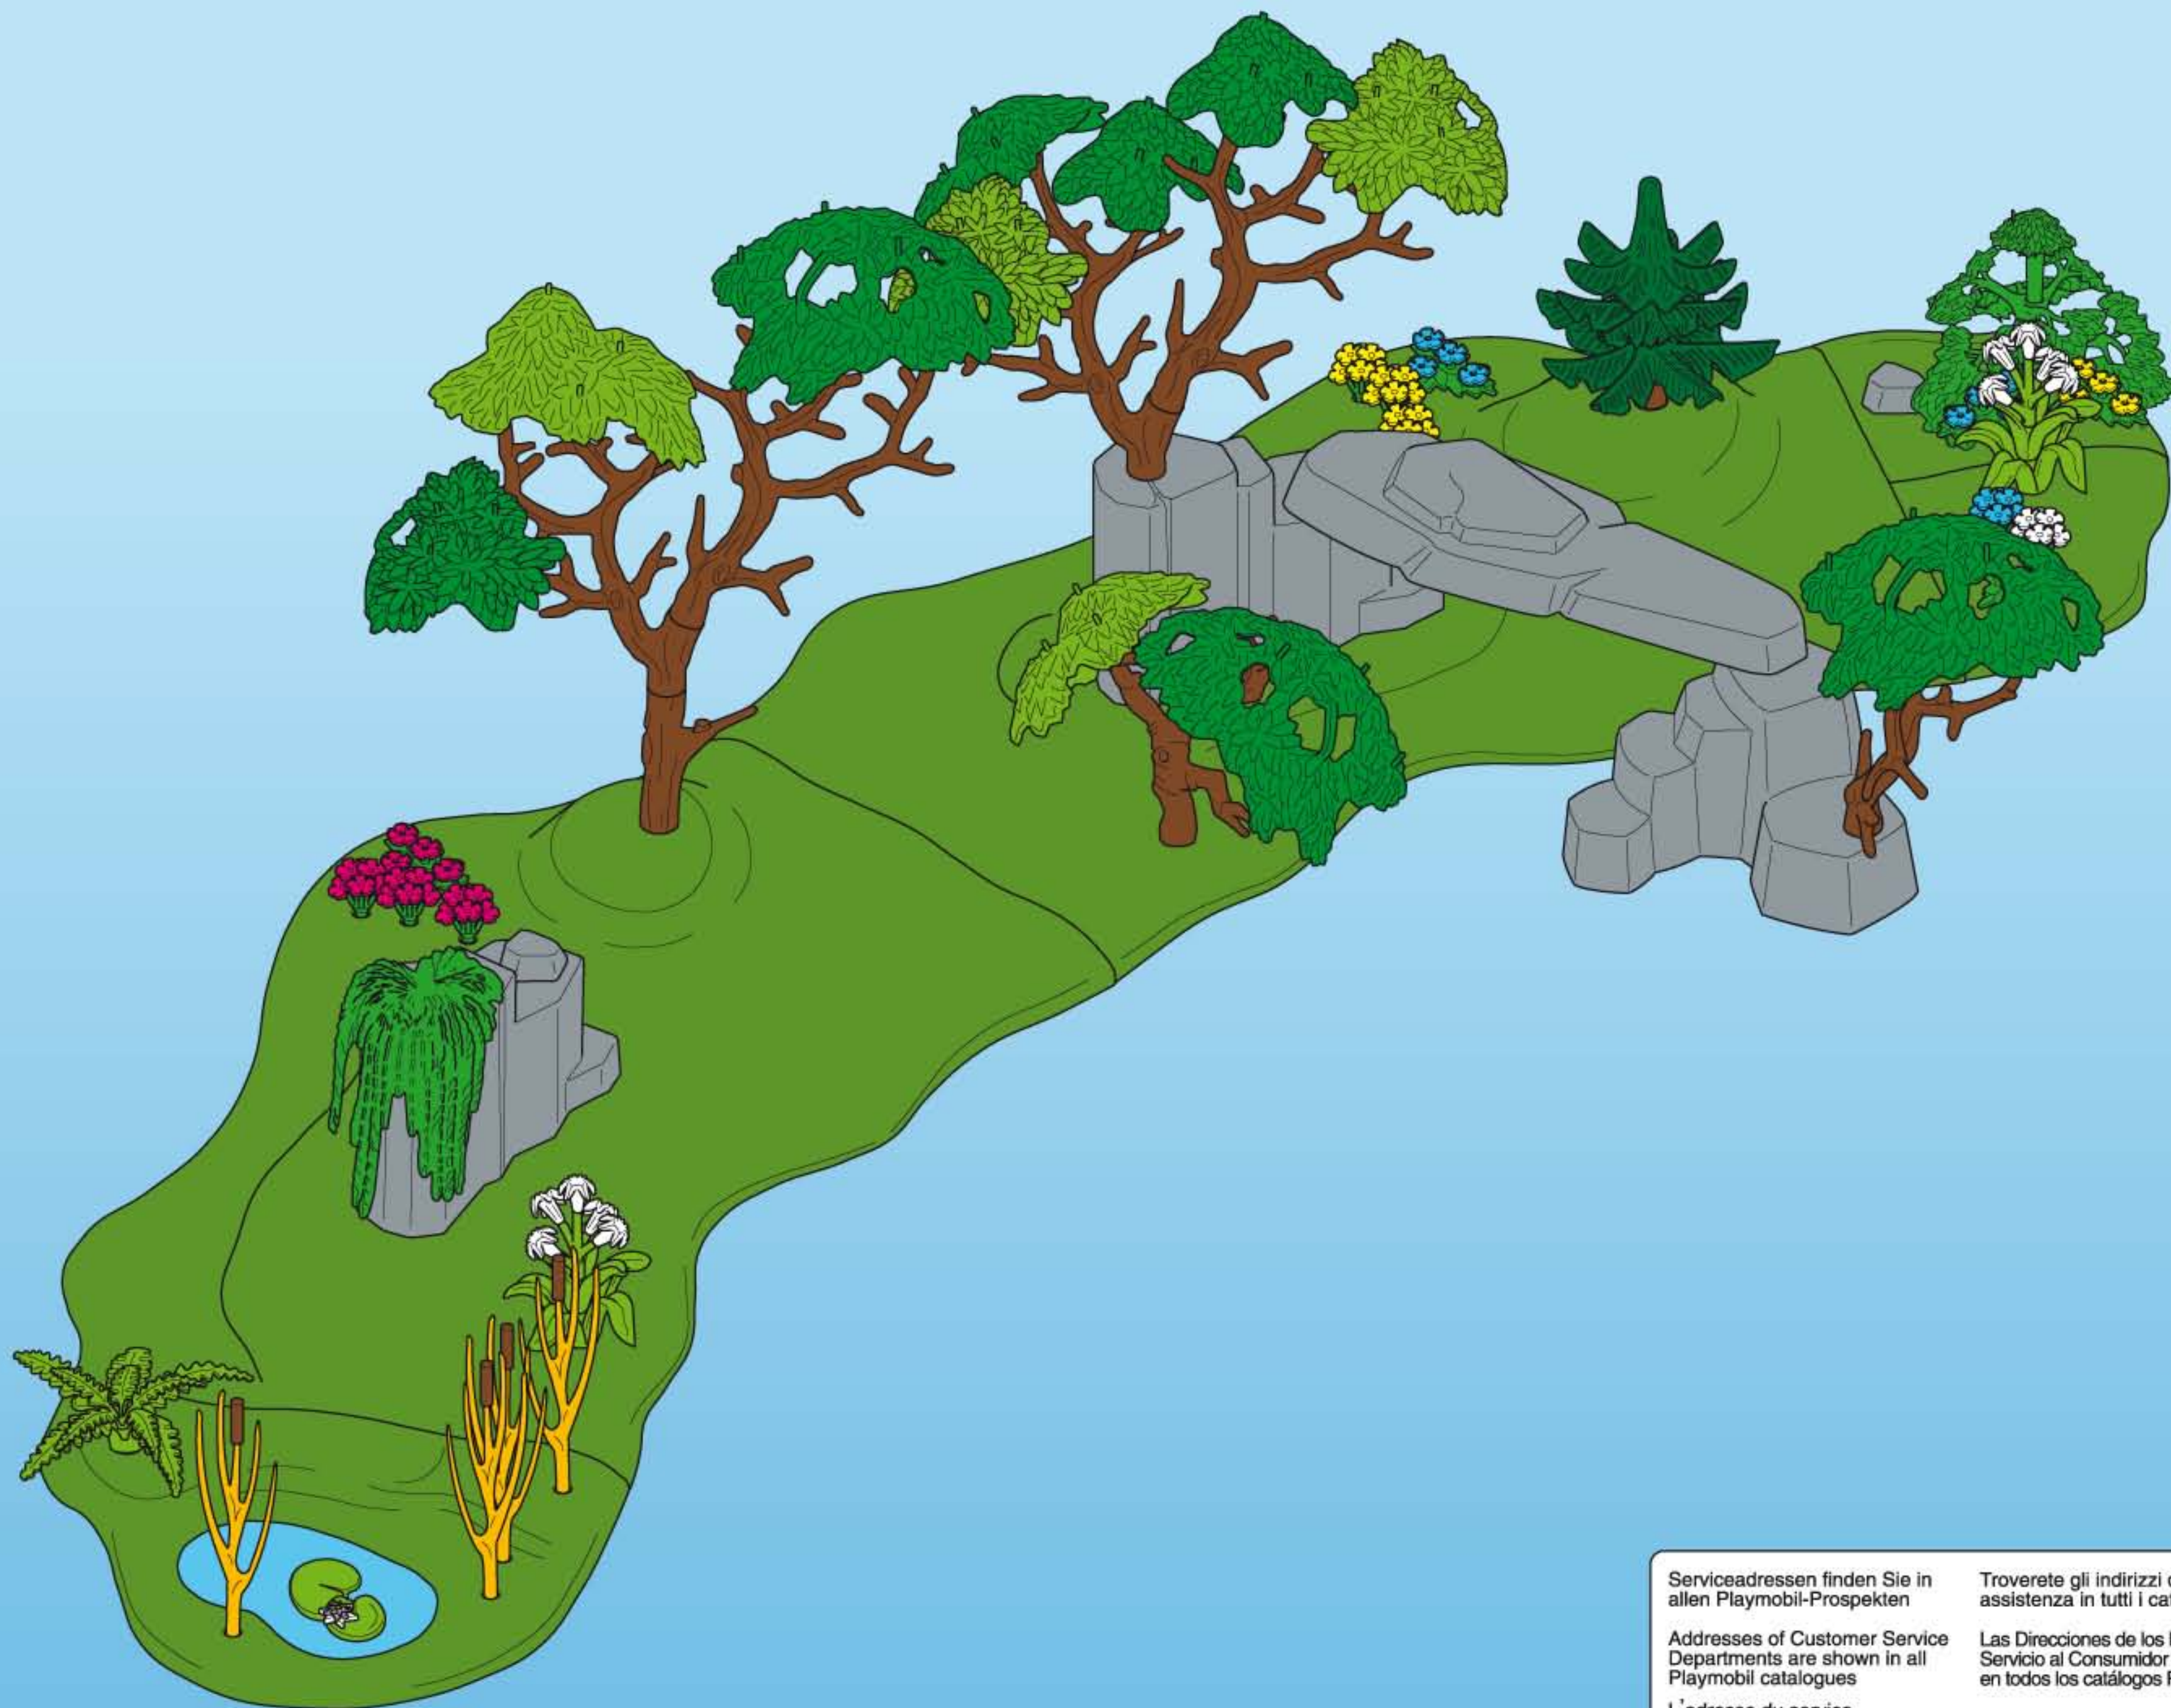 

Serviceadressen finden Sie in
allen Playmobil-Prospekten

Addresses of Customer Service
Departments are shown in all
Playmobil catalogues

L'adresse du service
consommateurs est indiquée
dans tous les catalogues
Playmobil

Troverete gli indirizzi dei centri di
assistenza in tutti i cataloghi Playmobil

Las Direcciones de los Departamentos de
Servicio al Consumidor se encuentran
en todos los catálogos Playmobil

Playmobil

pronounce: play-mö-beel